



Acer Aspire 3410 Screen Replacement

Written By: contact@kbl.netlib.re



 **TOOLS:**


- [Phillips #0 Screwdriver](#) (1)
 - [Flathead Screwdriver](#) (1)
-

Step 1 — Unscrewing bottom lid




- Remove the battery
- Turn the laptop so that the lid touches the table and unscrew the screws. There are 14 long ones and 2 short ones.

Step 2 — Unscrew Upper Lid

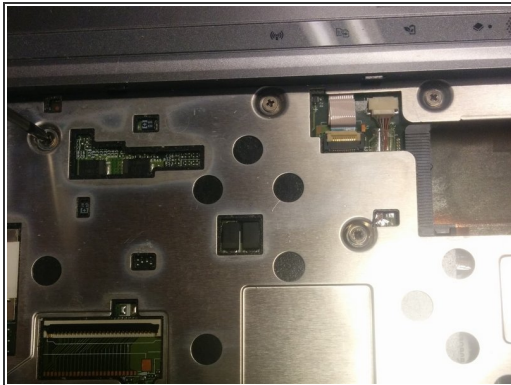

- Pop up the keyboard with a flat screw driver. Pay attention to the connector between the keyboard and the mother board.
- Disconnect the keyboard from the motherboard by lifting the black part of the FPC connector.
- Unscrew 8 screws.

Step 3 — Disconnect Upper Lid

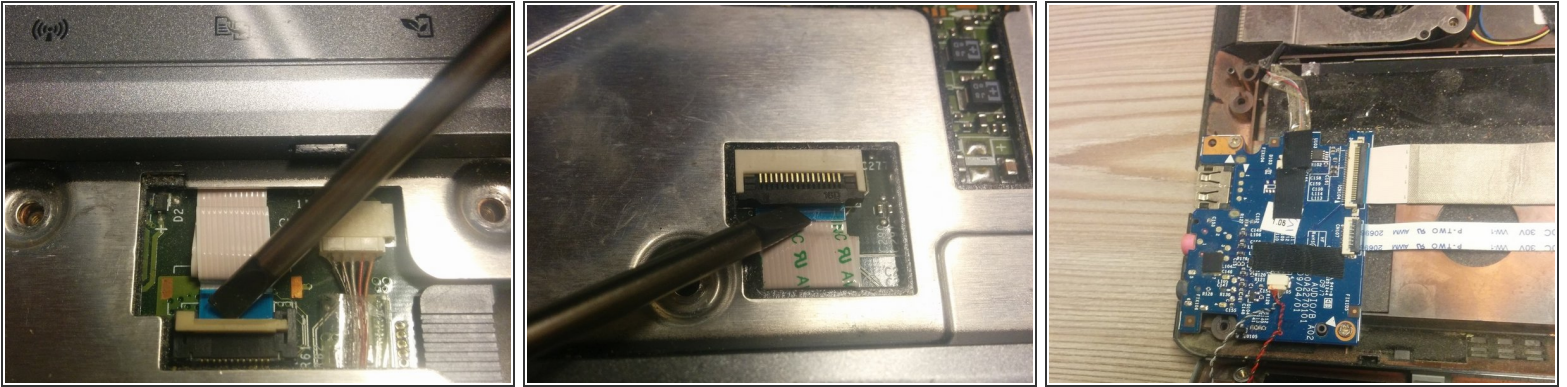


- Disconnect the two flat cables with the FPC connectors as shown in the picture.
- Detach the lid and disconnect the sound card reader (red/black cable pair).

Step 4 — Unscrew Screen Lid



- Unscrew the four screws in the screen lid.
- Slide out the 4 lockers on the side of the screen. Be careful not to have the screen touch the motherboard as it might scratch the surface of the screen.

Step 5

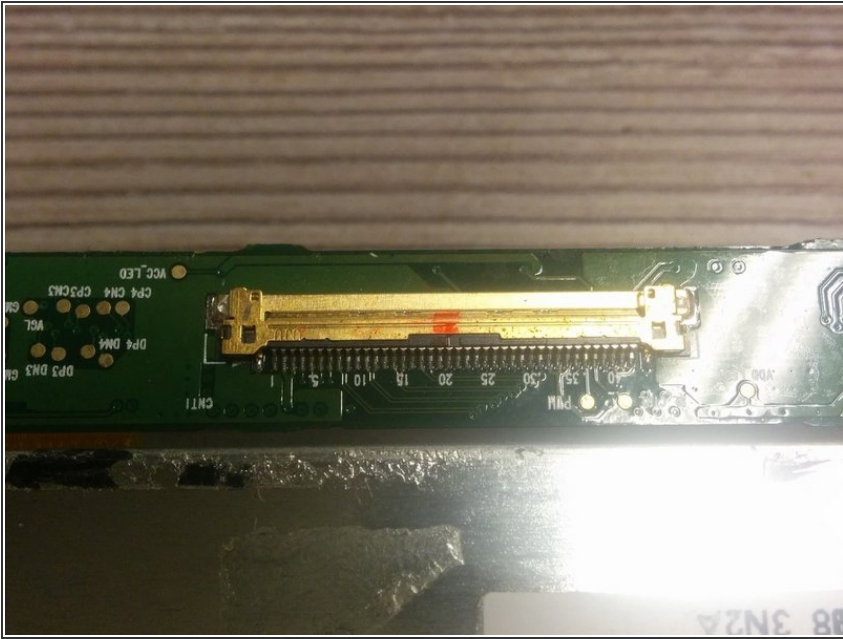

- Disconnect the screen from the motherboard.
- Connect the new screen and make sure to tape the cable to the screen (the connector should have a tape, if not, add one).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-03-10 10:12:20 PM.