



# PSP Go Bottom Plate Replacement

Written By: Miroslav Djuric



## INTRODUCTION

Use this guide to remove the PSP Go's bottom plate!



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [Sony PSP Go Bottom Plate](#) (1)

## Step 1 — Back Cover



- Unscrew the four Phillips screws on the back of the PSP Go.
- Rotate the PSP so you can see the top of the device.
- Unscrew the two Phillips screws next to the volume buttons.

## Step 2




- Use a plastic opening tool around the perimeter of the back cover to loosen it on all sides.
  - Open the back cover by gently lifting the right side, and rotating it to the left side (as if you were opening a book).
- ⚠** Be careful not to rotate the back cover from the bottom, as you will break the plastic screw holes on top of the device.

## Step 3 — Top Cover



- Pull the top cover upwards gently from its housing.

## Step 4 — Bottom Plate

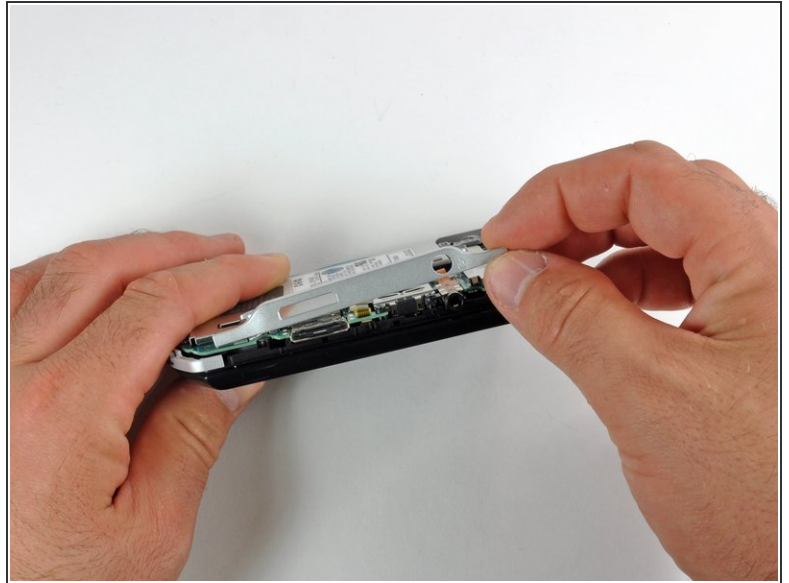

- Remove the two Phillips screws holding the bottom plate.
- Gently lift the bottom plate away from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 05:38:06 PM.