



PSP Go Analog Joystick Replacement

Written By: Miroslav Djuric



INTRODUCTION

Use this guide to put a fresh analog joystick into the PSP Go!



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Sony PSP Go Analog Joystick](#) (1)
-

Step 1 — Back Cover



- Unscrew the four Phillips screws on the back of the PSP Go.
- Rotate the PSP so you can see the top of the device.
- Unscrew the two Phillips screws next to the volume buttons.

Step 2



 
- Use a plastic opening tool around the perimeter of the back cover to loosen it on all sides.
 - Open the back cover by gently lifting the right side, and rotating it to the left side (as if you were opening a book).
- !** Be careful not to rotate the back cover from the bottom, as you will break the plastic screw holes on top of the device.

Step 3 — Top Cover



- Pull the top cover upwards gently from its housing.

Step 4 — Bottom Plate

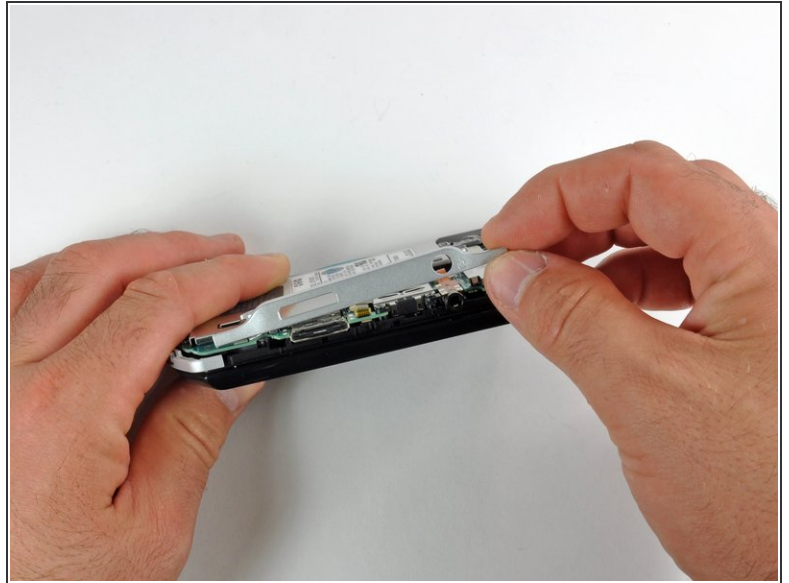


- Remove the two Phillips screws holding the bottom plate.
- Gently lift the bottom plate away from the device.

Step 5 — Analog Joystick



- Use a #00 Phillips screwdriver to remove both screws holding the analog joystick in place.

 Step 6

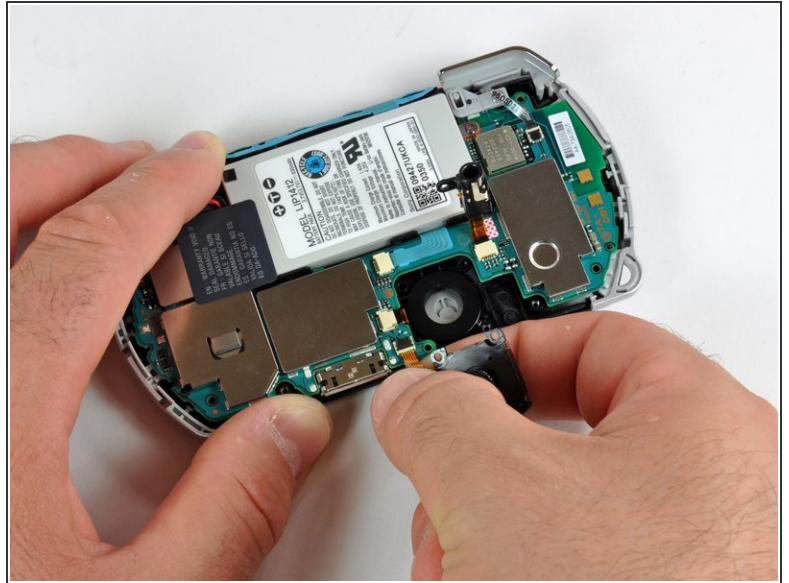

- Use a plastic opening tool to gently flip up the analog joystick's cable connector.
- Use your fingers or tweezers to gently pull out the analog joystick cable from its connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 04:02:40 AM.