



# Sony Vaio PCG-41216L Disk Drive Replacement

How to replace the disk drive in a Sony Vaio PCG-41216L.

Written By: Aaron B



---

## INTRODUCTION

If the laptop is indicating that there may be issues with the disc drive, is unable to operate the disk drive, or otherwise read an inserted disc, use this guide in order to replace the disk drive.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Disk Drive



- Flip the laptop over to begin the process.

⚠ Make sure the laptop is turned off and unplugged from the power cable.

## Step 2



- Remove the two 7mm Phillips #1 screws which hold the disk drive in place.

## Step 3



- Carefully remove the disk drive by gripping the disk drive by the edges and pulling it out of the computer. Insert the replacement unit in the same orientation and reassemble the unit.

To reassemble your device, follow these instructions in reverse order.