



HP 7 PLUS 1301 Volume / Power Button Replacement

The volume and/or power button is not working. Removing the back cover might be necessary to fix both buttons.

Written By: Adanna Ilori




INTRODUCTION

If the device volume and/ or power buttons are unresponsive then it may be necessary to replace them. The most challenging step to fix both buttons is removing the back cover. The tools listed (or similar) are necessary for both buttons to function properly.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-


Step 1 — Volume / Power Button

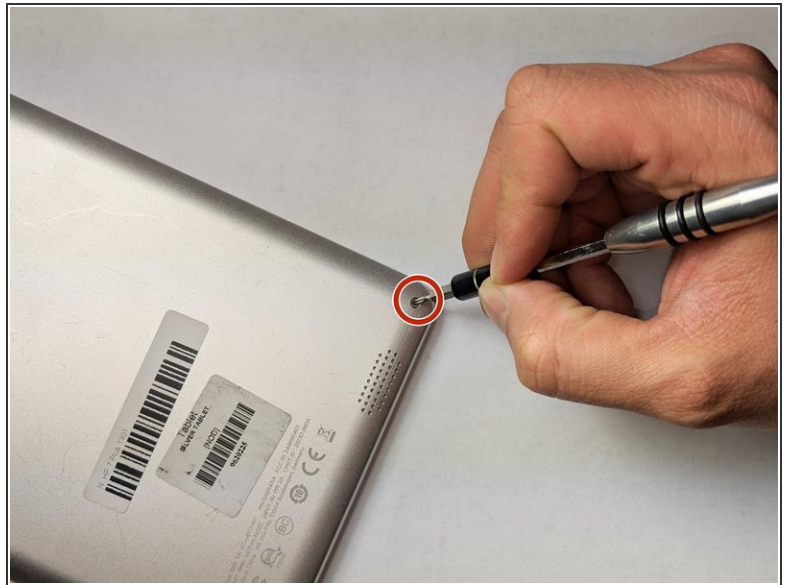

⚠ Make sure the device is off and not plugged in before starting.

- Use the T5 Torx screwdriver and remove the T5x3mm screws on all four corners of the device.

Step 2

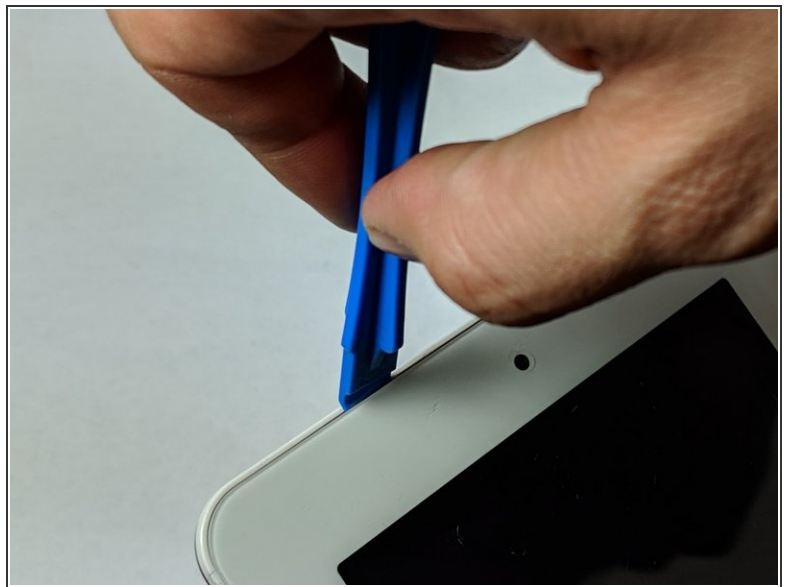


- Using the plastic opening tool, push in between the front, then slide it around.
- Slide the plastic opening tool all the way around the tablet to separate the back cover.

Be careful when trying to remove the back as the screen can be damaged with excessive force.




Step 3

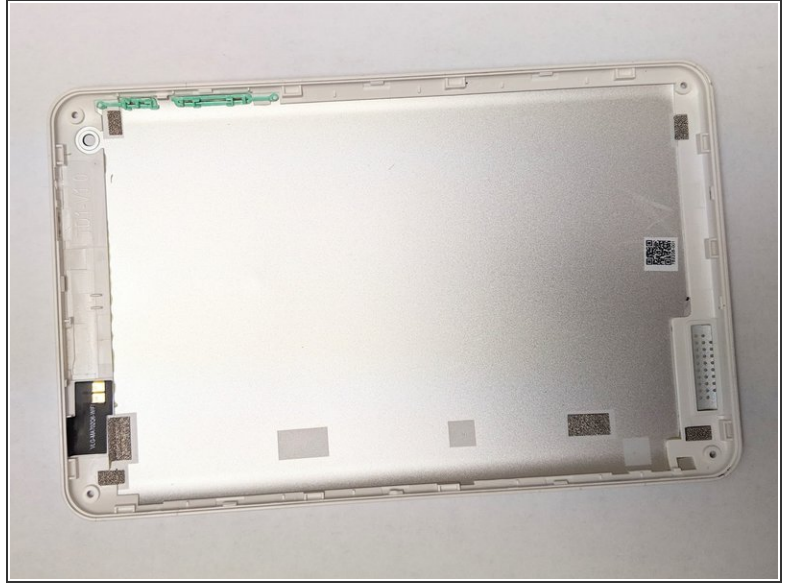

- Continue sliding the plastic opening tool around the tablet until the cover fully separates from the device.
- Remove the back cover.

Step 4

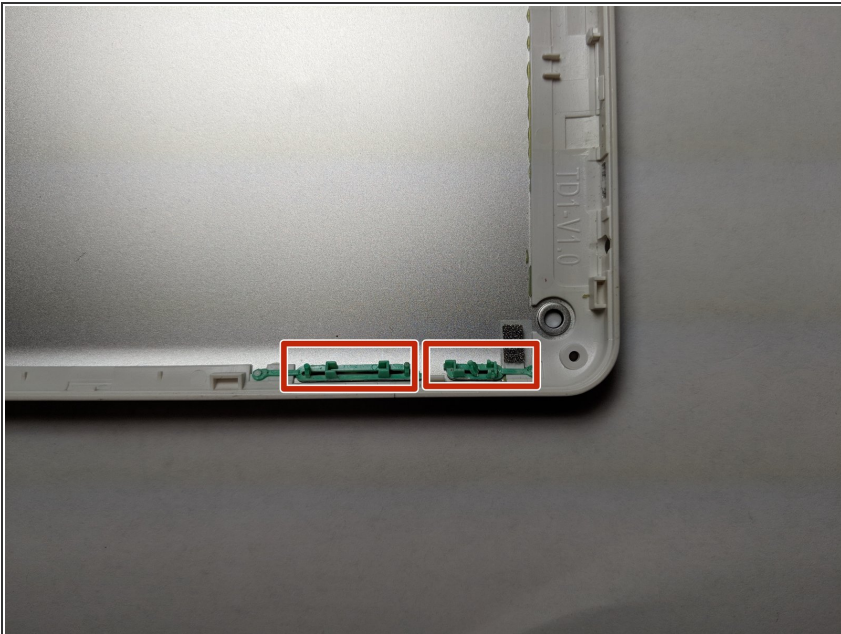

- The power and volume buttons are on the side of the device. Locate these buttons to begin the replacement process.

Step 5



- Gently push out the power and volume buttons with tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-04-14 11:53:26 PM.