









# How to Factory Reset Amazon Fire HD 8

How to reset Amazon Fire HD 8

Written By: John

 
## Settings

-  **Internet**  
Wi-Fi, Airplane Mode, Data Usage
-  **Connected Devices**  
Bluetooth, USB, Printing
-  **Apps & Notifications**  
Manage, Permissions, Default Apps
-  **Battery**  
28%
-  **Alexa**  
Hands-Free Mode, Screen lock access, Wake word, Communic...
-  **Display**

## INTRODUCTION


Follow this guide to reset your Amazon Fire HD8 to factory settings. **Doing so will erase all user data and user apps.**

## Step 1 — Open Settings

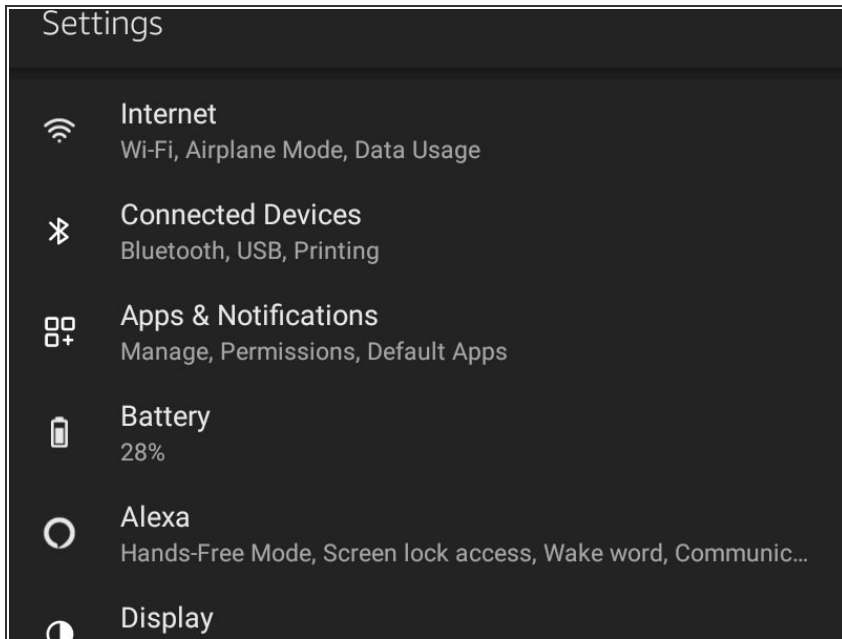


- Open the "Settings" app


## Step 2 — Tap "Device Options"

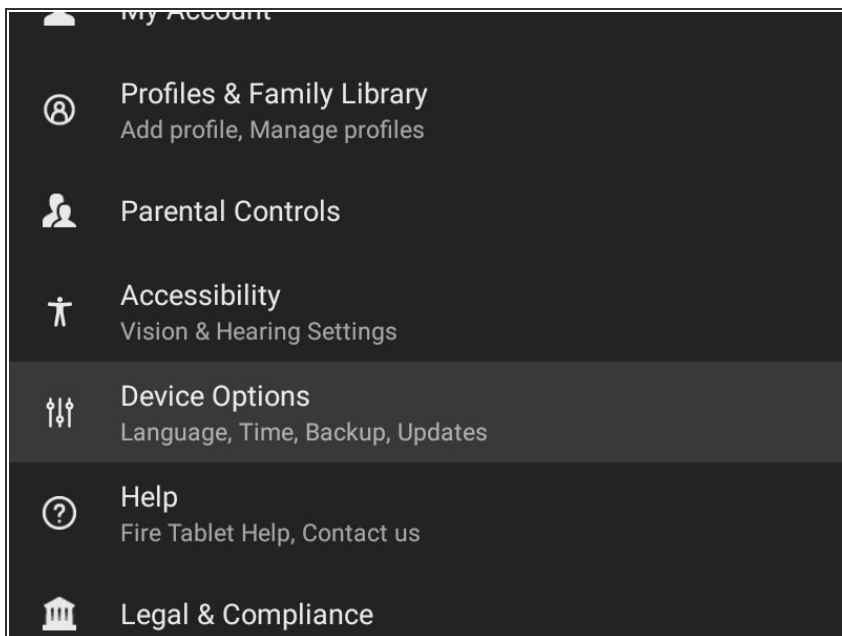 

- Tap "Device Options" in the menu

## Step 3 — Factory Reset

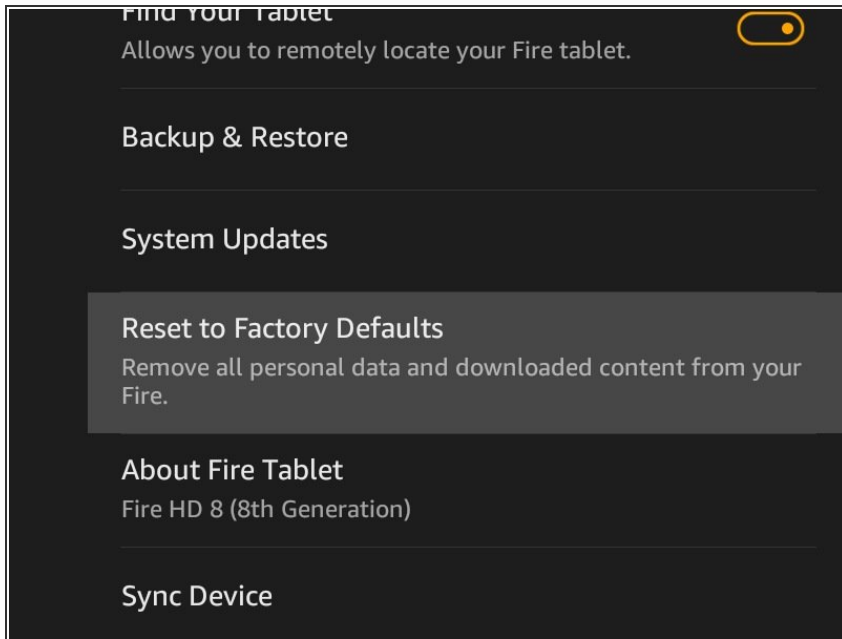 

- Tap "Reset to Factory Defaults"
-  Factory Reset will erase all settings and data to their original state.
- Follow the on-screen instructions to complete the reset.

Follow the on-screen instructions to finish the factory reset.

This document was last generated on 2019-07-30 12:20:23 PM.