



# Asus Zenbook UX303L RAM Replacement

This guide will cover the steps for replacing the RAM in the Asus Zenbook UX303L.

Written By: Evan Parker



---

## INTRODUCTION

Replacing a computer's RAM is a necessary process for both upgrading the amount of available memory a computer has and for replacing any malfunctioning sticks of RAM. This guide will step you through the replacement process for replacing the DDR3L stick of RAM found within the ASUS Zenbook UX303L.

---

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — RAM



- ✦ Prior to installing RAM, it's good practice to ground yourself to avoid static discharge from damaging the internal components of the computer.
- ✦ Avoid wearing static prone clothing or standing on carpet during the RAM replacement.

## Step 2



- Unscrew the eight 3 mm long screws on the bottom of the laptop along the perimeter using a T5 Torx screwdriver.
- Unscrew the one 8 mm long screw at the bottom of the laptop panel using a T5 Torx screwdriver.
- Once all screws have been removed, carefully lift the bottom panel to reveal the RAM.

This document was generated on 2020-11-28 07:21:27 AM (MST).

## Step 3



- Carefully pull apart the two clasps circled in red so that the RAM stick pops up.
- Remove the stick of RAM from the SO-DIMM slot by gripping the edges of the RAM.

To reassemble your device, follow these instructions in reverse order.