



Samsung ATIV Book 7 NP740U3E-K01UB

Backplate Replacement

Replacement guide for the backplate in the Samsung ATIV Book 7 NP740U3E-K01UB.

Written By: Matthew Kibaru



 
INTRODUCTION

This is a guide create to replace the backplate of a 13-inch Samsung laptop. This guide is very important because it is the first prerequisite to replacing a majority of things within the laptop.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Backplate

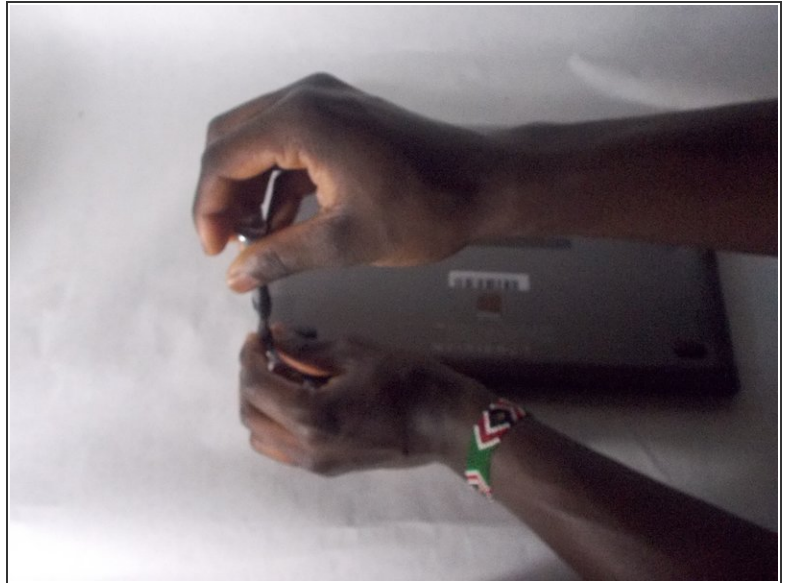

- Remove the ten 5 mm screws that hold the backplate using the Phillips #000 screwdriver.

 Step 2

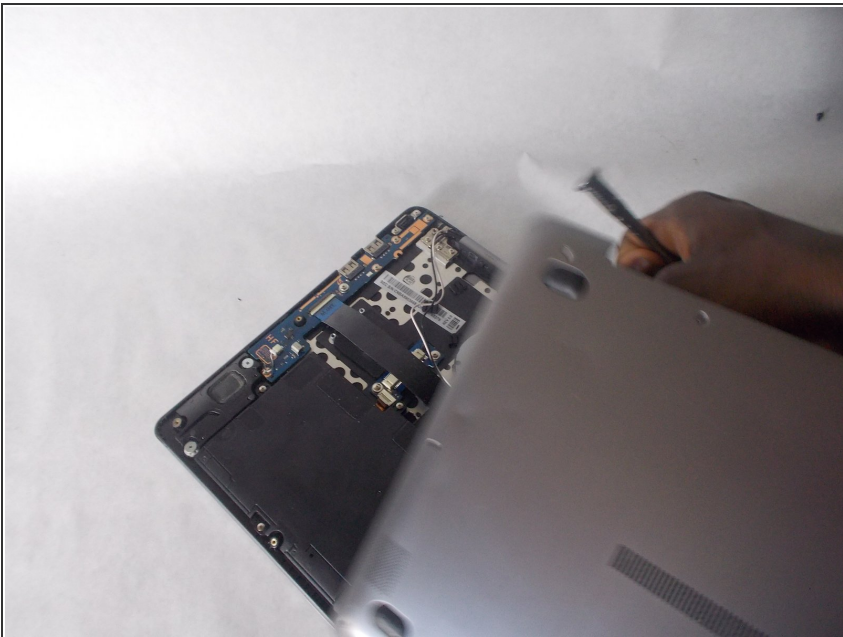

- Remove the backplate.

To reassemble your device, follow these instructions in reverse order.