



Sony Vaio PCG-81114L Hard Drive Replacement

Follow this guide to upgrade or replace a Sony Vaio PCG-81114L hard drive.

Written By: Haylie Hotte



INTRODUCTION

This guide will show a simple way to replace the hard drive on this device.

In this guide, it is incredibly important to use the anti-static wrist band as it will protect the hard drive from receiving any static.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Anti-Static Wrist Strap](#) (1)
-

Step 1 — Hard Drive



- Remove two 9mm Phillips #1 screws.

Step 2

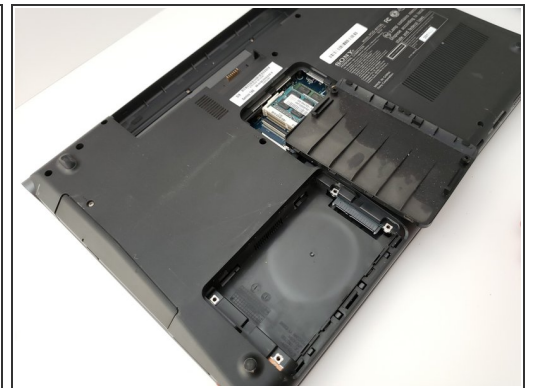

- Remove the panel.
- Gently remove the hard drive.
- Remove screws securing caddy to hard drive.

To reassemble your device, follow these instructions in reverse order.