



# Asus UL80VT Keyboard Replacement

This guide will explain how to remove the keyboard in your Asus UL80VT.

Written By: James DellaMorte



---

## INTRODUCTION

 
 
The keyboard is the appliance used to input your laptop with data, text, and commands. If input is unresponsive. The keyboard will need to be replaced. This guide will walk you through the process.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Keyboard

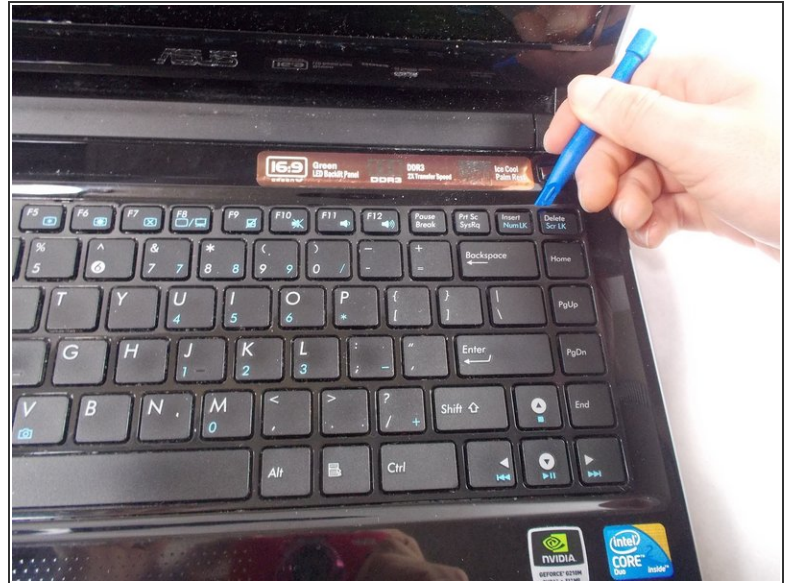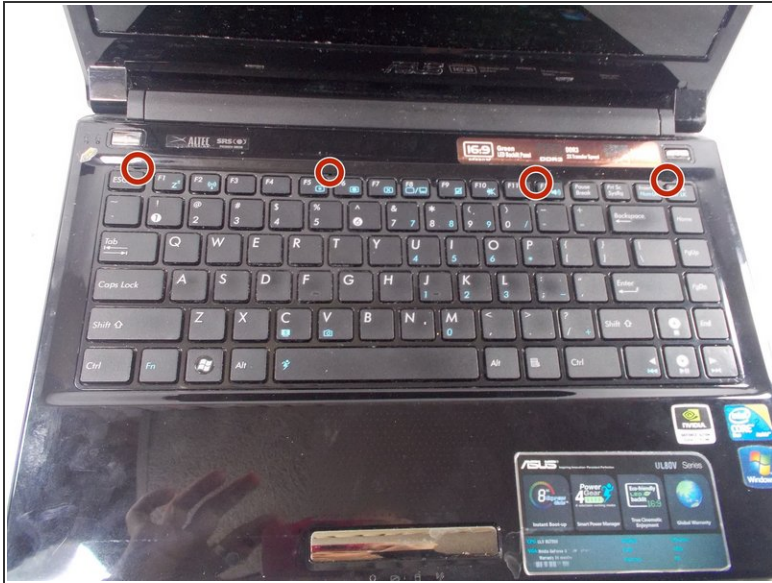

- Open laptop so the keyboard is accessible.
- Insert a plastic prying tool and push and then pull to release the keyboard from the device.

## Step 2



- Lift keyboard and remove ZIF connector cables.
- Remove the keyboard from the device.

To reassemble your device, follow these instructions in reverse order.