



Sony DVP-SR200P Top Cover Replacement

Follow this guide in order to remove the top cover.

Written By: Brian Hua



INTRODUCTION

This guide will teach you how to remove the top cover of the Sony DVP-SR200P and access the inside components.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top Cover



- Remove the five #1 Phillips screws (black, 3/16") attaching the cover to the DVD player.
 - One 3/16" screw on the right side of the DVD player.
 - One 3/16" screw on the left side of the DVD player (directly opposite of other screw).
 - Three 3/16" screws on the back of the DVD player.

Step 2



- Slide the cover away from the front of the DVD player until it is off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 05:32:09 PM.