



PSP 2000 Front Casing Replacement

Written By: pepe32290



INTRODUCTION

Paint job scratched? Going custom? Change out your faceplate assembly!



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Sony PSP 2000 Front Case](#) (1)
- [Sony PSP 2000/300x Trigger Button Brackets](#) (1)

Step 1 — Battery

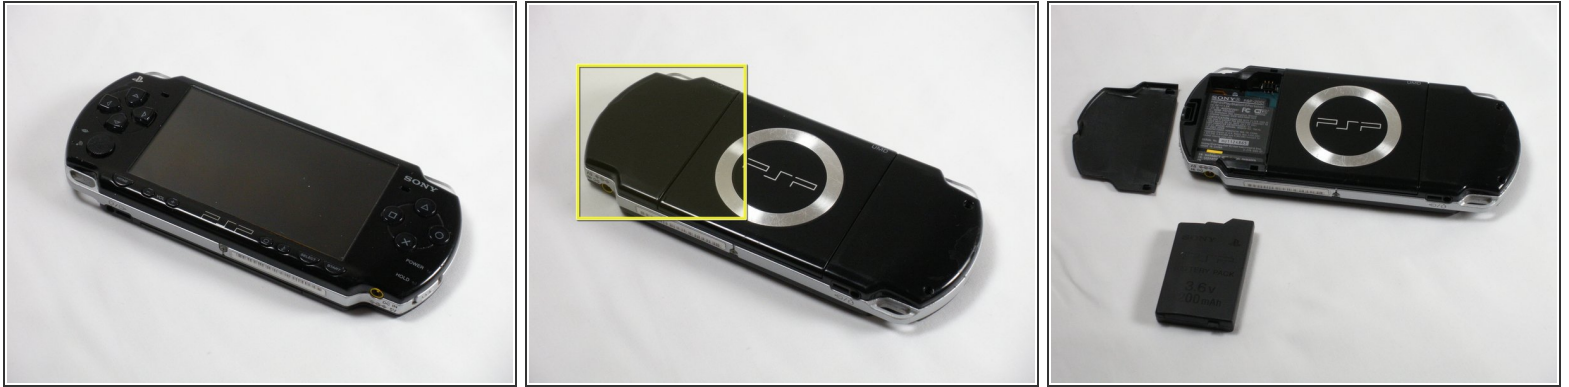

- Place PSP face down, so that the UMD Drive is facing upwards.
- Locate the battery door and open.
- Remove the battery from inside.

Step 2 — Front Casing



⚠ This step requires the removal of the warranty sticker. **Removing the sticker will void the warranty.** According to the FTC removing this will not void your warranty.

- Locate the sticker in the battery compartment labeled: *"En: Warranty Void if Seal Damaged."*
- Remove the sticker using the PSP Opening Tools.
- ⓘ Under the sticker is a 5mm Phillips screw needed in the next step.

Step 3



- Remove four 5 mm Phillips from the case.

ⓘ If the screws stick in the case, you can use a magnetized screwdriver to draw them out.

Step 4



- Remove the following screws from around the bezel:
 - Two 4 mm Phillips
 - One 5 mm Phillips
- ☑ The two shorter 4 mm screws are on the top of the PSP; the longer 5 mm screw is on the bottom.

Step 5



- Gently pry the front bezel away from the casing using a PSP opening tool.
- Start on the right hand side of the PSP bezel, and carefully work the tool around the side.
- ⓘ If you want to clean the control buttons or D-pad, you can easily pop them out once the faceplate is off and wipe them clean.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 08:19:16 AM.