



# PSP 2000 Front Casing Replacement

Written By: pepe32290



## INTRODUCTION

Paint job scratched? Going custom? Change out your faceplate assembly!



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [Sony PSP 2000 Front Case](#) (1)
- [Sony PSP 2000/300x Trigger Button Brackets](#) (1)

## Step 1 — Battery

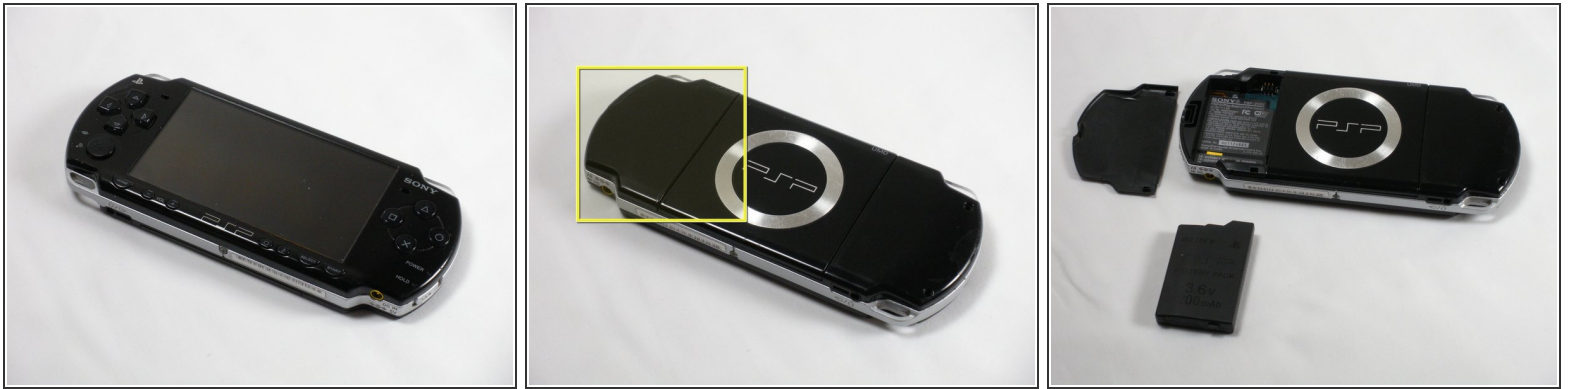

- Place PSP face down, so that the UMD Drive is facing upwards.
- Locate the battery door and open.
- Remove the battery from inside.

## Step 2 — Front Casing




**⚠** This step requires the removal of the warranty sticker. **Removing the sticker will void the warranty.** According to the FTC removing this will not void your warranty.

- Locate the sticker in the battery compartment labeled: *"En: Warranty Void if Seal Damaged."*
- Remove the sticker using the PSP Opening Tools.
- ⓘ Under the sticker is a 5mm Phillips screw needed in the next step.



## Step 3

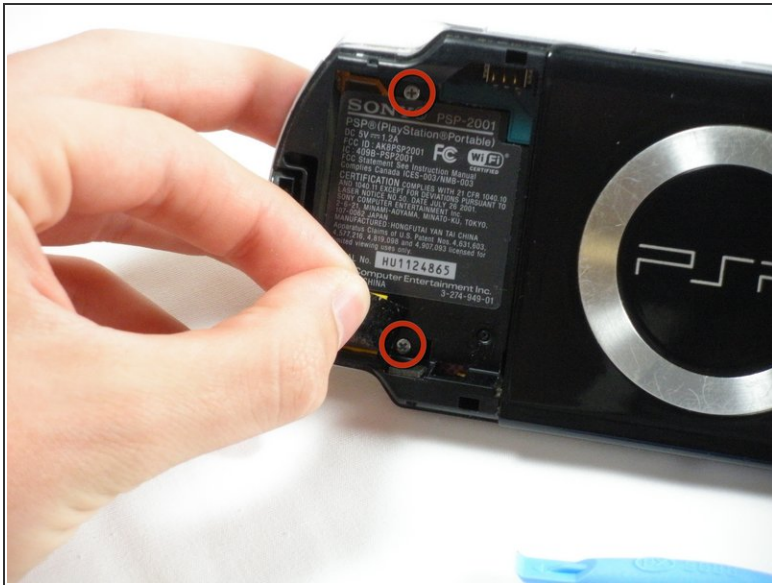


- Remove four 5 mm Phillips from the case.
- ⓘ If the screws stick in the case, you can use a magnetized screwdriver to draw them out.

## Step 4



- Remove the following screws from around the bezel:
  - Two 4 mm Phillips
  - One 5 mm Phillips
- ☑ The two shorter 4 mm screws are on the top of the PSP; the longer 5 mm screw is on the bottom.

## Step 5

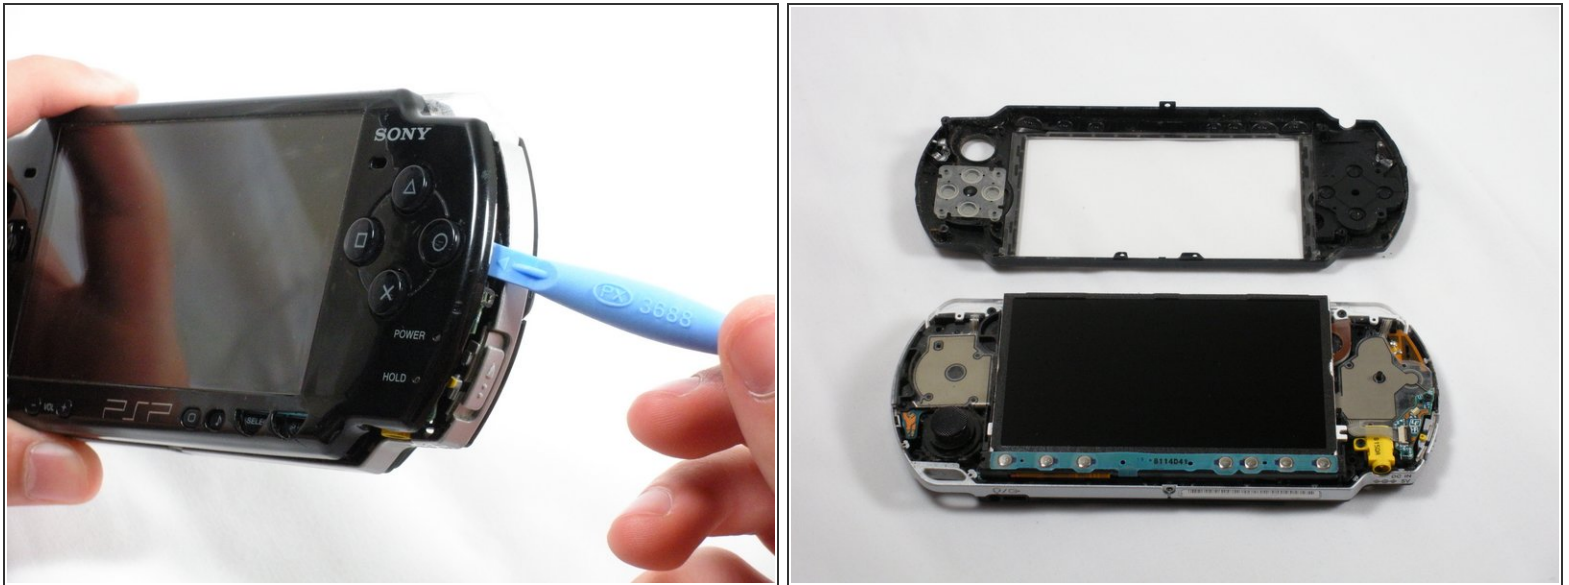

- Gently pry the front bezel away from the casing using a PSP opening tool.
  - Start on the right hand side of the PSP bezel, and carefully work the tool around the side.
- i** If you want to clean the control buttons or D-pad, you can easily pop them out once the faceplate is off and wipe them clean.

To reassemble your device, follow these instructions in reverse order.