



# Canon Powershot Pro1 Battery Replacement

Use this guide to replace the battery in the Canon Powershot Pro1 digital camera.

Written By: Seana Meegan



## INTRODUCTION

Use this guide to replace a dead or faulty battery. No difficult steps or tools are required for this process. The PowerShot Pro1 requires a lithium ion battery pack. It can use four kinds of lithium ion batteries: BP-511A, BP-511, BP-512, or BP-514.

## Step 1 — Battery



- Locate the battery compartment cover on the right hand side of the camera. The cover features the text: "CF/BATT.OPEN".

## Step 2



- There is an arrow beside the text. Using your hands, slide the cover in the direction of this arrow.

### Step 3



- Pull the cover toward you. After doing so you will see the battery sitting inside the compartment

### Step 4



- Press the battery lock. It is an orange button on the inside of the compartment.
- After pressing the battery lock, you will be able to remove the battery.  
**NOTE: This photo displays the battery compartment after the battery has been removed.**

To reassemble your device, follow these instructions in reverse order.