



Canon PowerShot A460 Battery Replacement

This guide will show the user how to remove the camera's batteries and memory card.

Written By: Stephanie Friend



INTRODUCTION

This guide will teach the user how to take the batteries and memory card out of the camera. This will prepare the camera for repair.

Step 1 — Battery



- Slide the switch on the battery cover labeled "CARD/BATT. OPEN." to the right.
- While still holding the switch, pull the cover down, allowing it to release and open.

Step 2



- Tilt the camera slightly to allow the batteries to fall out.

Step 3



- Press on and release the memory card to eject it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-23 04:53:32 AM.