




DigiLand DL8006 Internal Ribbon Replacement

This guide will assist the user to replace the internal ribbon that lays on top of the battery, accessible in the back end of the tablet.

Written By: Landon Choi

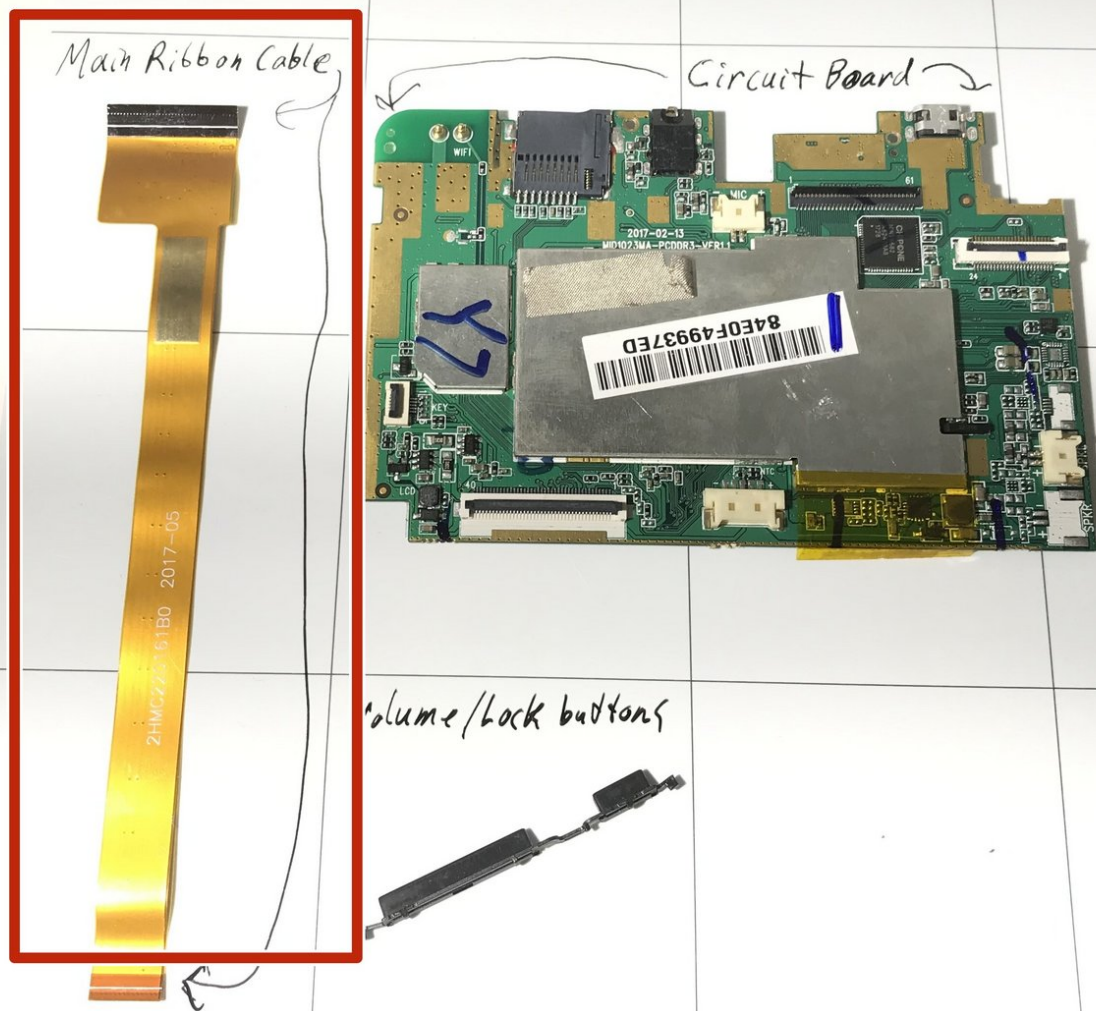

INTRODUCTION

This repair is for when the internal ribbon in their DigiLand DL8006 has worn down or broke and the screen is no longer working. This guide will assist the user with replacing the internal ribbon that lays on top of the battery, accessible at the back end of the tablet.



TOOLS:

- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:


- [digiland dl8006 ribbon cable](#) (1)

Step 1 — Internal Ribbon




- Flip the tablet to where its back is facing upward.
- Remove the back cover by prying the sides with a plastic opening tool.
- Lay the opened device with the circuit board exposed.

Step 2

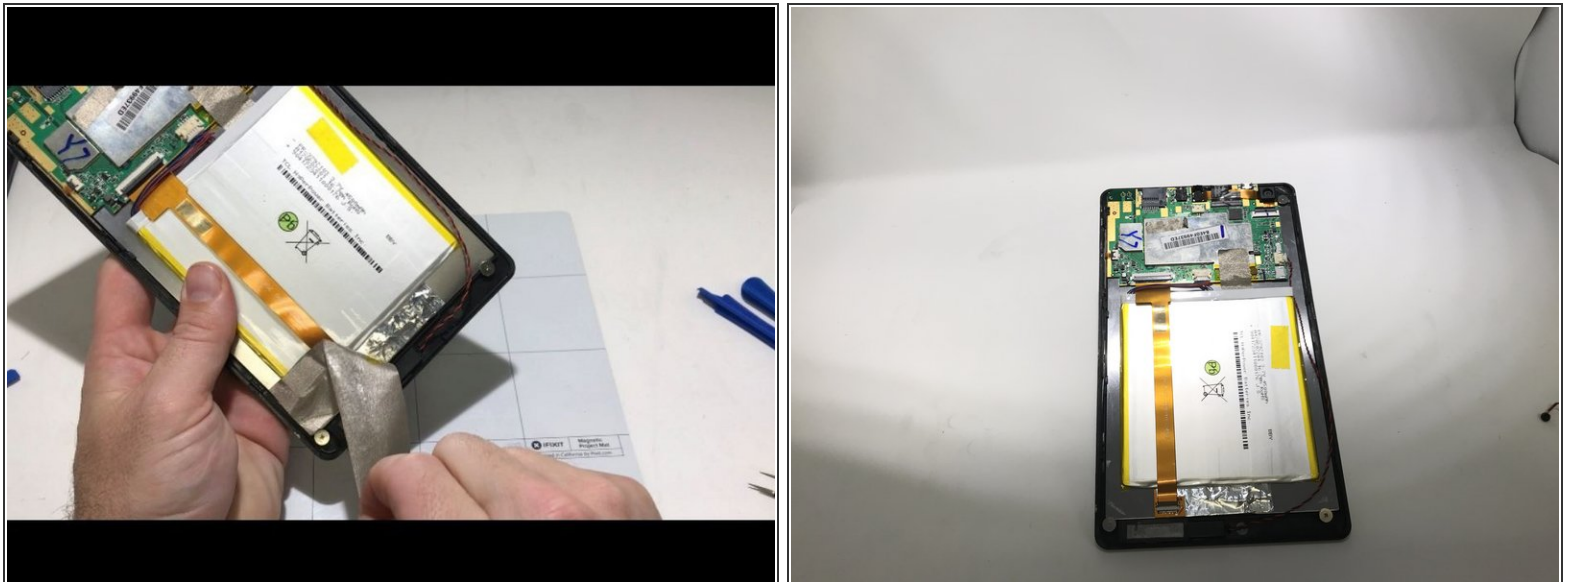

- Remove the silver/metallic tape covering the blue and red wires overlapping the upper and lower end of the ribbon cable.

Step 3

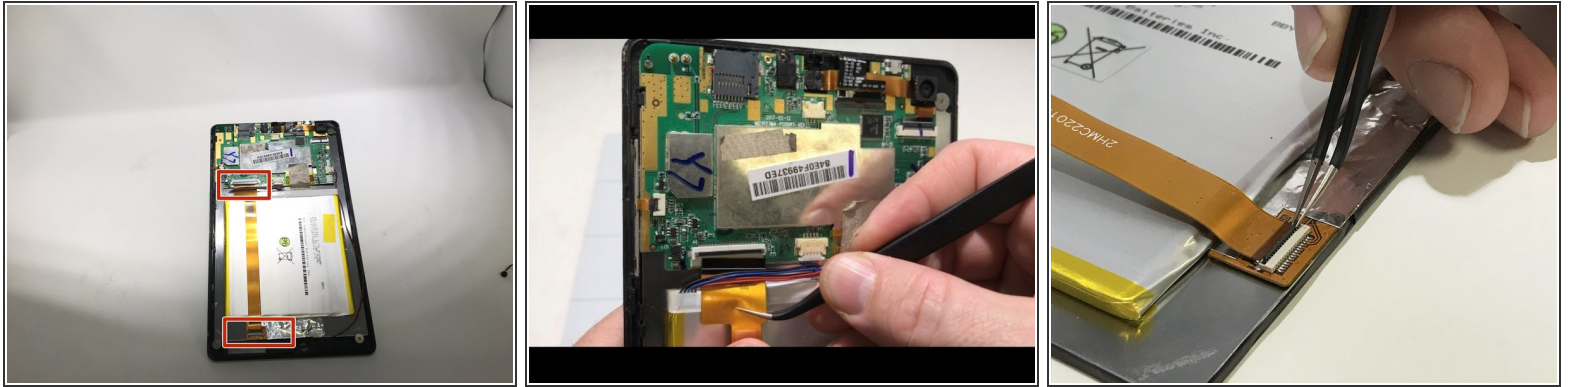

- Remove the ribbon cable by pulling the locking tab of the ZIF connector up and pulling the ribbon cable out with tweezers.

To reassemble your device, follow these instructions in reverse order.