



# Logitech MBJ58 Mouse Support Spring Replacement

This guide demonstrates how to replace a missing or broken scroll wheel support spring in the Logitech MBJ58 Mouse.

Written By: Conor Whatley



---

## INTRODUCTION

You will learn how to remove and install the support spring.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Top cover




- Hold the mouse so that the bottom is facing up.
- Locate the #1 screw towards the bottom half of the mouse.
- Take the 4.76 mm Phillips screwdriver and unscrew the #1 screw.

## Step 2




- Place the mouse so that the bottom is resting against a hard surface .
- Gently lift the top cover of the mouse and remove.

### Step 3 — Scroll Wheel

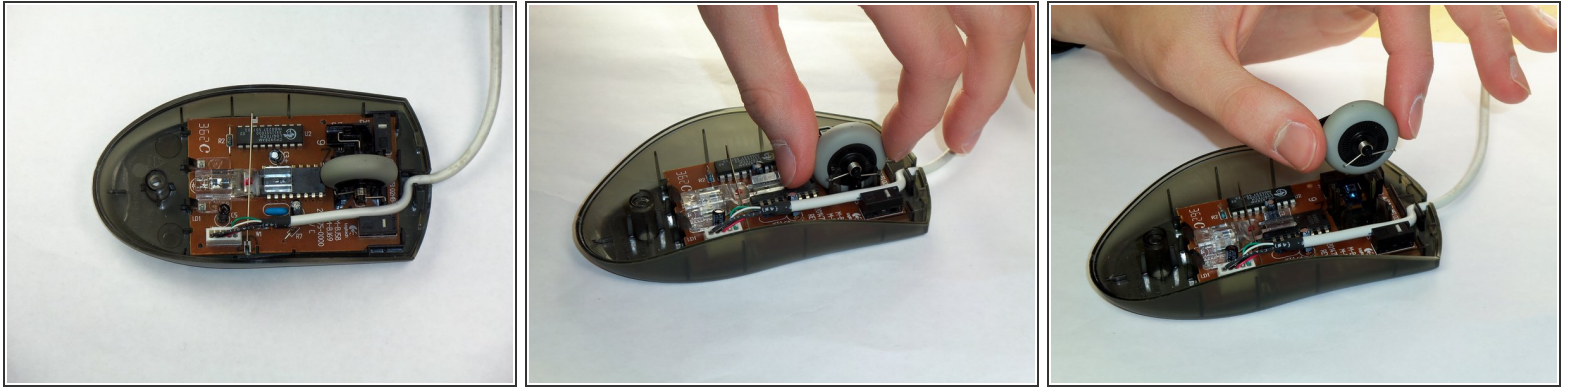

- Locate the scroll wheel on the mouse.
- Grab the scroll wheel with your thumb and index finger.
- Gently lift up to remove the scroll wheel from the mouse.



### Step 4 — Support Spring

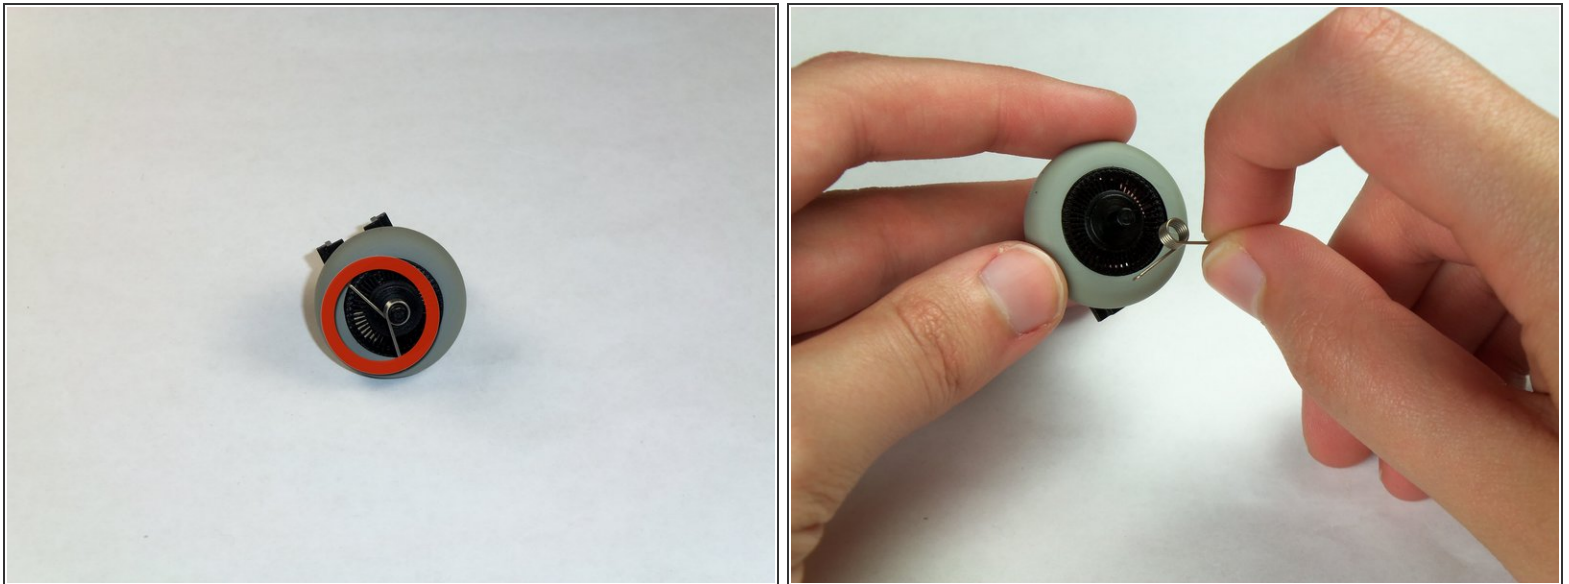

- Locate the spring on the scroll wheel. The spring is a small piece of metal wire coiled in the middle.
- Carefully remove the spring from the wheel scroll.



## Step 5 — Attaching the New Spring

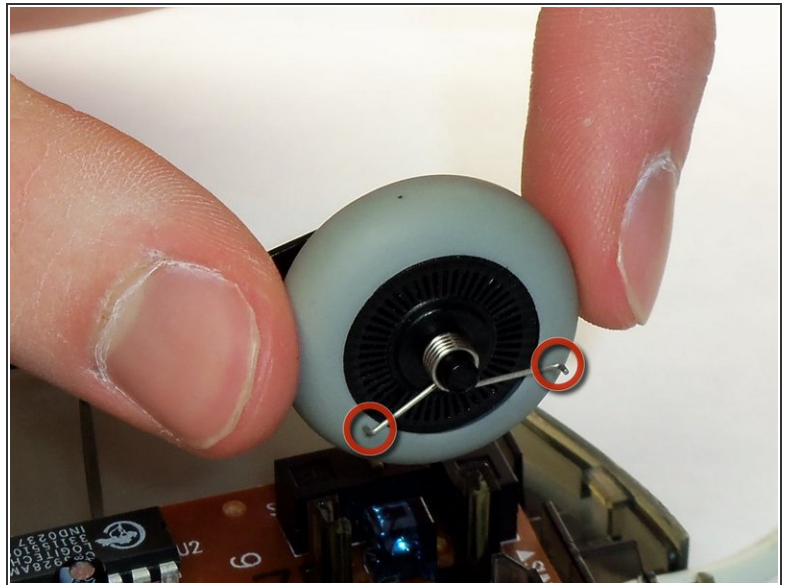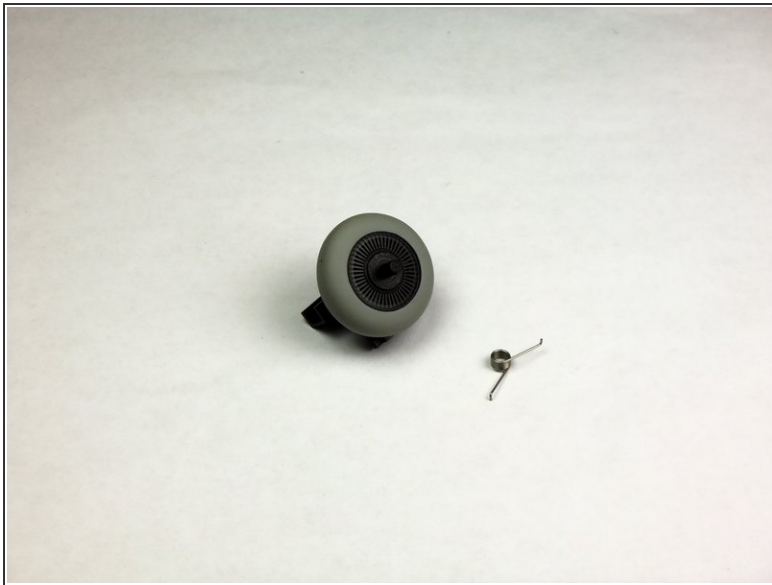

- Replace the spring, place it on the correct side of the wheel with the prongs pointing down.
- ⓘ The correct side is the side without the black plastic square, as shown in the photos.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 06:09:32 AM.