



Nikon Coolpix 5600 Camera Back Removal

Learn how to remove the back Nikon Coolpix 5600 Camera.

Written By: Crista Riedy



INTRODUCTION

This guide walk you through removing the plastic casing on the back of the camera.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Remove Screws



- Remove the screws from the bottom, right, and left side of camera.

Step 2 — Remove back

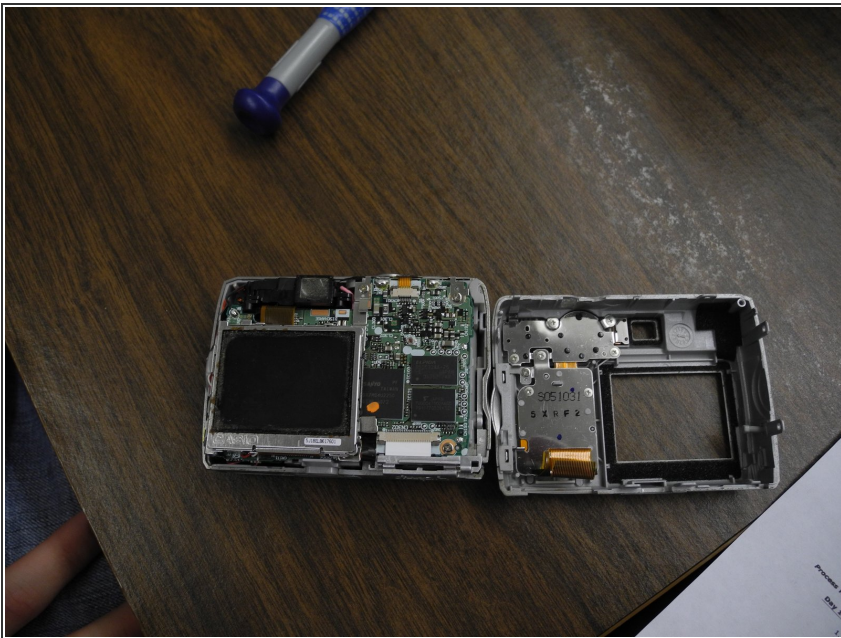

- Remove the back of the camera, this may require force.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-03-26 10:24:37 PM.