



Nokia 6061 button pad replacement

With step-by-step instructions, this guide will help you remove the keypad from your Nokia 6061 flip phone.

Written By: rosin7



INTRODUCTION

This guide will teach you to remove the keypad from your Nokia 6061 flip phone to make repairs or insert a replacement piece.

TOOLS:



- [T6 Torx Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — button pad



- Open the phone, so you can see the keyboard.
- Use the opening tool to remove the call, send, end button, and plastic keypad covering (use moderate force).

Step 2

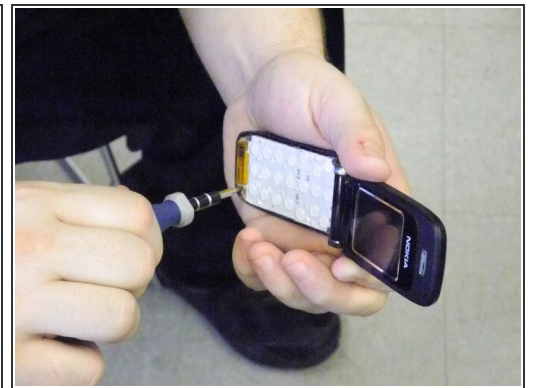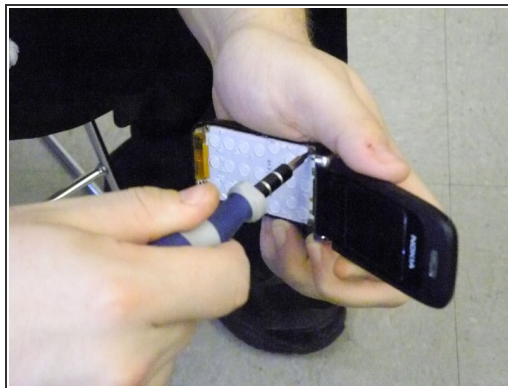

- Use a T6 screwdriver to remove 4-screws (one from each corner of the keypad).

Step 3



- Carefully lift and remove the keypad.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-27 07:54:05 AM.