




Nikon Coolpix 5600 Screen Bracket Replacement

This guide is a walkthrough of removing the screen bracket on a Nikon Coolpix 5600.


Written By: Melissa

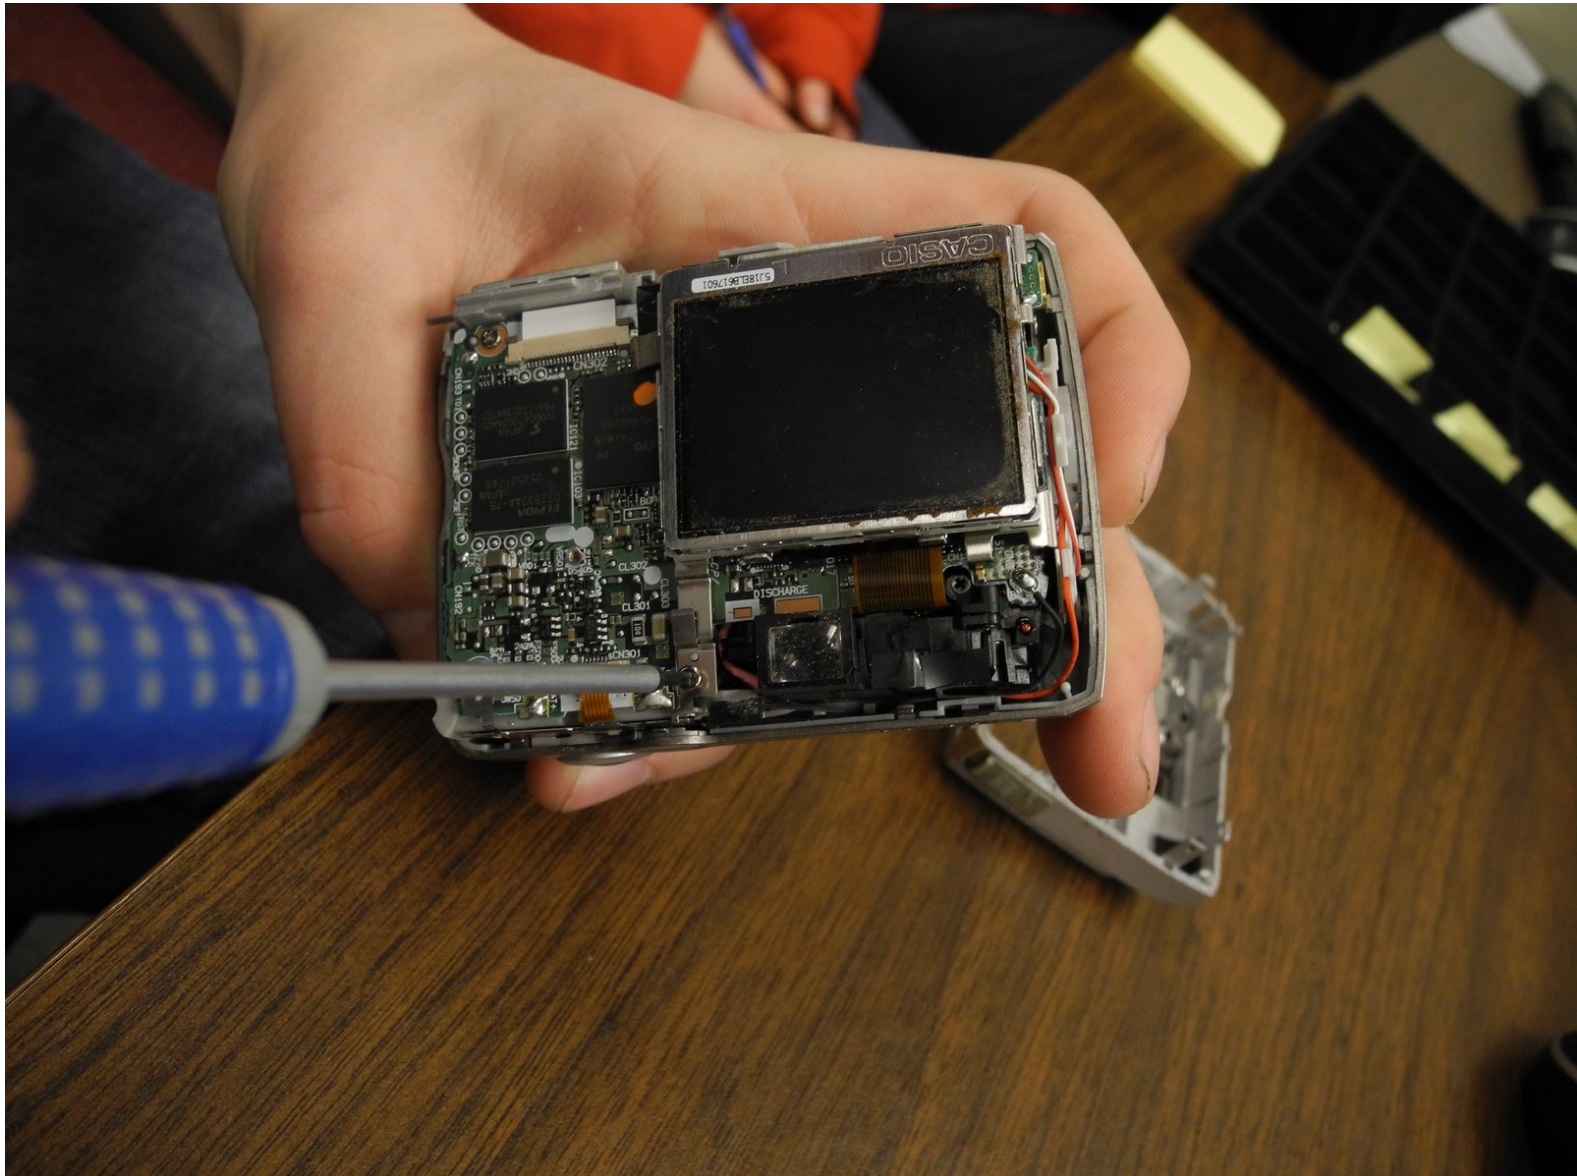

 **TOOLS:**


- [Phillips #00 Screwdriver \(1\)](#)
-

Step 1 — Remove Screws

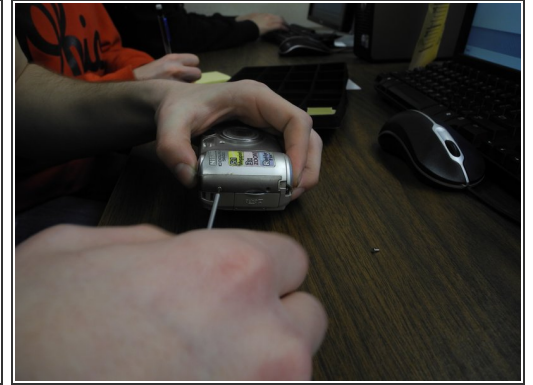

- Remove the screws from the bottom, right, and left side of camera.

Step 2 — Remove back

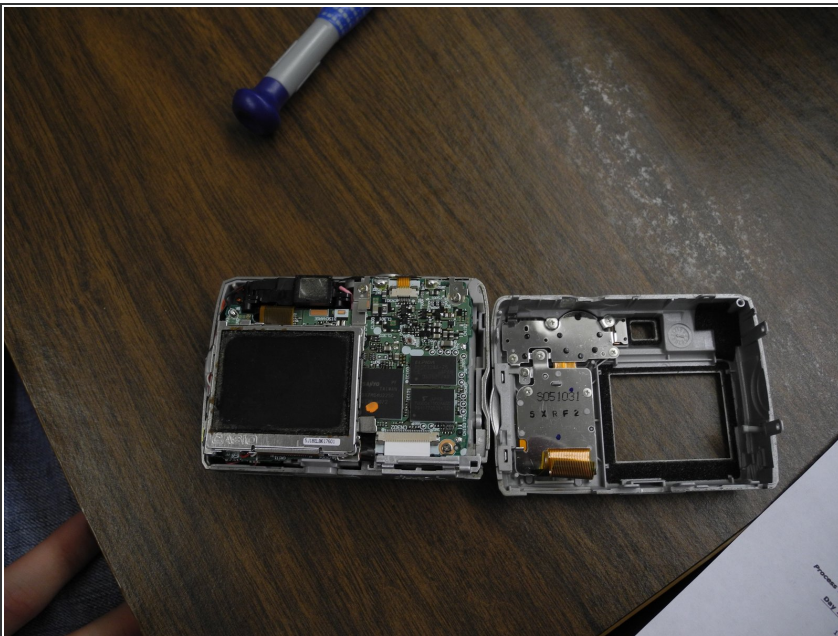

- Remove the back of the camera, this may require force.

Step 3 — Remove Metal Bracket



- Unscrew the right metal bracket of the viewing lens

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-03-16 09:55:49 PM.