

## Disassembling Nikon Coolpix 5600 Screen Bracket

Written By: Melissa





Phillips #00 Screwdriver (1)

## Step 1 — Screen Bracket



 Unscrew the right metal bracket of the viewing lens

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 06:54:57 AM.