



Dexter UP20 Cordless Circular Saw Bottom Guard Replacement


Written By: Slava Korchmar



 **TOOLS:**


- [New Item](#) (1)
-

Step 1 — Fixing brackets

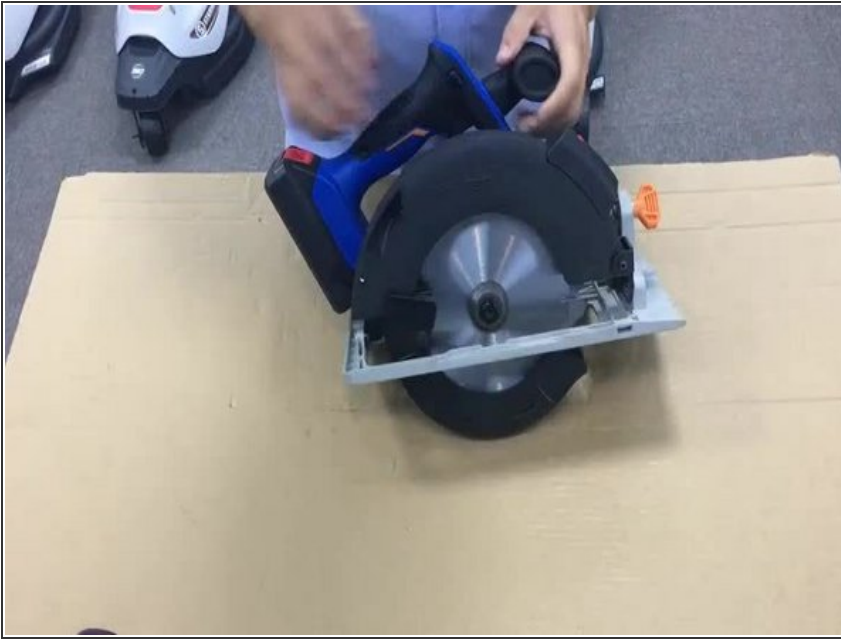


- Remove the battery from the [circular saw](#). Turn the Allen wrench to detach the external flange.

Step 2

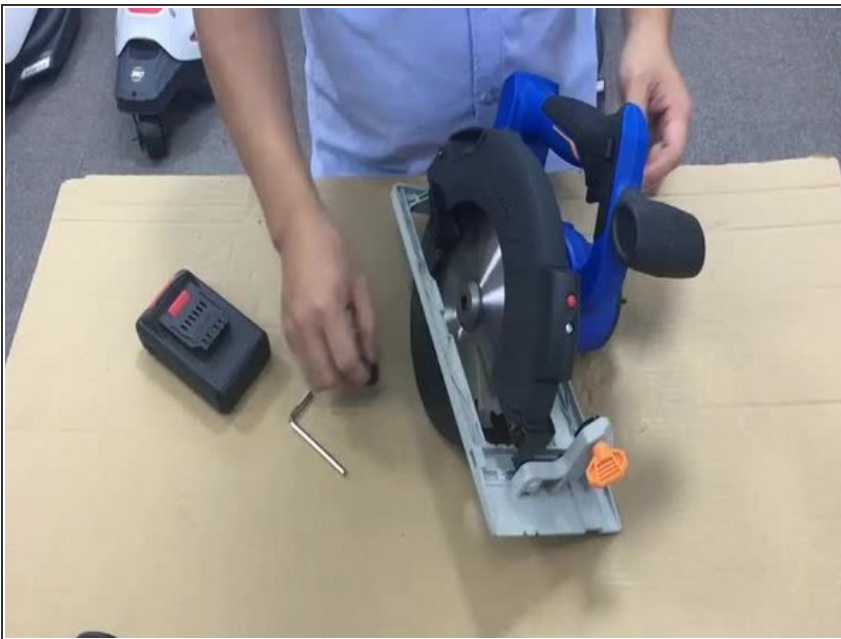

- Remove the blade and the internal flange.

Step 3 — Bottom guard

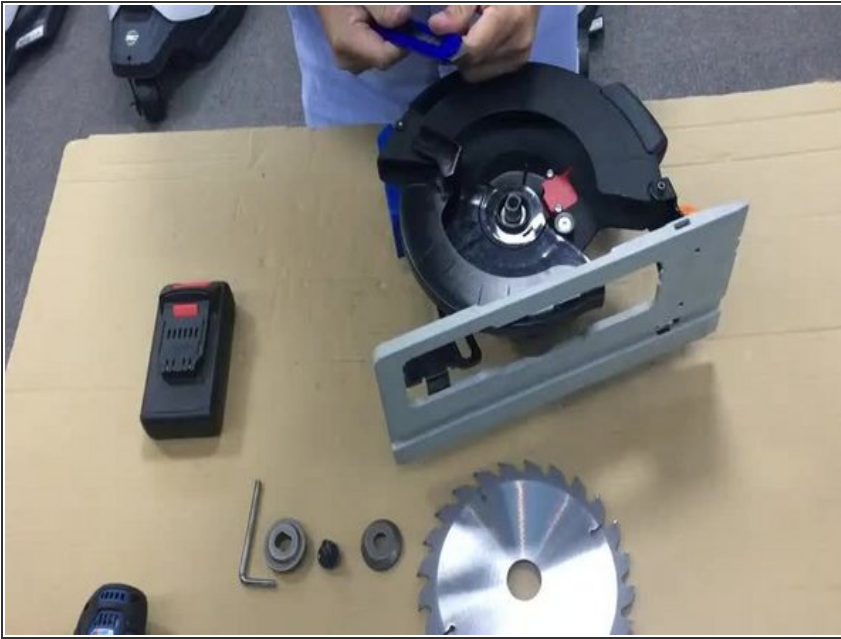

- Remove the tension spring. Remove the screw of the bottom guard.

Step 4



- Remove the bottom guard from the device.

To reassemble your device, follow the instructions in reverse.