


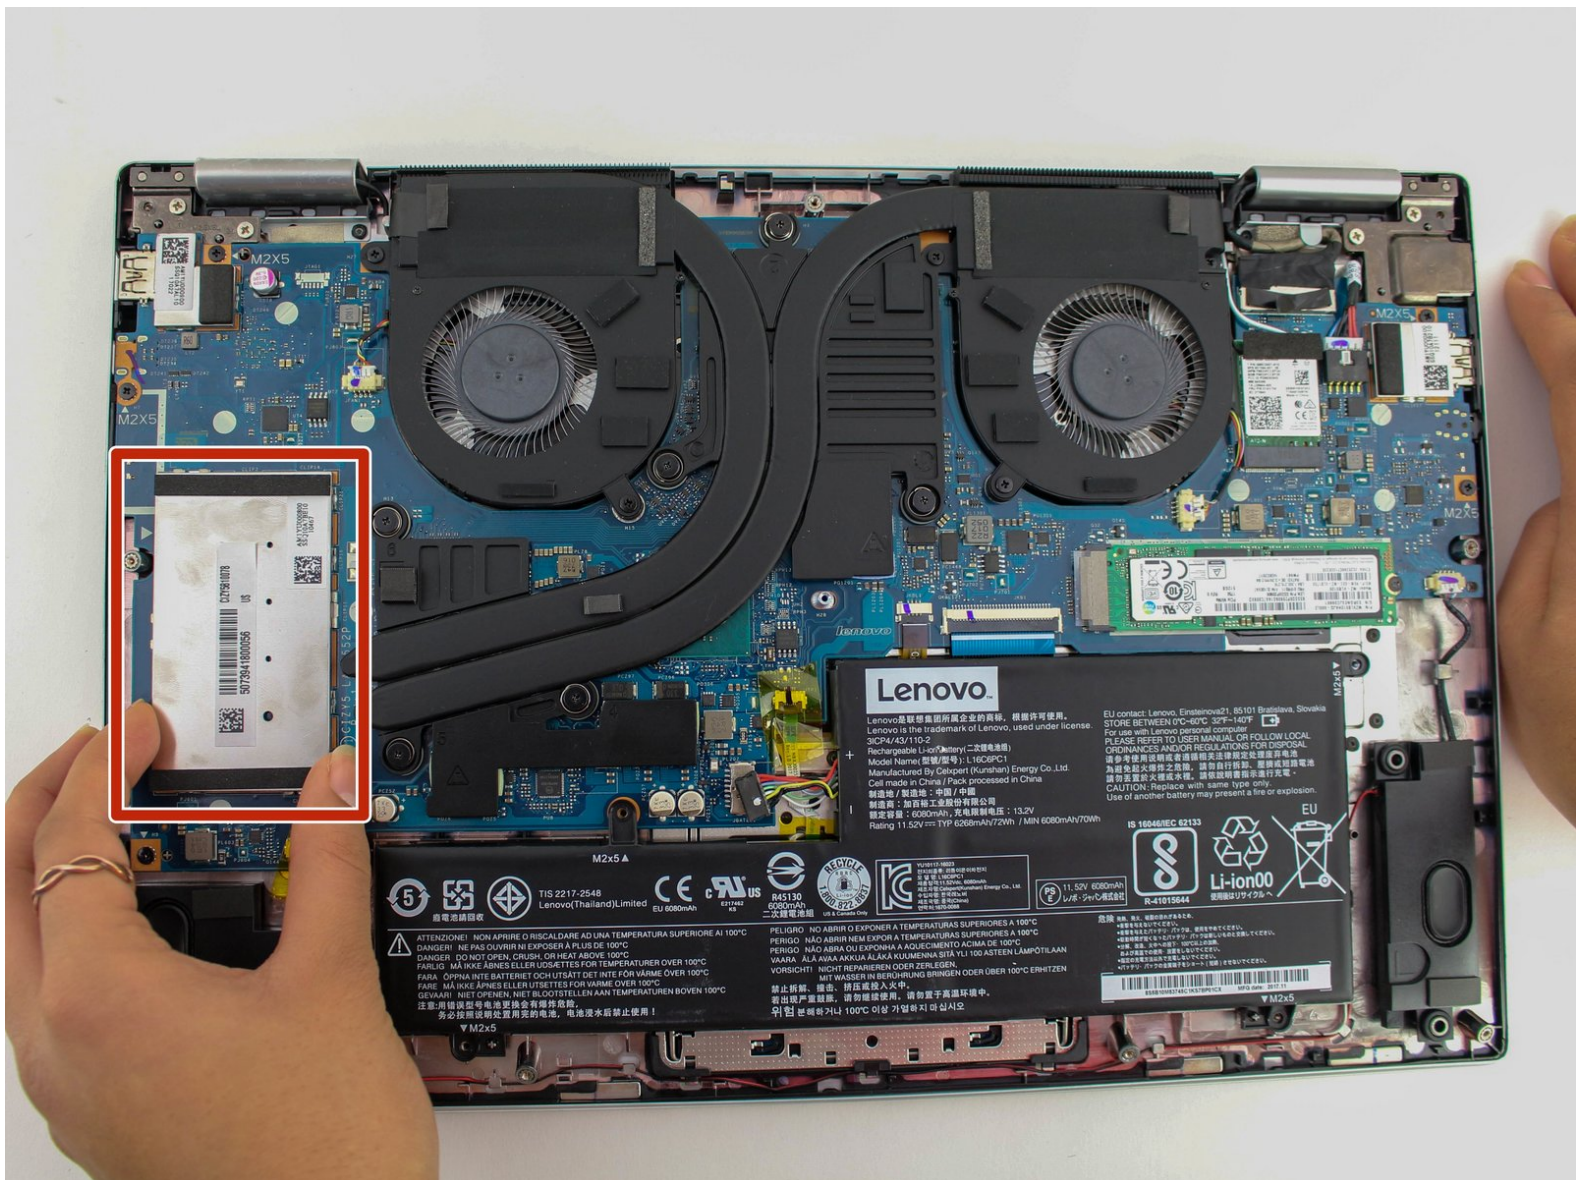

# Lenovo Yoga 720-15IKB RAM Replacement

This guide shows you how to replace the RAM of your Lenovo Yoga 720 15-IKB (88YG7000828).

Written By: Shaina Bagri



## INTRODUCTION

This guide shows you how to replace the Lenovo Yoga 720 15-IKB (88YG7000828) RAM. This laptop is very similar to the Lenovo Yoga 720 13-inch , the Yoga 710, and the Yoga 730. The RAM replacement for all of these models will be similar. The RAM stands for Random Access Memory, and is the computer's short-term digital storage. The RAM is usually durable and rarely needs to be replaced.

---

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
-

## Step 1 — Bottom Cover



- Power off the device before starting.
- Flip the device over with the hinges facing away from you.
- Remove seven 5.0 mm Torx T5 screws.
- Remove three 9.5 mm Torx T5 screws.


## Step 2



- Pry around the edges from one side to another with a plastic opening tool.
- ⚠ Do not pry on the side with the hinges because this can break the cover.
- Lift the case from the front until you feel resistance.
- ⚠ Do not keep lifting after you feel resistance, or the bottom cover can break.
- Pull the cover towards you, away from the hinges.
- Completely lift off the cover.





## Step 3 — RAM

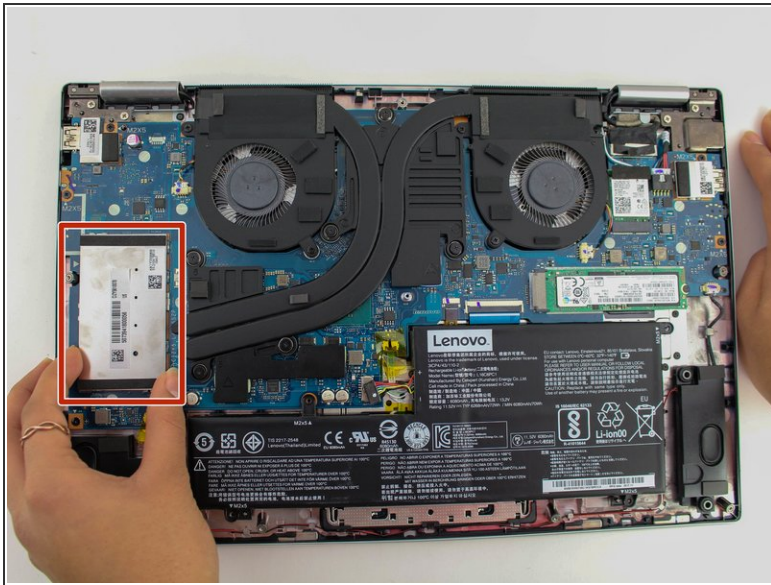

- Use your fingers to pry the RAM cover loose and remove it.
- ⓘ If you are having trouble prying the cover loose with your fingers, use a plastic opening tool.
- 👉 When refitting the RAM cover, make sure that the cover maintains the same orientation and lines up with the tabs surrounding the RAM.

## Step 4

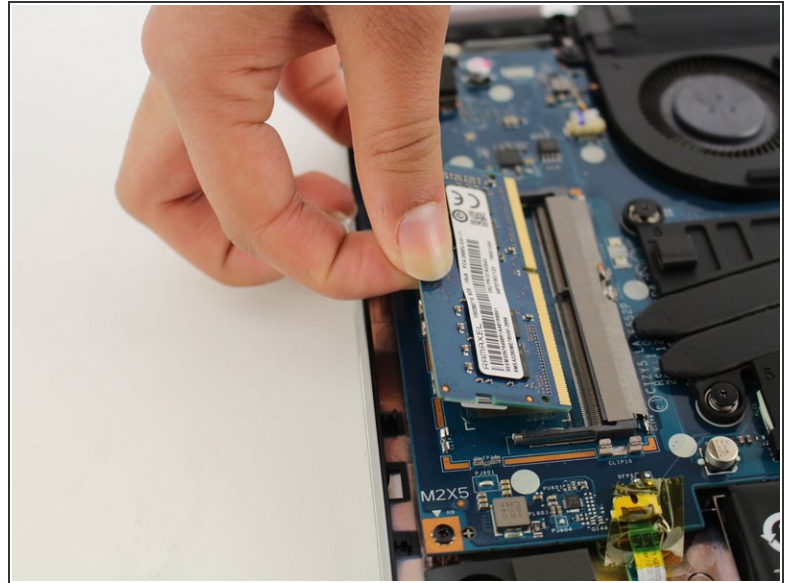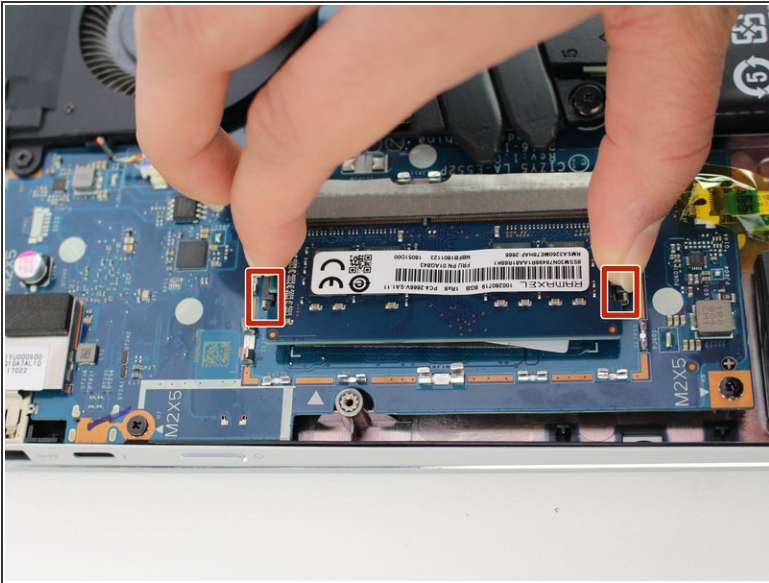

- Push outwards on the levers holding the short edges of the RAM in place. This will release the RAM.
- Gently pull the RAM out, diagonally up and away from the socket.

To reassemble your device, follow these instructions in reverse order. Make sure to align the RAM cover with the tabs when popping it back on.