



Acer Aspire AS3810TZ-4806 RAM Replacement

This guide will tell you how to replace the RAM in your Acer Aspire AS3810TZ-4806.

Written By: Matthew Ibanez



INTRODUCTION

For this guide you will need a phillips screwdriver. Before beginning, make sure you completely power down your laptop and remove the battery.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Unlock the battery release by sliding it to the right.

Step 2

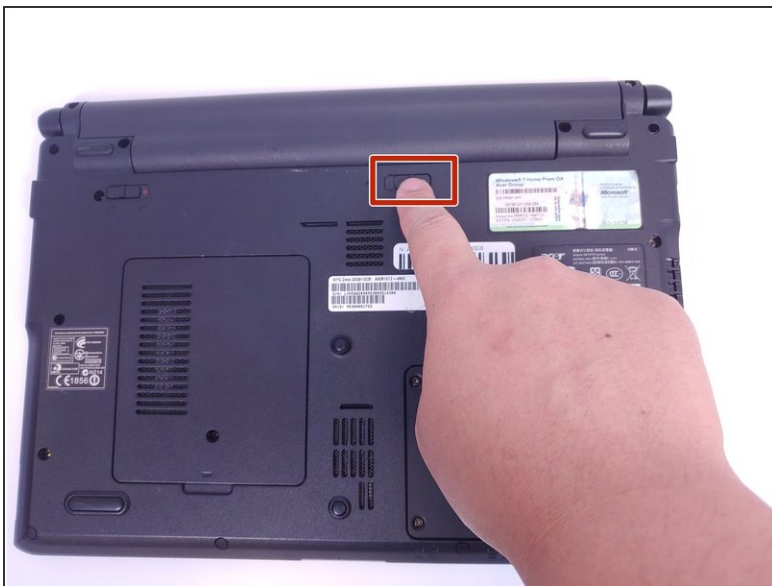

- Slide the release button and remove the battery.

Step 3 — RAM



- Using the Phillips #1 screwdriver, unscrew the single screw and remove the cover.
- ⚠ Ensure the computer is powered off and the battery is removed.

Step 4



- Push the side of the clips away from each other to release the RAM. Remove the RAM from the device.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 07:58:29 AM (MST).

