



# Canon A35F Back Cover Replacement

Follow these steps carefully in order to replace the back door of a Canon A35F.

Written By: Saima Teasha



## INTRODUCTION

If you have tried to pry open the back cover of the Canon A35F several times, and it still will not open, it might time for the back cover to be replaced. There may be other reasons as well why the back cover needs replacement such as the back cover is damaged and cracks are beginning to appear, light is leaking into the camera ruining the film or maybe the back cover is just in need of some cleaning. This guide has all the information you need in order to take off the back cover of a Canon A35F, and piece it back together.


The price of a used back cover can range from \$15-\$25 U.S. dollars on eBay, but they are hard to find.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Jimmy](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Back Cover

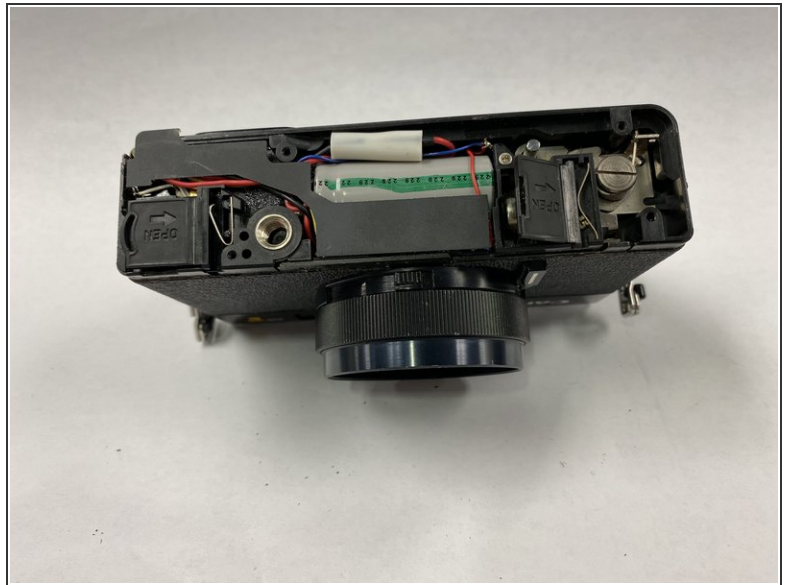

- Remove the three screws on the bottom of the camera with a Philips #00 screw driver.

⚠ When the bottom plate is removed there is nothing to hold in the battery covers so the springs for the covers and the covers can fall out easily.

## Step 2



- Open the back cover of the camera to reveal the pin holding the back cover to the body
- ⓘ Slide in a Jimmy to help pry the back cover open as it can be difficult just using your fingers.



### Step 3



- Push out the pin holding the back cover to the body of the camera using angled tweezers.
- Once the pin is poking out use pliers or tweezers to pull the pin out the rest of the way.

### Step 4



- Pull off the back cover from the camera body.

To reassemble your device, follow these instructions in reverse order.