




ASUS VivoBook Flip TP501U Keyboard Panel Replacement

How to replace the keyboard panel on the ASUS VivoBook Flip TP501U and gain access to the internals of the laptop.

Written By: Evan Grilley

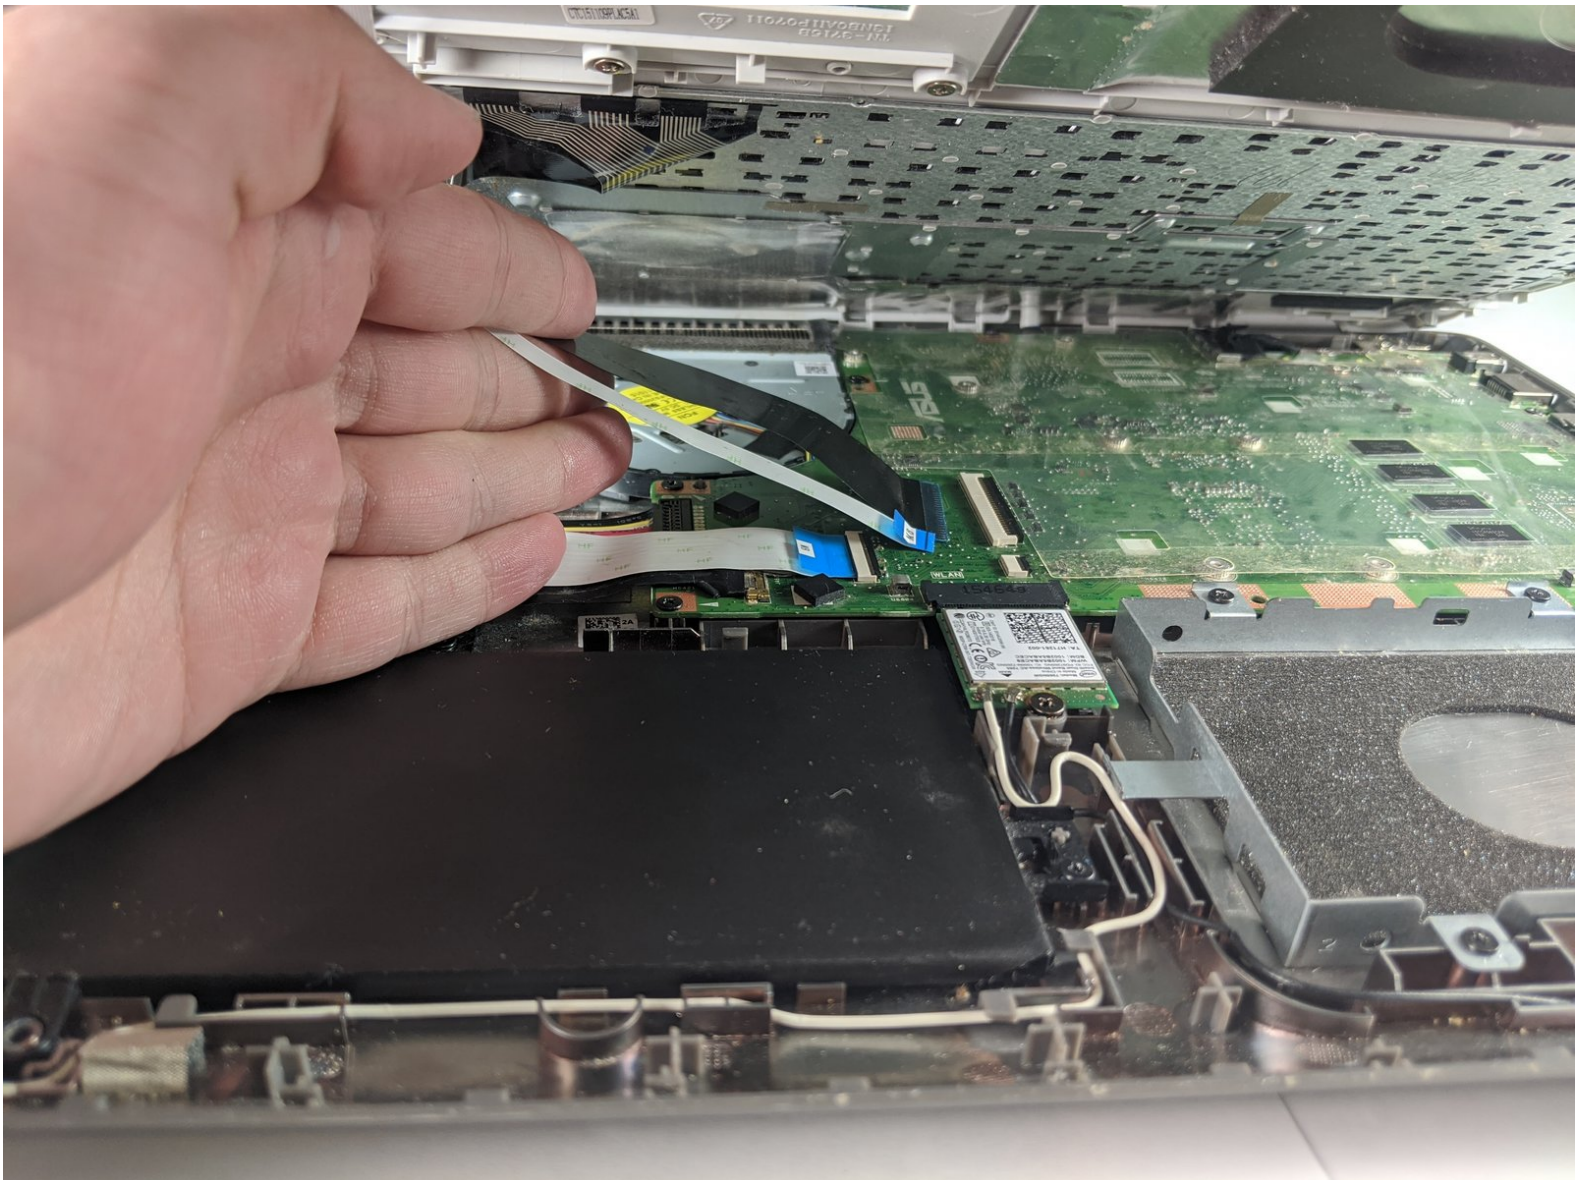

This document was generated on 2020-11-28 08:03:04 AM (MST).



INTRODUCTION

The keyboard panel contains both the keyboard and the touchpad of the ASUS VivoBook Flip TP501U. Removing it also grants access to the internals of the device, which allows for the replacement of other components. This guide will walk you through the steps of replacing the keyboard panel.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [1 x Opening Picks](#) (1)
-

Step 1 — Keyboard Panel

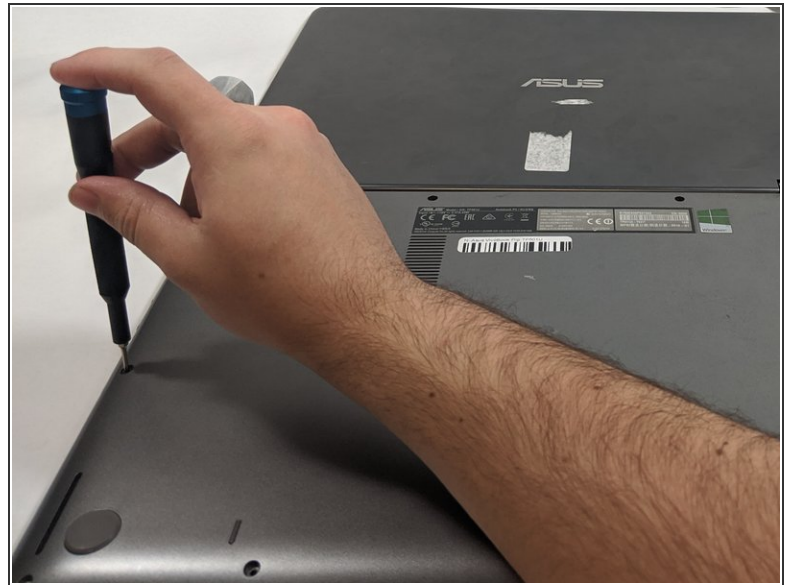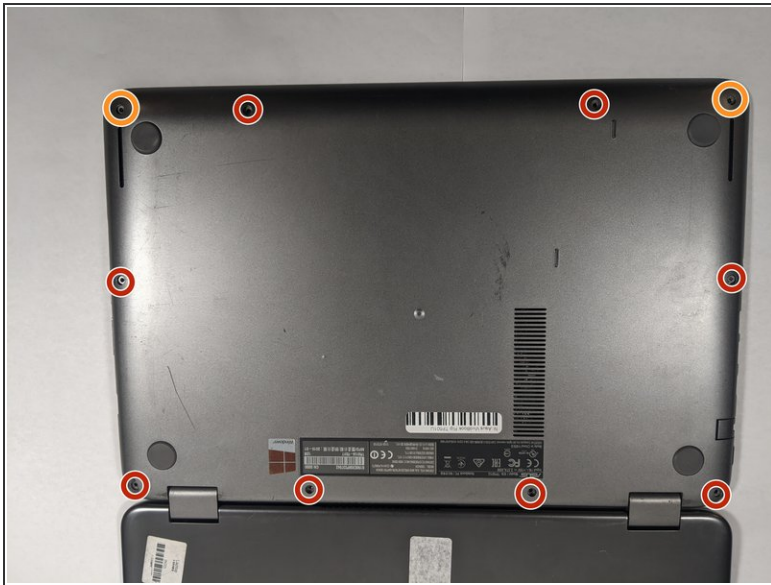


- Open the laptop until it is flat and lay it screen down.
- Remove eight 9.6mm Phillips #00 screws from the bottom of the laptop.
- Remove two 4.8mm Phillips from the corners of the device.

Step 2

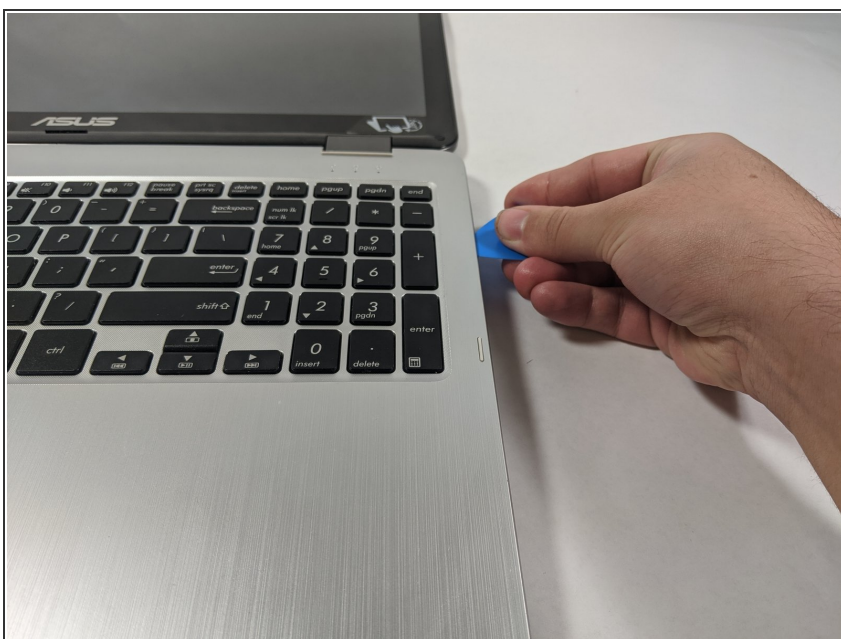

- Turn the device face up.
 - Use the plastic Opening Pick to separate the keyboard panel from the chassis that was just unscrewed.
- ⚠** Pull the panel away from the chassis **CAREFULLY**, as there are ribbon cables attached between the keyboard and internal electronics.

Step 3

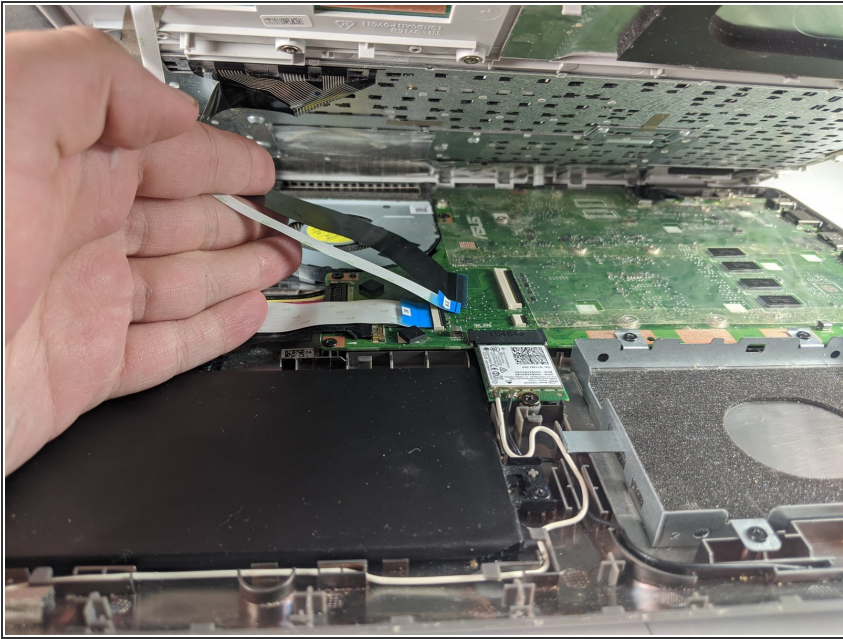

- With the keyboard panel pulled up, detach the two ribbon cables from the motherboard using the blue tabs on the cables.
- Remove the keyboard panel completely.

To reassemble your device, follow these instructions in reverse order.