




IBM Thinkpad T60 Battery Replacement

This guide will show users how to correctly remove the battery from the IBM Thinkpad T60.

Written By: Cody Kratochvil



Step 1 — Battery

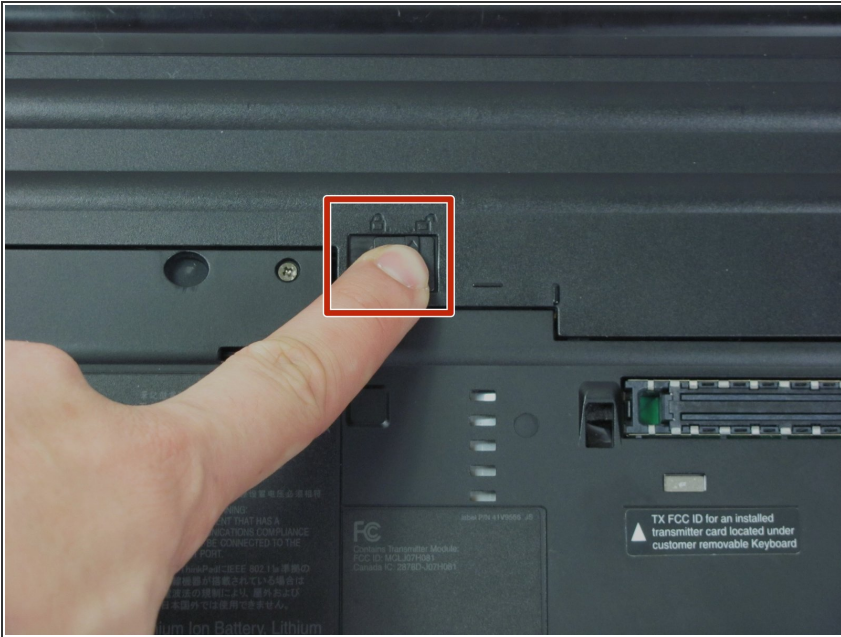

- Turn the computer over to see the small tab on the battery located near the top of the Thinkpad.
- Use your finger to slide the tab to the right to unlock the battery.

Step 2



- Once the tab is in the unlocked position (far right), pull the battery outwards away from the Thinkpad.
- The battery is now disconnected.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-14 10:27:27 PM.