



Dell Latitude E6330 Memory Chip (RAM) Replacement

A guide on how to replace/upgrade your RAM for this DELL computer.


Written By: Vaasavan

Step 1 — Battery



- Turn off computer by holding down the power button

Step 2

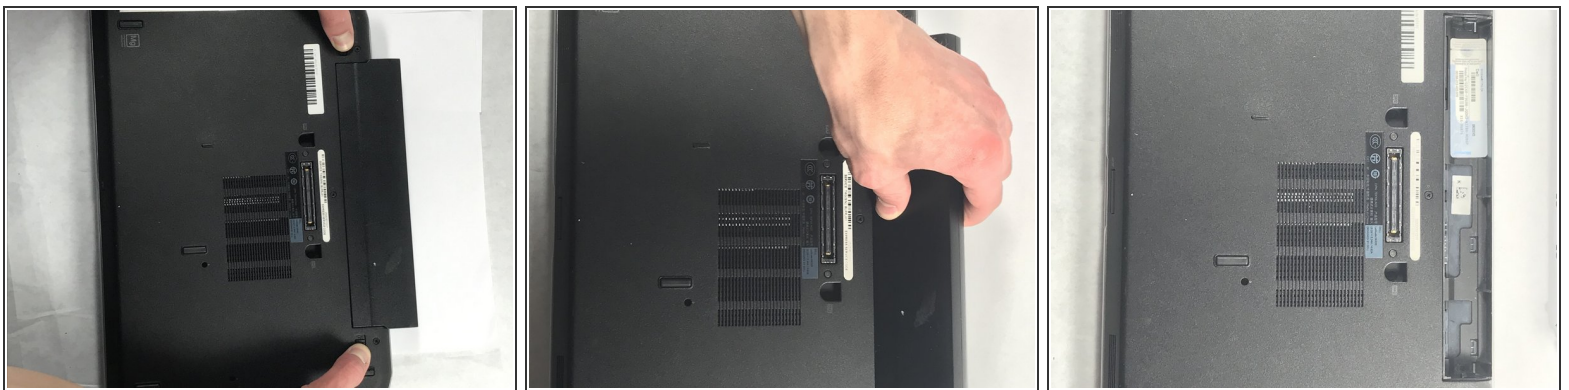

- Slide latches out to unlock and remove battery.

Step 3 — Remove screws



⚠ Shut down your computer.
Disconnect all power sources before opening the computer cover or panels.

- Remove the screws that secure the base cover to the computer.

Step 4 — Remove base cover



- Lift the base cover to remove it from the computer.

Step 5 — Align base cover; screw base cover in.



- Place the base cover to align with the screw holes on the computer.
- Tighten the screws to secure the base cover to the computer.

To reassemble your device, follow these instructions in reverse order.