




Nikon CoolPix S5 Wrist Strap Holder Replacement

This guide demonstrates how to install the wrist strap holder on the Nikon Coolpix S5.

Written By: Patty Richeson

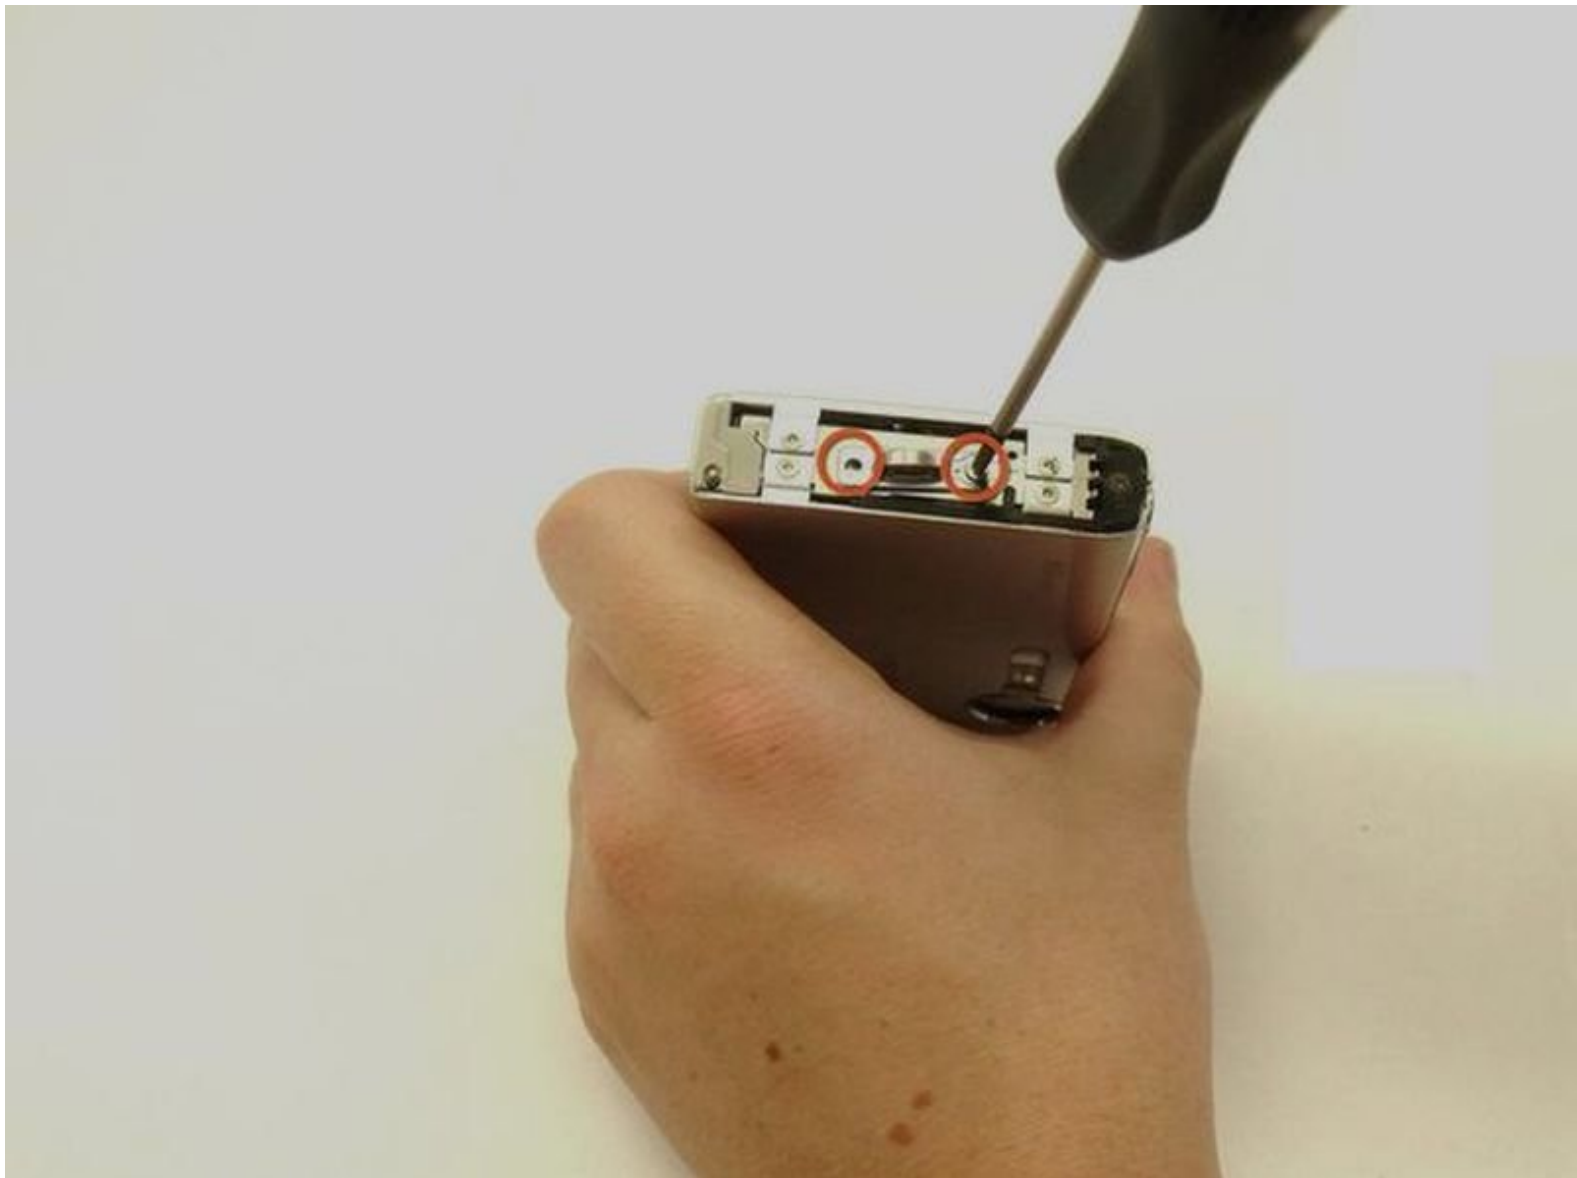


INTRODUCTION

This guide is to be used to install the wrist strap holder in the case that the holder becomes damaged or no longer functioning properly due to overuse. A Phillips screwdriver will be needed to complete this installation.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Wrist Strap Holder

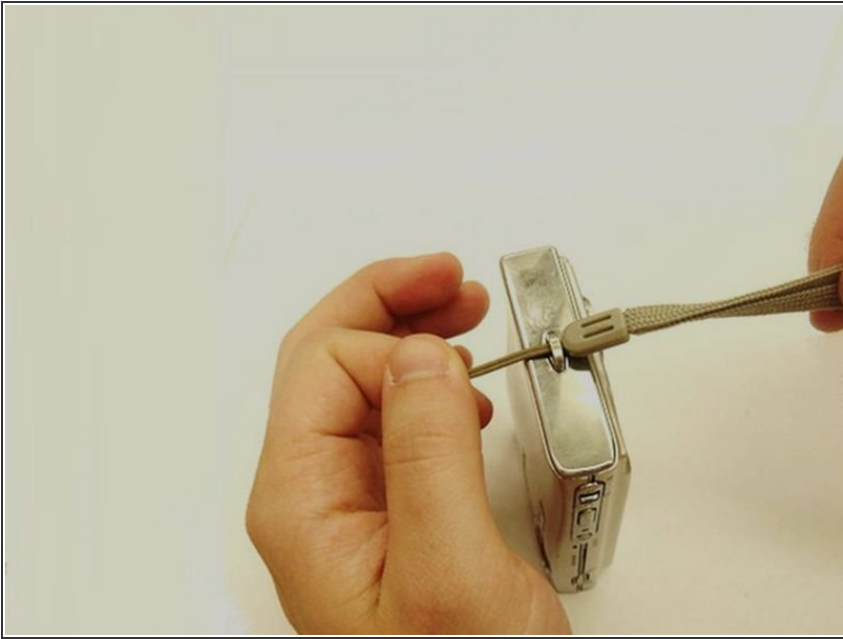


- Remove the wrist strap from the wrist strap holder by untying the string at the end of the wrist strap.
- This will allow for the wrist strap to be pulled through the wrist strap holder.

Step 2

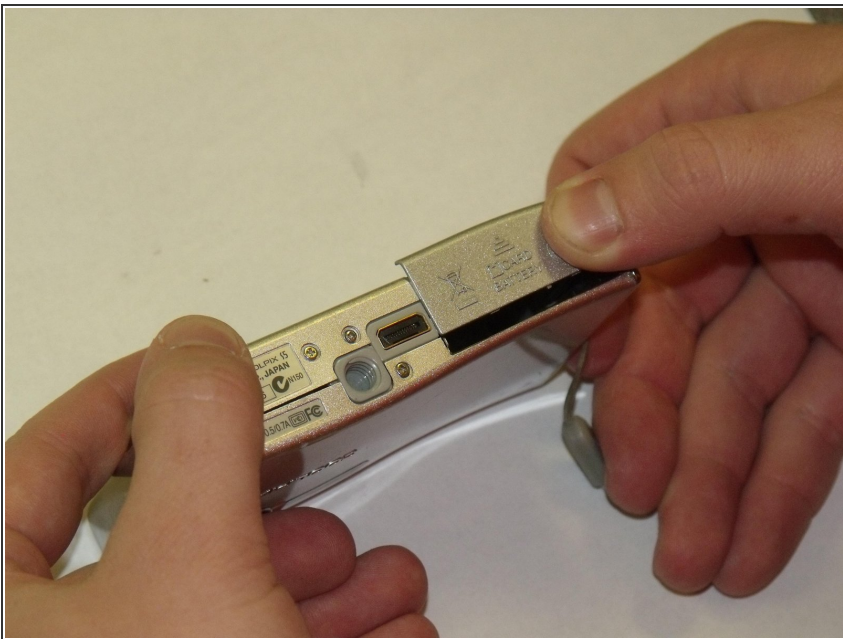


- Using the thumb, firmly push the Battery/SD cover in the middle and in the direction of the arrow on the Battery/SD cover.
- This will cause the Battery/SD cover to pop open.

Step 3

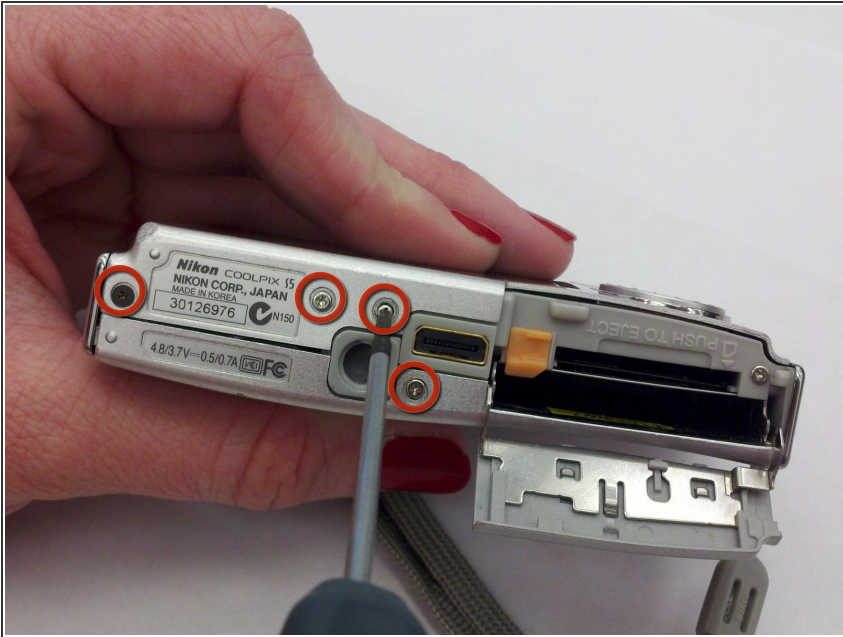


- Use the Phillips screwdriver to remove the four screws on the bottom of the camera.

Step 4

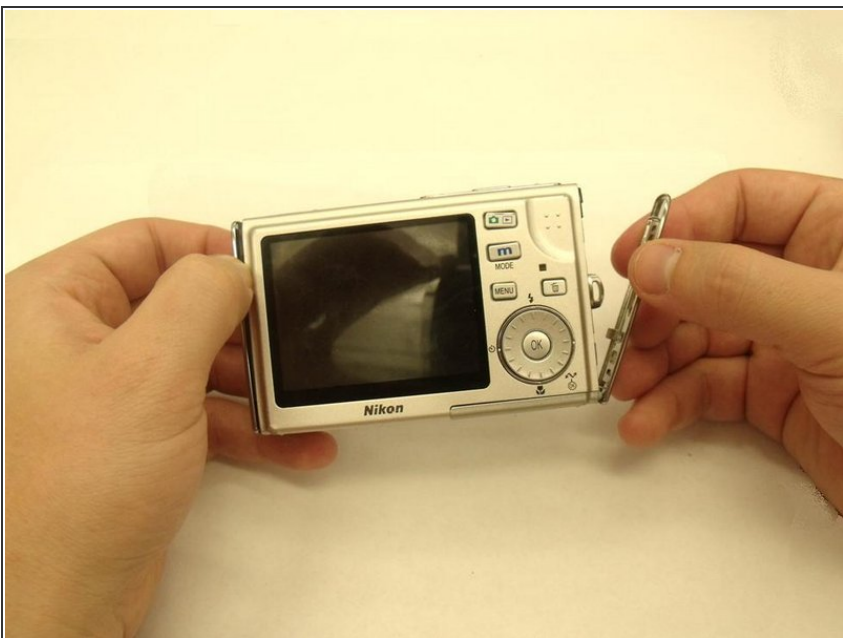

- Using fingers, pull the silver side panels from each side.

Step 5

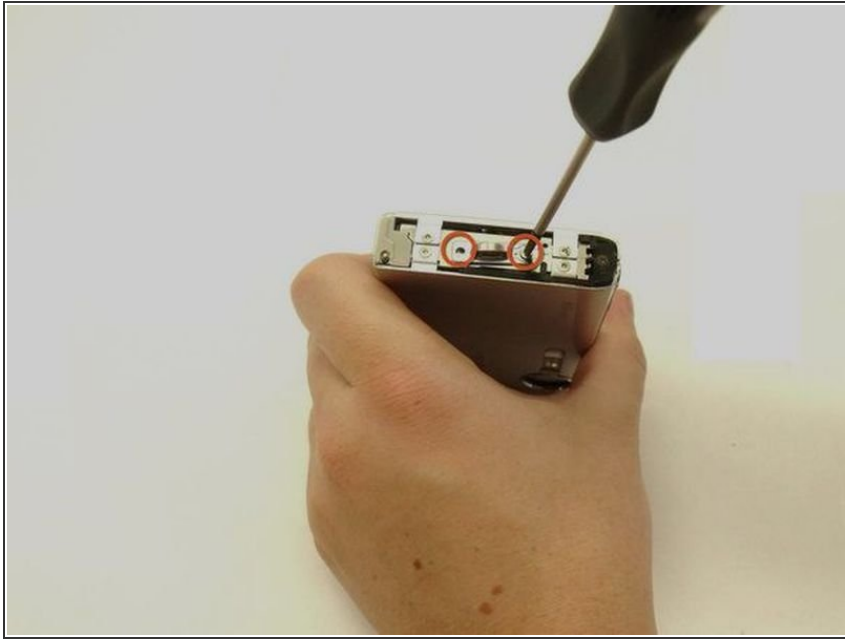

- On the right hand side of the camera, remove the two screws from the wrist strap handle by using the Phillips screwdriver.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-18 08:28:49 AM.