




Nikon CoolPix S5 Buttons Replacement

This guide will provide directions on how to install the buttons in the event they become damaged.

Written By: Patty Richeson

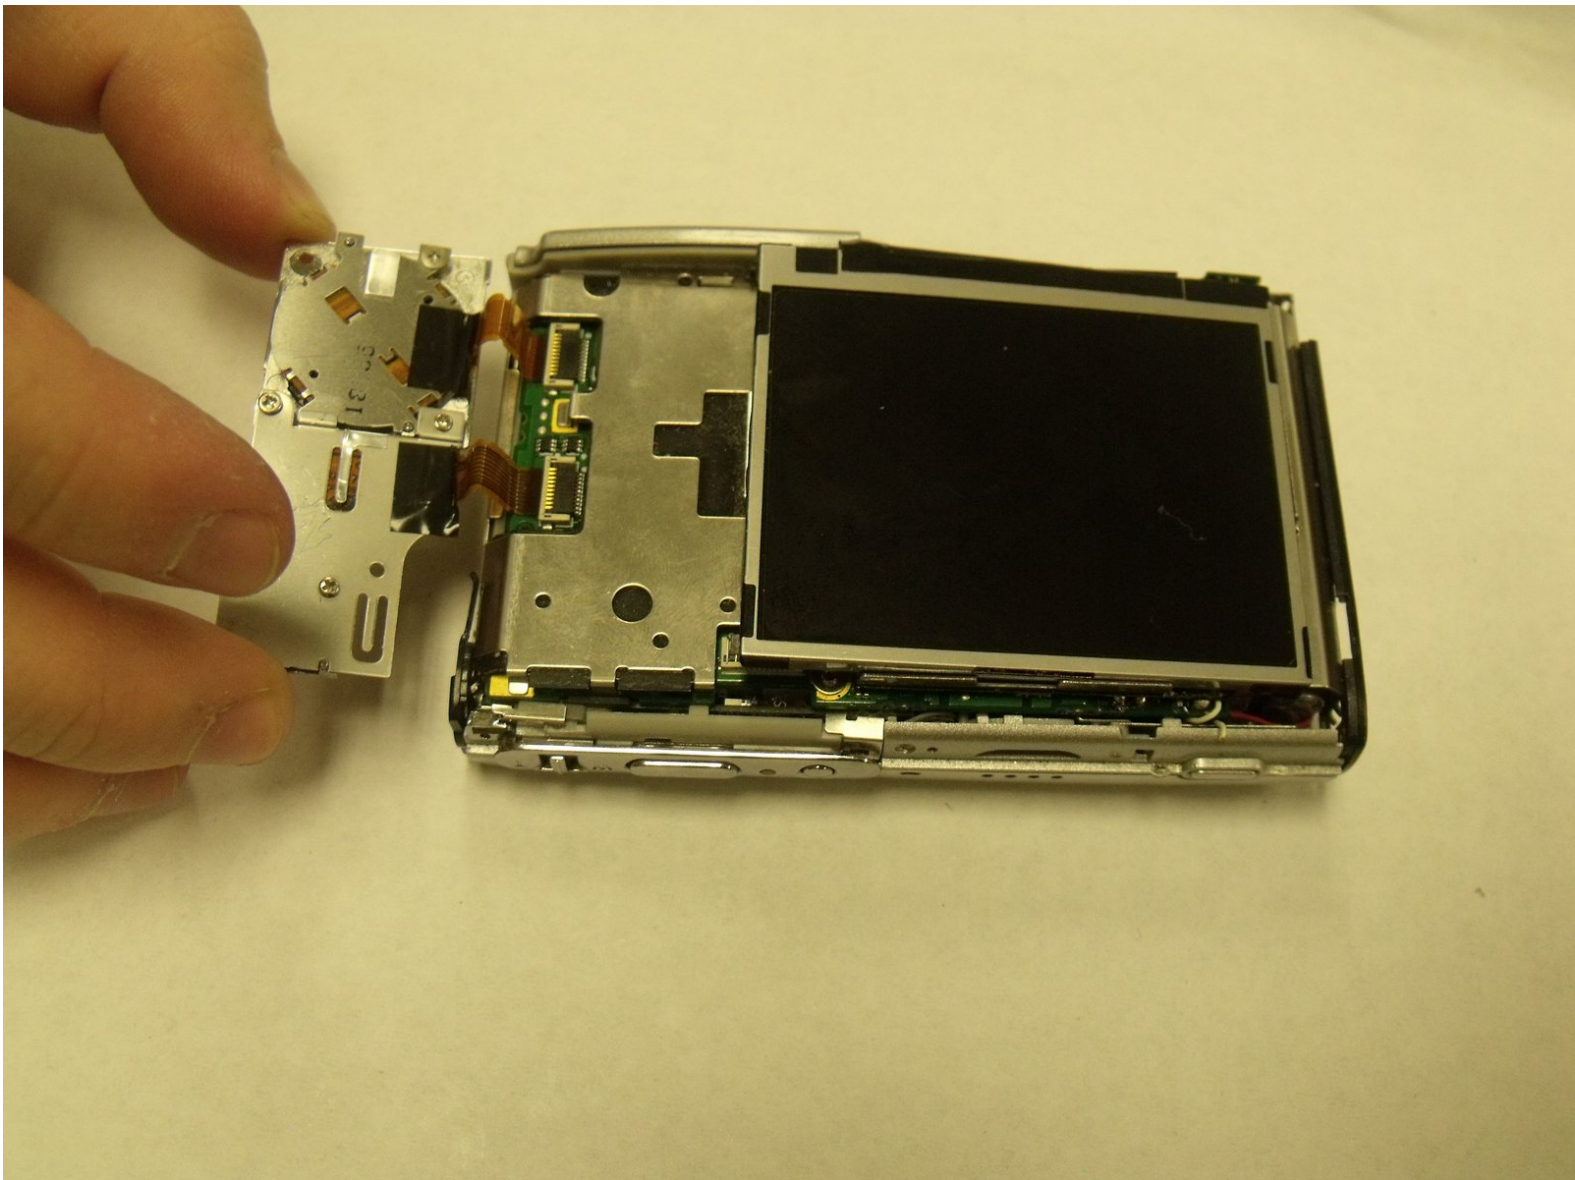


INTRODUCTION

This guide is to be used to install buttons in the case that the buttons are damage or are no longer functioning properly due to overuse. A Phillips screwdriver will be needed to complete this installation.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover

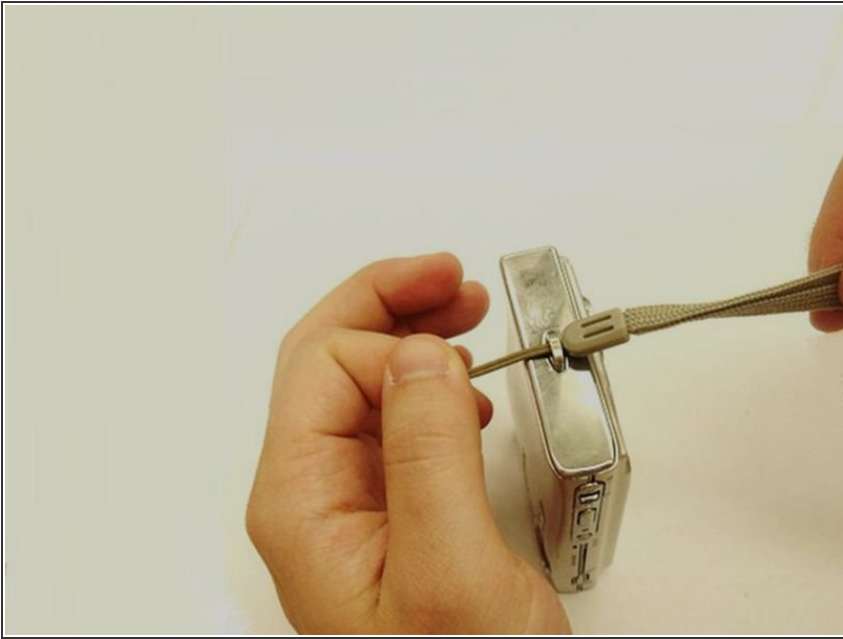


- Remove wrist strap by unknitting the strap.

Step 2

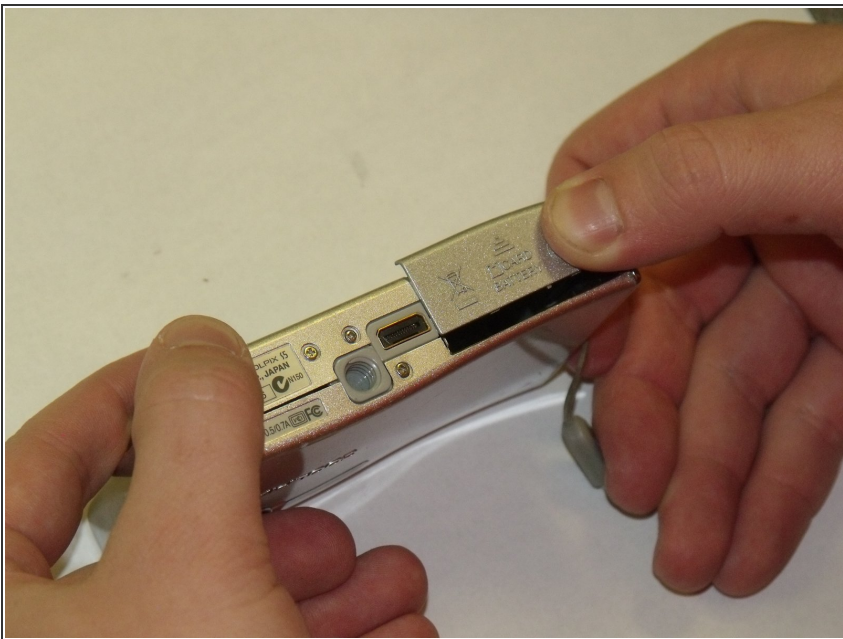


- Open SD/Battery cover.

Step 3

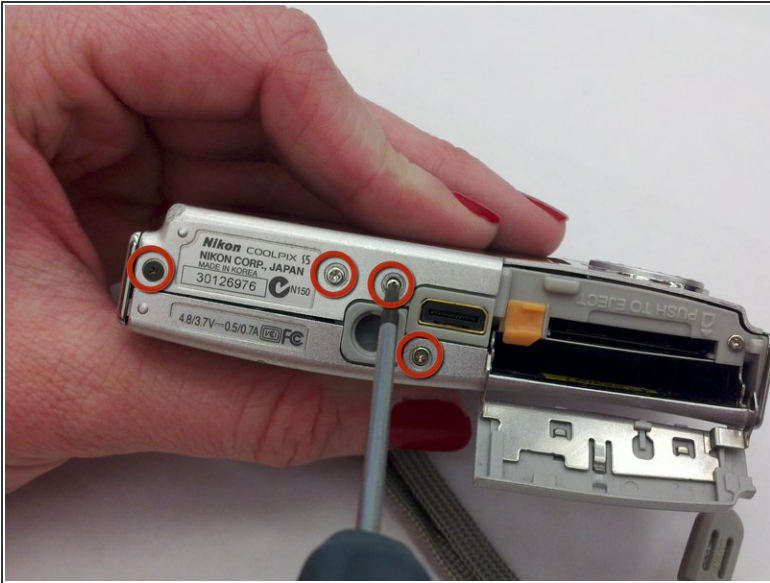

- Remove the four screws on the bottom of the camera using the Phillips-Head screwdriver.

Step 4

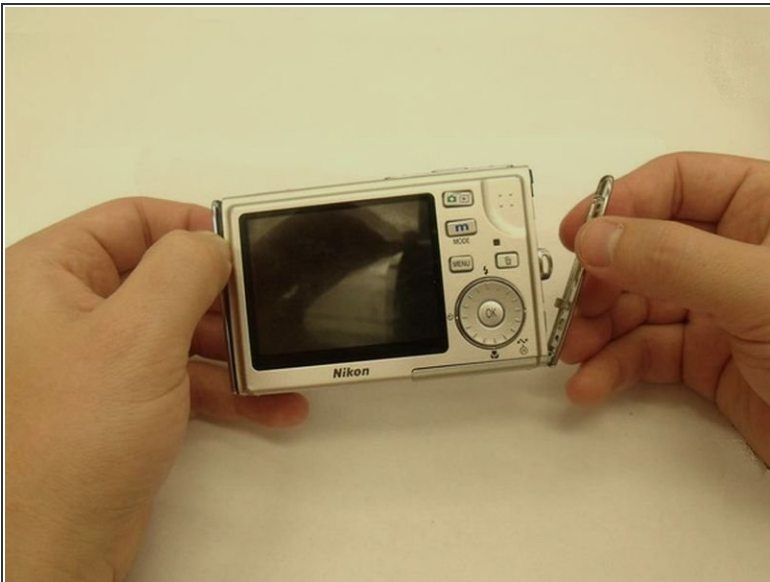



- Pull the silver side panels on each side.

Step 5




- On the right side of the camera (that contains the wrist strap loop), use the screwdriver to remove the two screws holding the backplate in place.
- Repeat this step for the left side.

Step 6

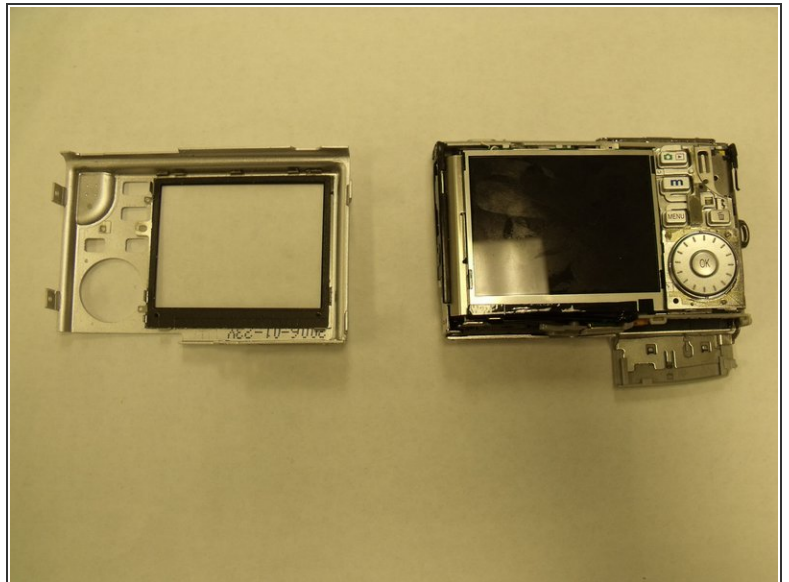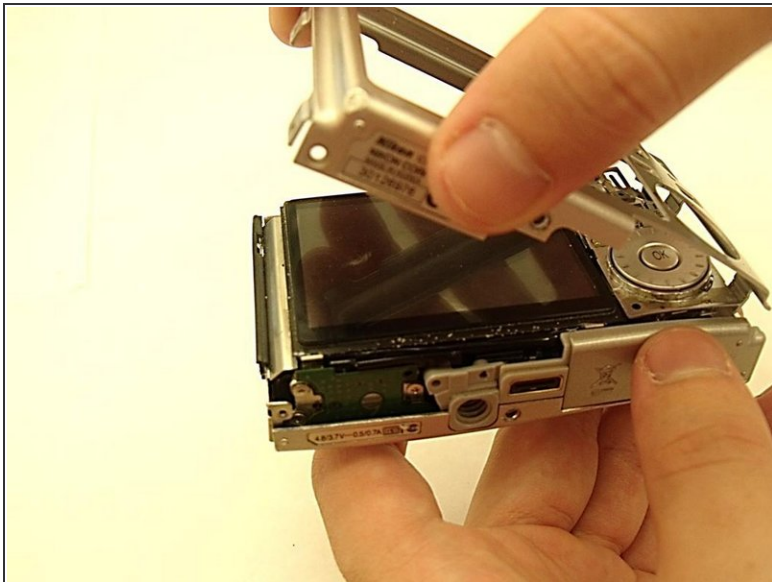


- Pull the back silver faceplate to separate it from the rest of the camera.

Step 7 — Buttons

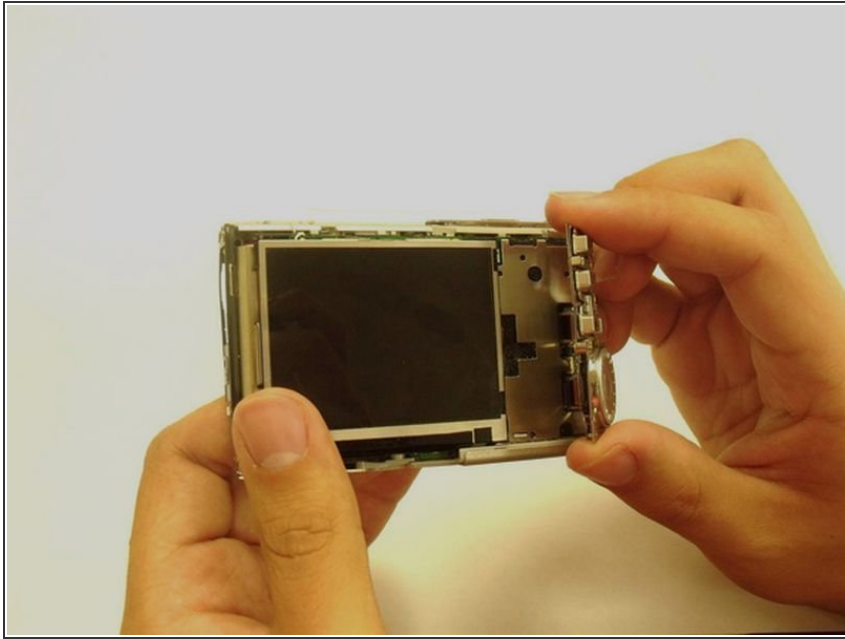

- Using fingers, lift up button plate on the side closest to the LCD screen.

Step 8

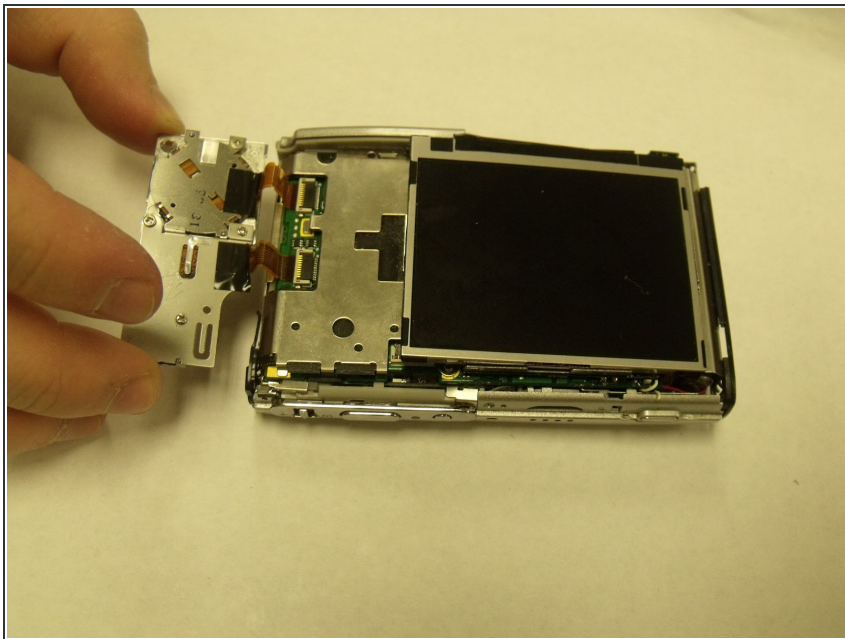

- Pull on ribbon cables to disconnect ribbon cables.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 09:52:07 PM.