



Nikon 1 J5 LCD Module Replacement

Written By: Terrance



 **TOOLS:**




- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Remove Micro SD card and Battery





- Remove Micro SD card and Battery

Step 2

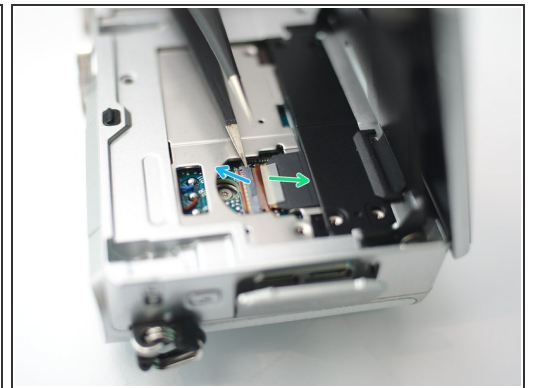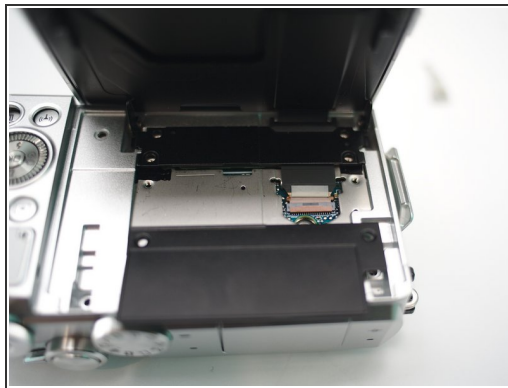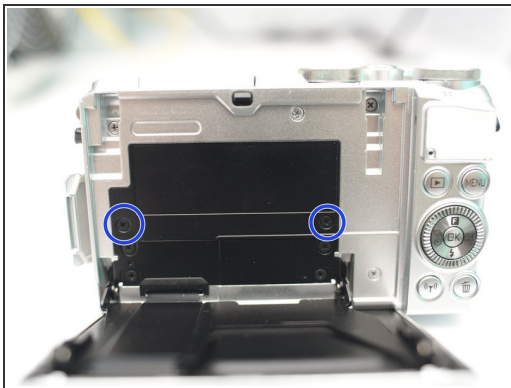

- Remove 2 screws
- Open plastic LCD connector cover
- Lift FPC connector latch
- Detach LCD FPC

Step 3

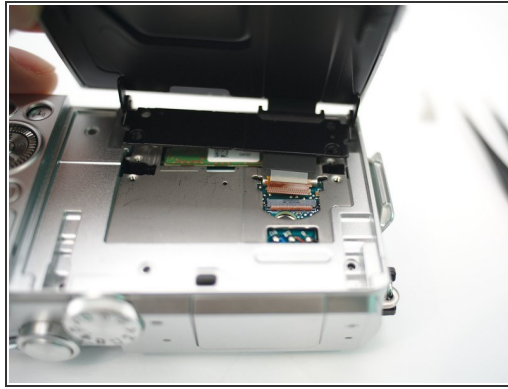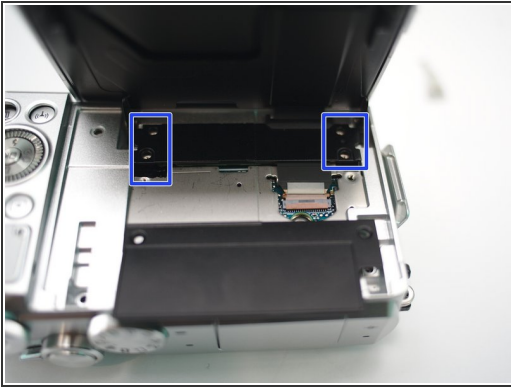

- Remove 4 screws
- Remove LCD module

To reassemble your device, follow these instructions in reverse order.