



Panasonic Lumix DMC-ZS3 Battery Replacement

Replace the battery of your Panasonic Lumix DMC-ZS3.

Written By: Juan Pablo Quinonez Weston



INTRODUCTION

Use this guide to replace the camera's battery.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Battery



- Locate the small, hinged door on the bottom of the camera.

Step 2



- Using your fingernail or a spudger, push the small, grey switch on the hinged door from the left (locked) to the right (unlocked).
- ⓘ The hinged door should swing open after unlocking.

Step 3



- Using your fingernail or a spudger, push down on the small, grey tab holding the battery in place.

ⓘ This should release the battery.

Step 4



- Pull the battery out of the camera.

ⓘ The battery should slide out easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 04:04:22 AM.