




Dell Precision M6800 Keyboard Replacement

Quick replacement of Dell Precision M6800's keyboard.

Written By: Szymon Milewski

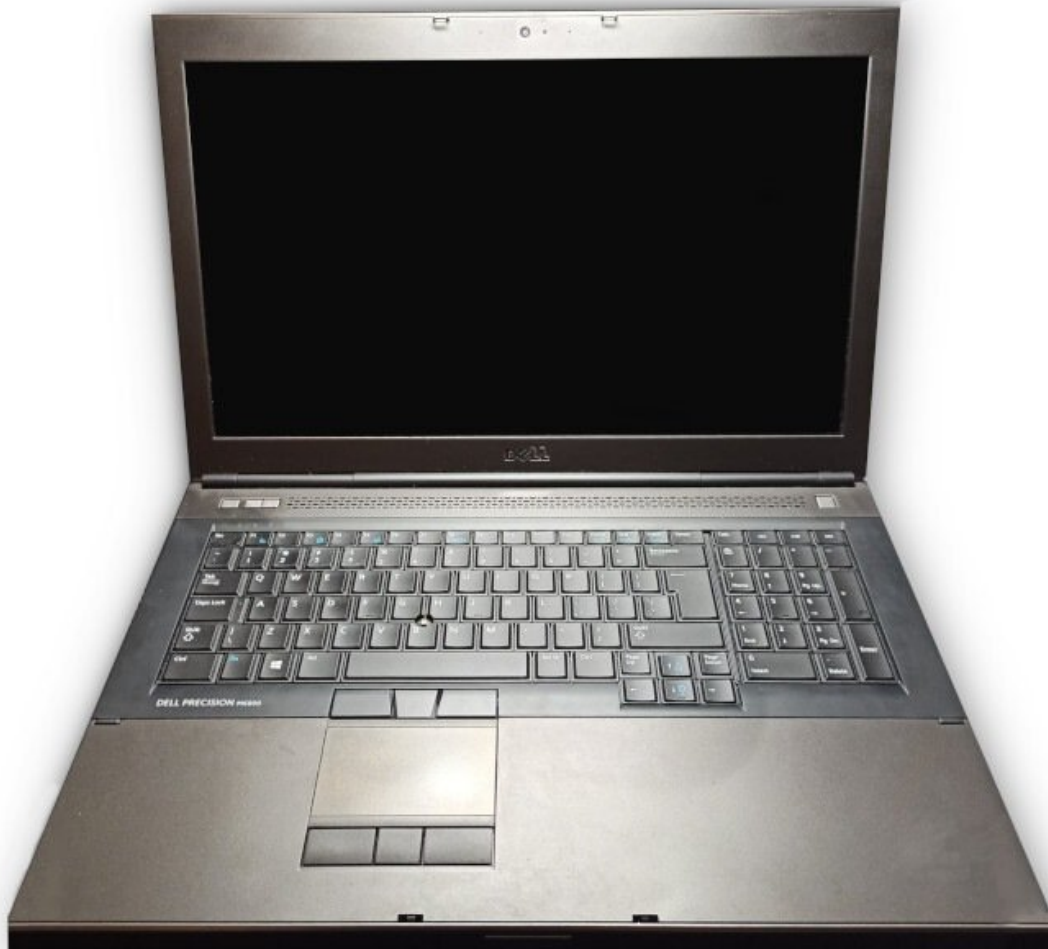

 **TOOLS:**



- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Dell Precision M6800



- Replacing Dell Precision M6800's keyboard

Step 2

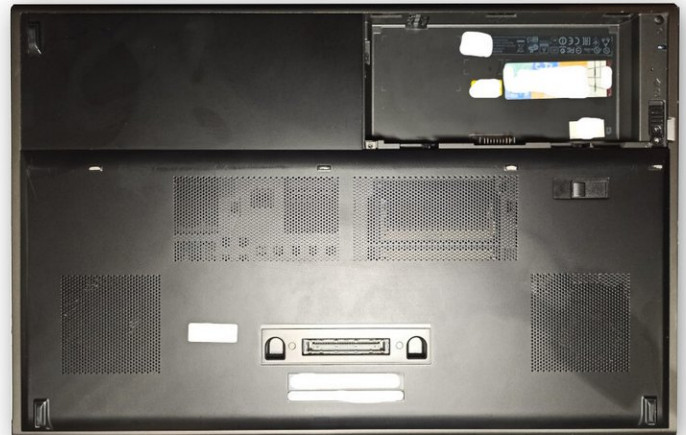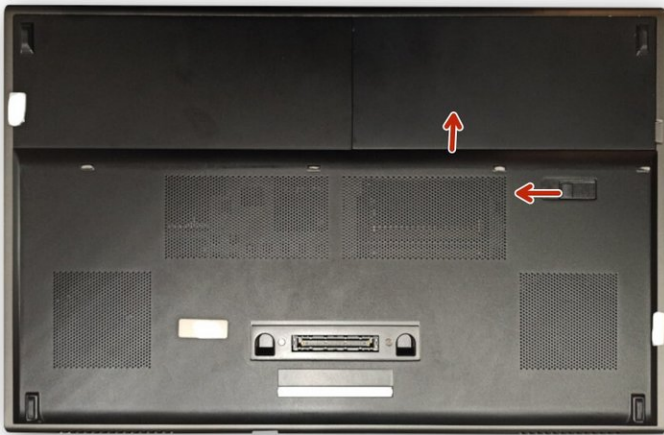

- Before any repair, you should remove battery

Step 3



- Pry and remove the frame around keyboard (it's a bit lighter than rest of casing).

Step 4



- Unscrew 4 fastening screws which are at bottom of keyboard


Step 5



- Pry out four hooks which are on the sides of keyboard (two per one site)

! Be carefull to not break of hooks - use constant force and do it slowly



Step 6

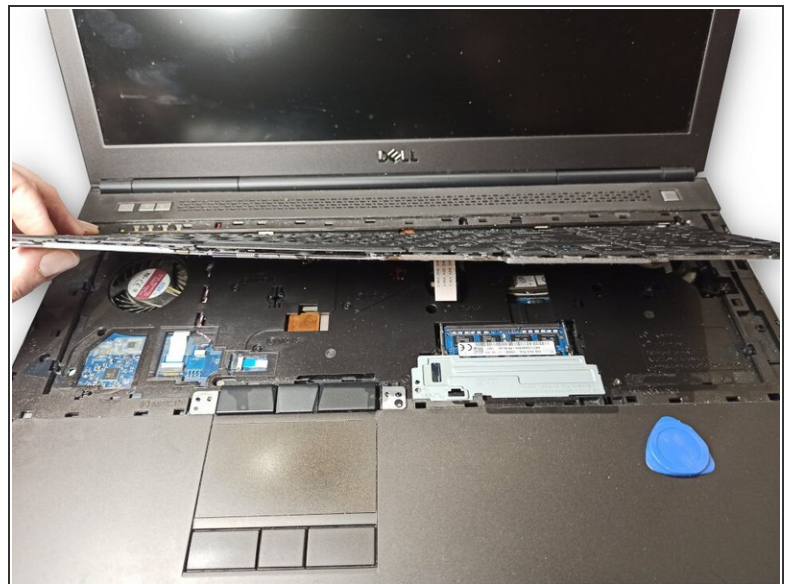

- Pick up a little keyboard and eject it. Than pick up harder but DO NOT take it out

! DO NOT take keyboard out, it is connect to the motherboard and you must unhook it in next step

Step 7

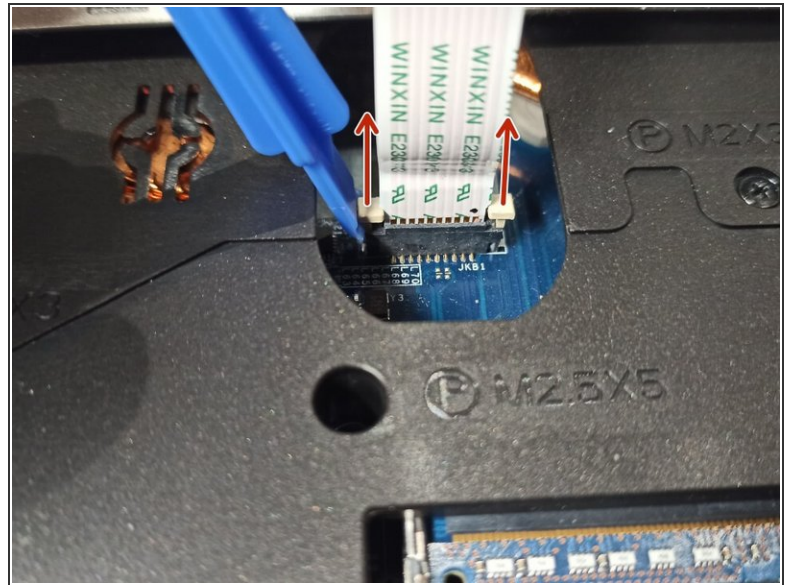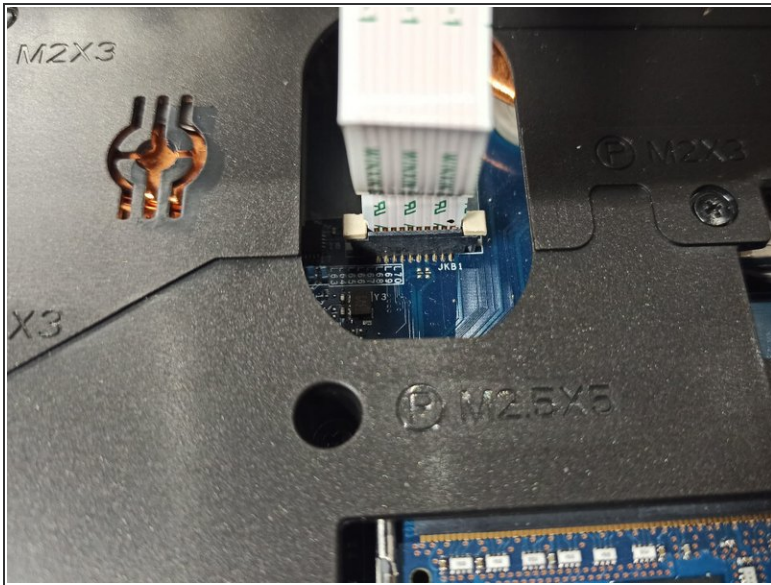

- Pry up the white part of connector (constant for both sides) and eject connecting flex

To reassemble your device, follow these instructions in reverse order.