



Removing Creative Zen Vision W Back Cover

This guide will show you how to remove the back cover of your device.

Written By: Gabriele Pregadio



INTRODUCTION

This guide will show you how to remove the back cover of your device.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Flashlight](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery Removal



- Push the black button and slide the battery casing to the left simultaneously, until the battery is completely separated from the device.

Step 2 — Back Cover




- Remove the 2 screws (3.5 mm) on the Compact Flash insert, located on the left hand side, with a Phillips #000 screwdriver.

Step 3



- Remove the 5 screws (5.5 mm), circled in red, using a Phillips #0. Use a flashlight if necessary.
 - Peel off the sticker that says "Creative warranty void if broken" and remove the screw (5.5 mm) underneath with a Phillips #0.
- ⚠ Be careful, some of the screws are difficult to see and can be easily stripped.

Step 4

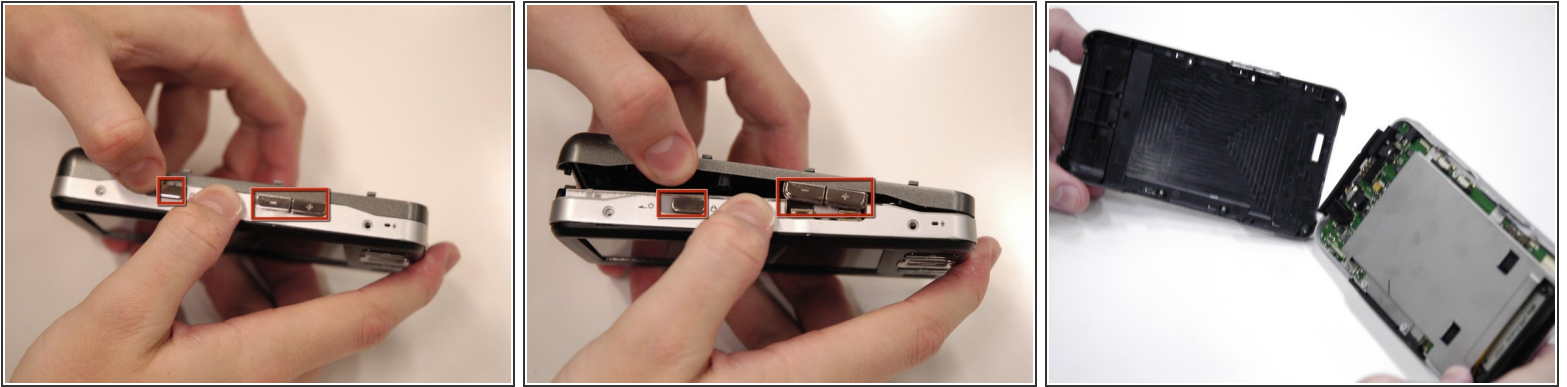

- Carefully pull the back cover off of the rest of the device.
- The volume control buttons and power slider may fall off when removing the cover, do not lose these small pieces.
- The USB input cover on the bottom of the device may also fall off.

To reassemble your device, follow these instructions in reverse order.