



Alienware Area-51m Battery Replacement

A step by step guide explaining how to replace the battery in an Alienware Area-51m gaming laptop.

Written By: yupeng ge




INTRODUCTION

This guide will teach you how to replace the battery on your Alienware Area-51m. However, this guide is only for the person who have strong hands-on ability. If you think you cannot handle this work please find professional repair company. We are not responsible for any mistake or damage when you try to repair your computer.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

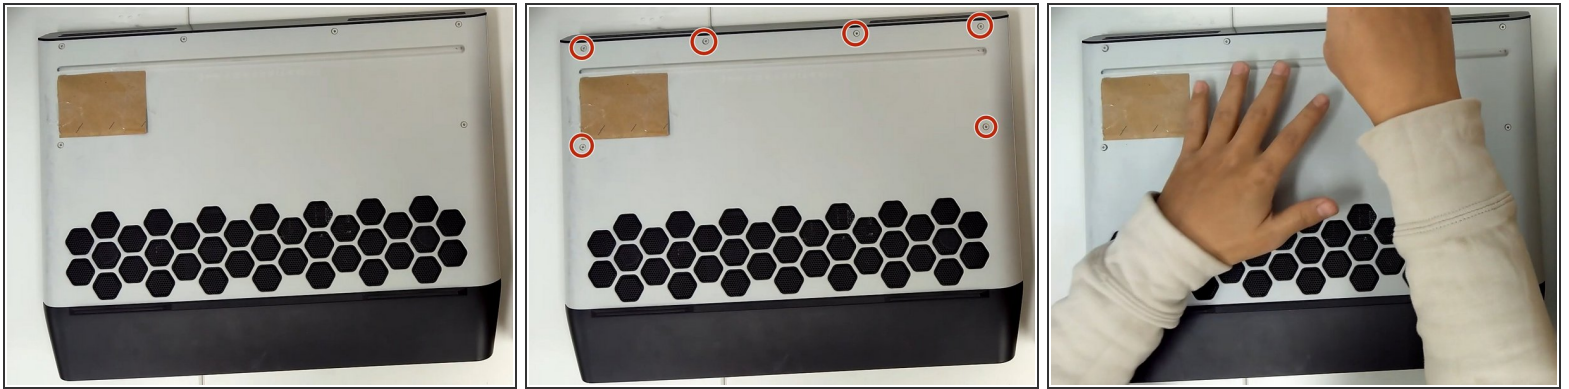

- Turn off the laptop and remove all the cables connected to your laptop.
- Place the back of the laptop up.
- Remove the six 8mm screws from the back cover using a Phillips #0 screwdriver.

Step 2

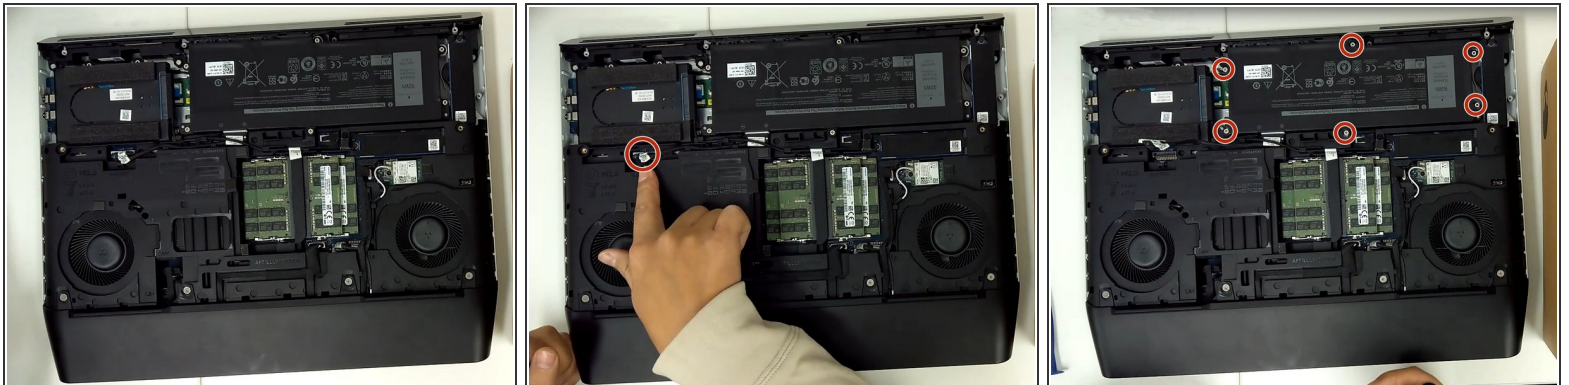


- Remove the battery cable from the motherboard.
- Remove the six 5 mm screws holding down the battery using a Phillips #0 screwdriver.
- Insert translation here

Step 3



- Lift the battery out of the case.
- Insert translation here

Step 4

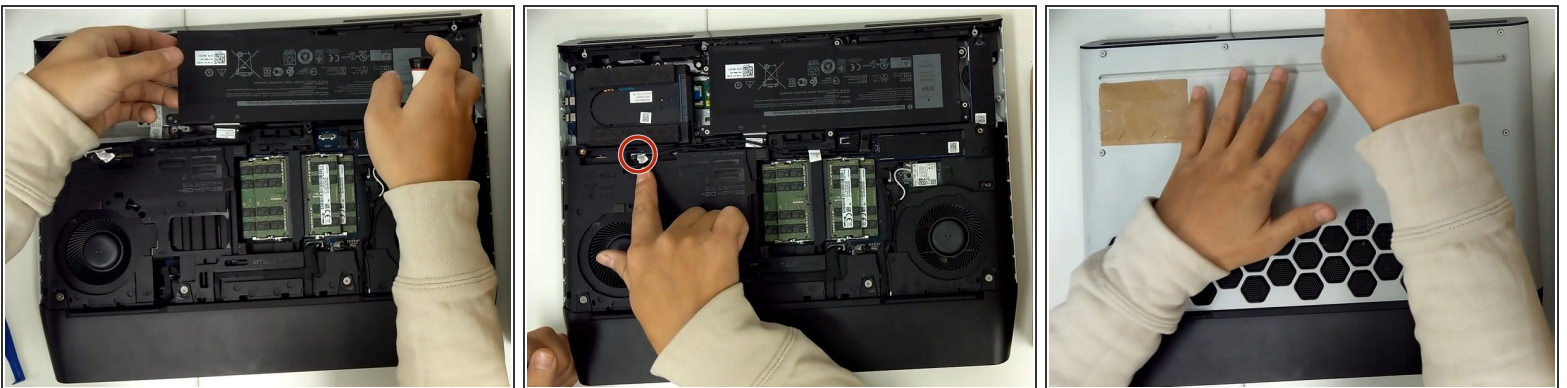

- Put the new battery back and connect the battery cable to the motherboard.
- Replace the six 5mm screws using a Phillips #0 screwdriver.

When reassembling your device, follow the instructions in reverse order.