




# Dell Latitude E6540 RAM Replacement

A guide on how to replace the memory chips (RAM) on this DELL computer.

Written By: Hezekiah Brown


## Step 1 — Remove battery and base cover



 Shut down your computer. Disconnect all power sources before opening the computer cover or panels.

- Remove the battery and base cover from the computer.

## Step 2 — Open clips to put in new memory chip

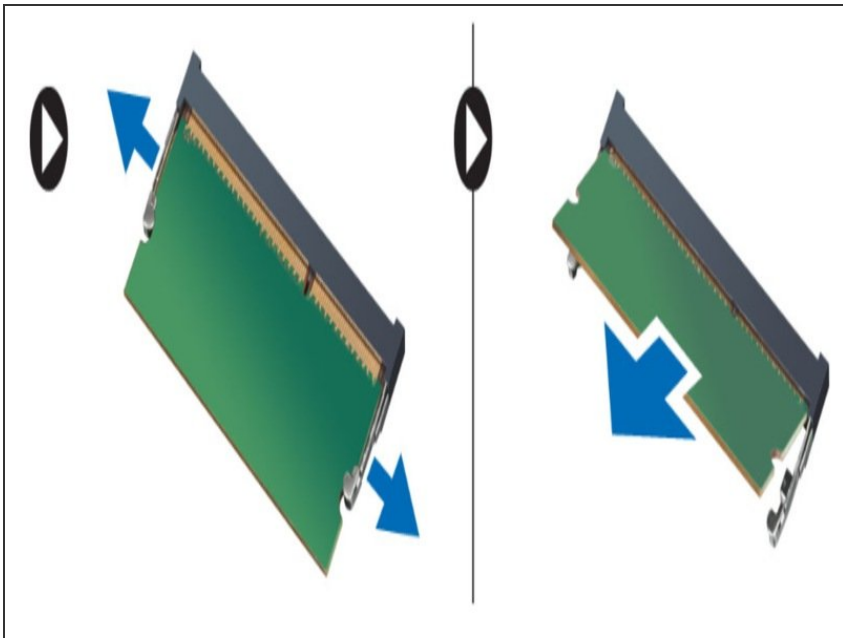

- Open up the clips away from the memory chip until it pops up out of its slot. Take out the memory clip from the system board's connector.

### Step 3 — Put in new memory chip



- Put the new memory chip into the memory chip's socket.

### Step 4 — Put back the battery and base cover



- Put the battery and base cover back on the computer.

To reassemble your device, follow these instructions in reverse order.