



Disassembling BlackBerry 8820 Outer Casing

Step by step guide to disassemble and replace the outer casing of the BlackBerry 8820.

Written By: ryan



INTRODUCTION

The outer casing must be removed to replace any internal component of the BlackBerry 8820.

To remove the outer casing of the BlackBerry 8820, you must have a 1/16 inch diameter torx screwdriver ready as well as a plastic removing tool.

TOOLS:

- [64 Bit Driver Kit](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Disassembling BlackBerry 8820 Outer Casing




- Remove the battery cover by applying pressure and sliding down the silver square on the back of the phone.

Step 2



- Remove the battery by prying under it with your finger or the plastic opening tool.
- Remove the four small 3/8" long screws using a 1/16" diameter torx screwdriver.

Step 3

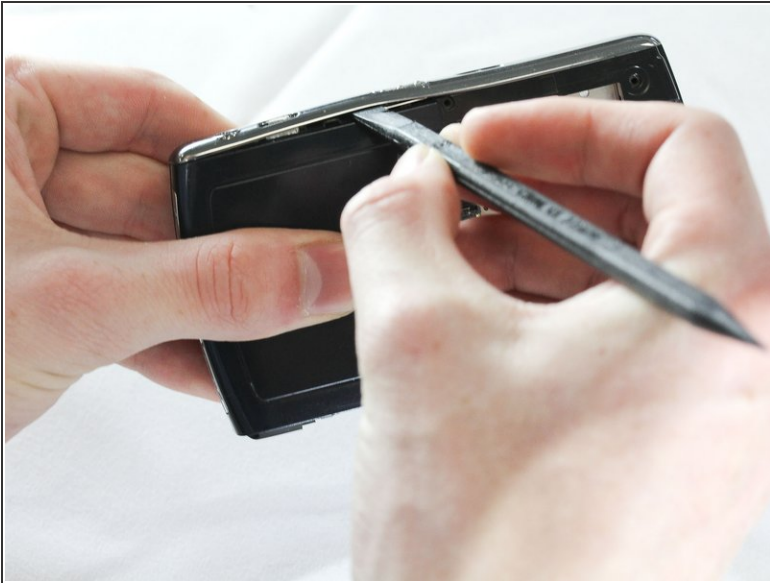

- Use a nylon spudger to carefully remove the two side bars of plastic.

Step 4



- Use a nylon spudger to carefully pry the back casing off.
- ⓘ There are two small clamps on each edge that need to be unhooked before the casing will come off.

Step 5



- Pry off the front casing.
- ⚠ Be aware of sensors and other sensitive areas of the newly exposed electronics.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-01 02:48:21 AM.