




# Creative ZiiO 7" Left Speaker Replacement

In this guide, you will be able to uninstall the broken left speaker of the Creative ZiiO 7" and install a new, functioning speaker.


Written By: Kyle

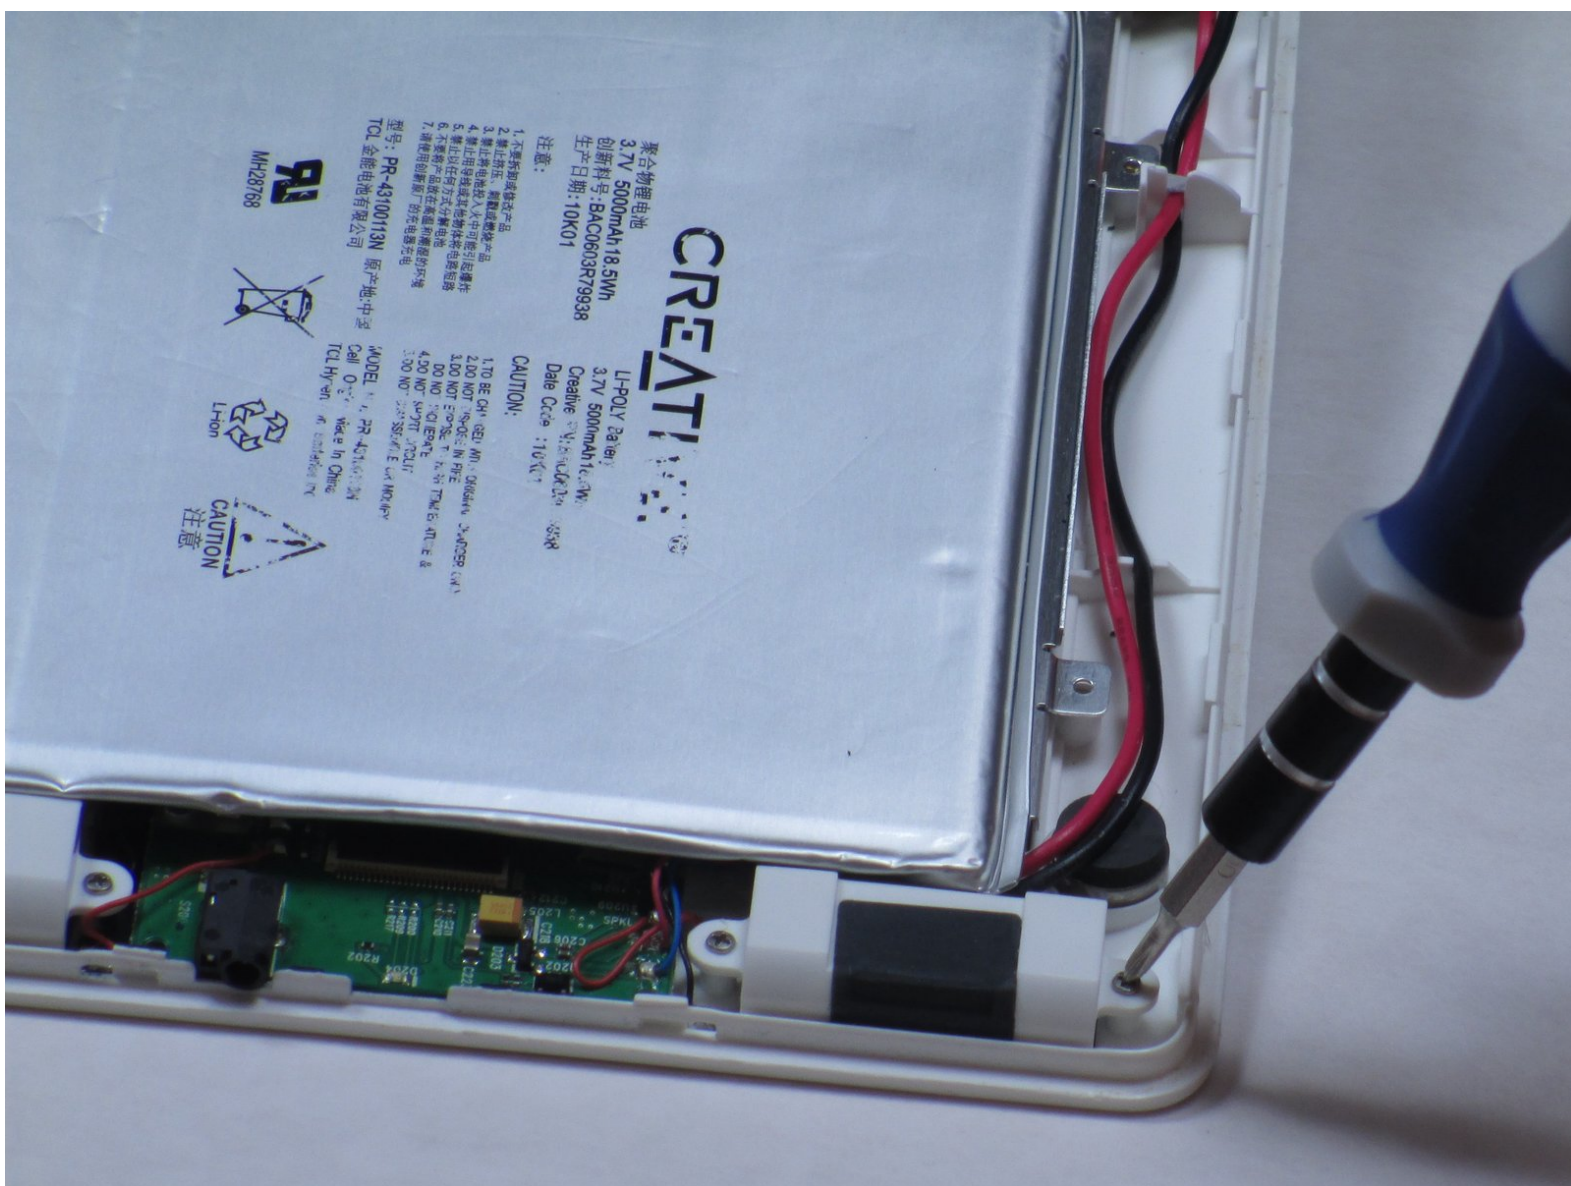

 **TOOLS:**


- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Panel

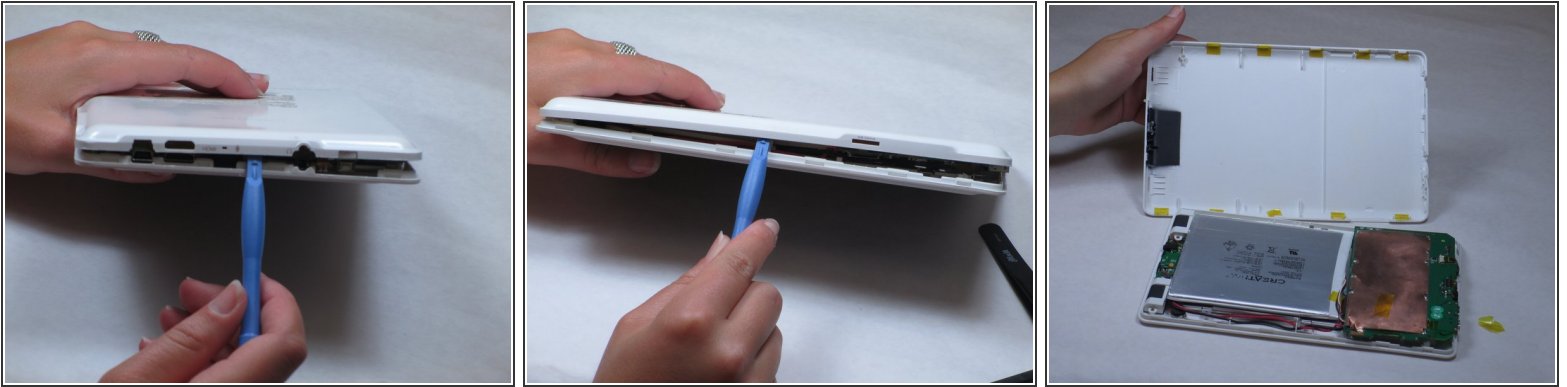


- Remove the back panel by using the plastic opening tool to carefully pry around the panel's edges.  
⚠ The volume control button and the top power button may fall out during this step.

## Step 2 — Left Speaker

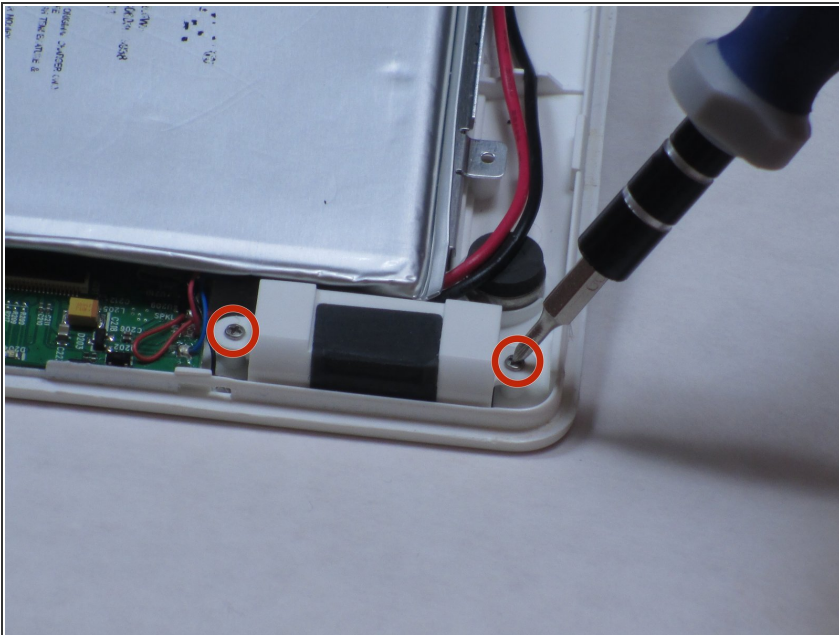

- The left speaker is directly below the battery and on the side with the main red and black wires.
- Unscrew the two 4mm Philips #00 screws using a Philips Screwdriver.

## Step 3

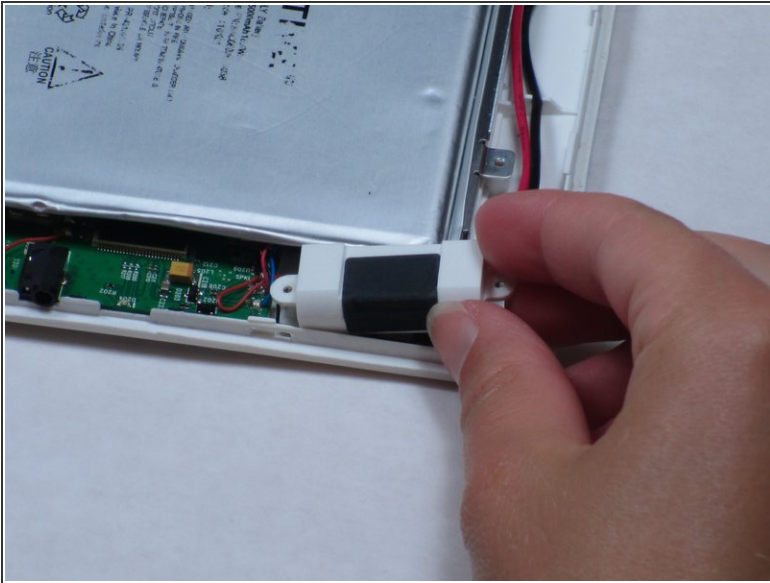

- Once the screws are removed, discard the broken speaker.
- Replace the broken speaker with new left speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 05:48:57 AM.