




# Zune Flash 2nd Generation Back Cover Replacement

Written By: ybahman

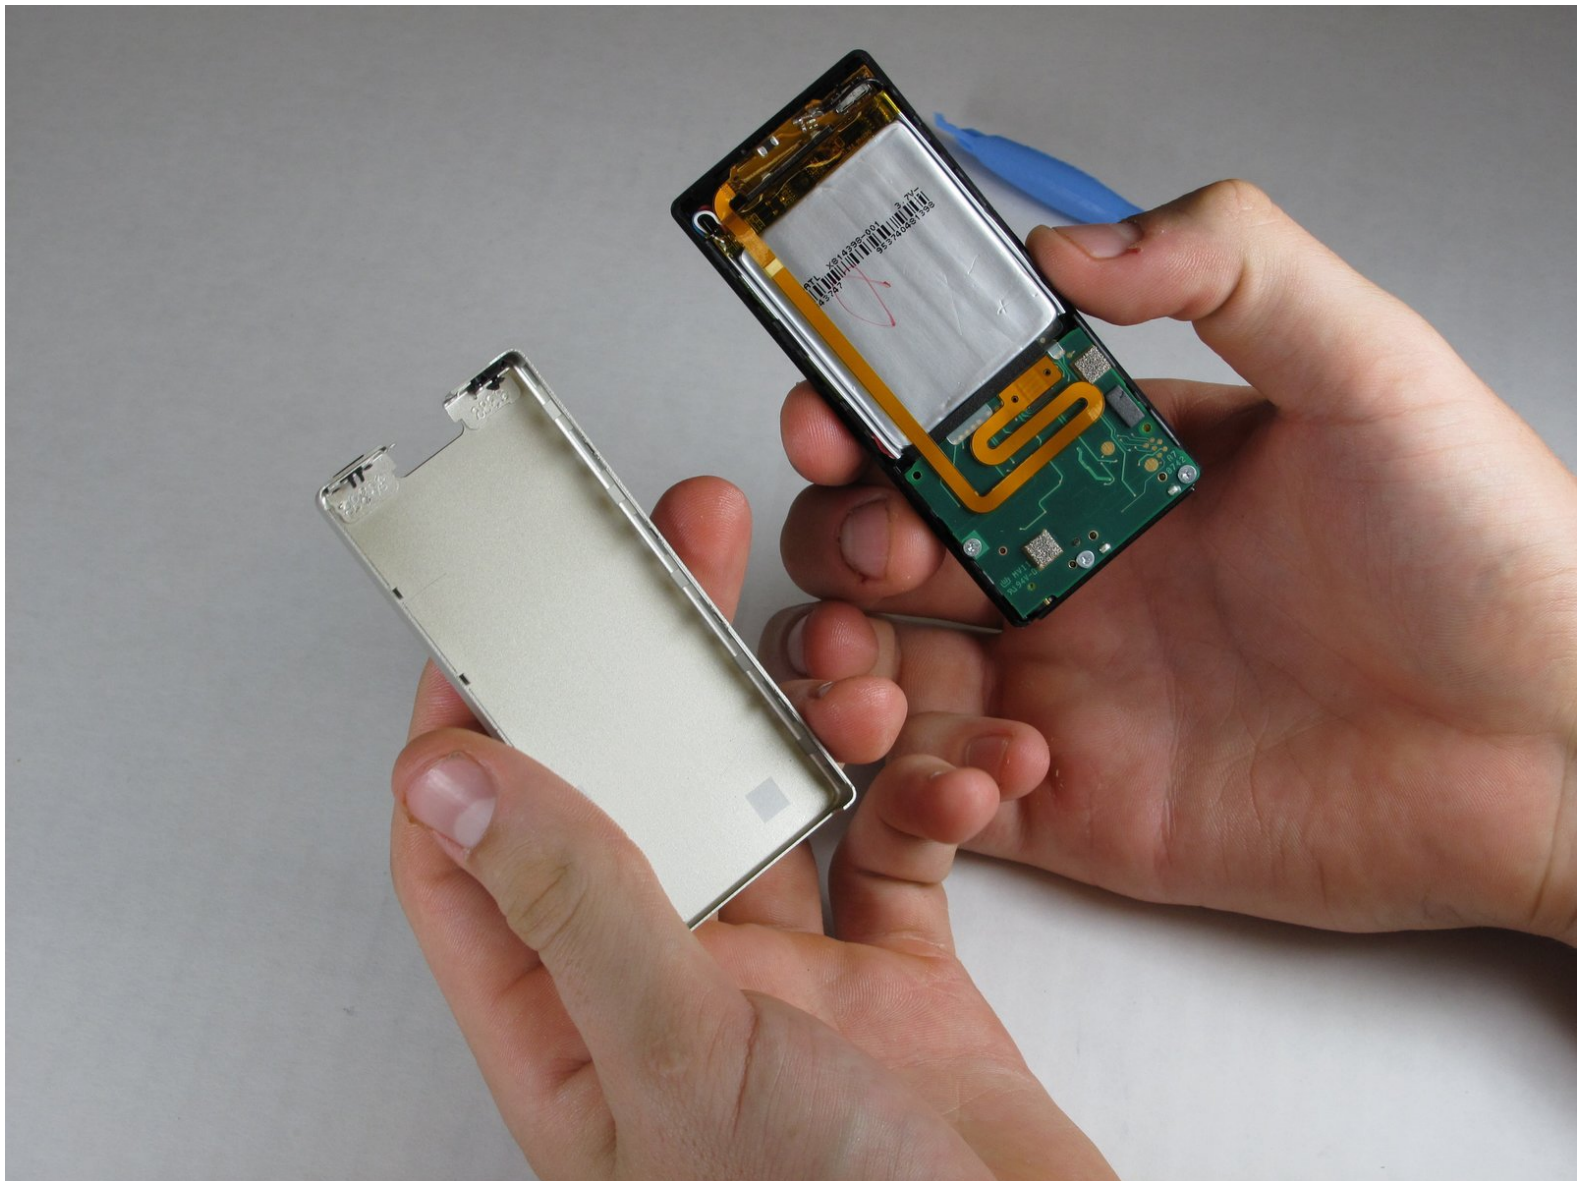

---

## INTRODUCTION

This is a guide to replacing the Back Cover on the Zune Flash 2nd Generation.

---

### TOOLS:



- [iFixit Opening Tools](#) (1)
  - [Tri-wing Screwdriver](#) (1)
-

## Step 1 — Back Cover




- Prior to disassembly, verify the hold switch is engaged to ensure the device will not turn on during the procedure.
  - If the device turns on while it is being disassembled it could cause irreversible damage to the device.
- i** PICS MAKE NO SENSE.

## Step 2

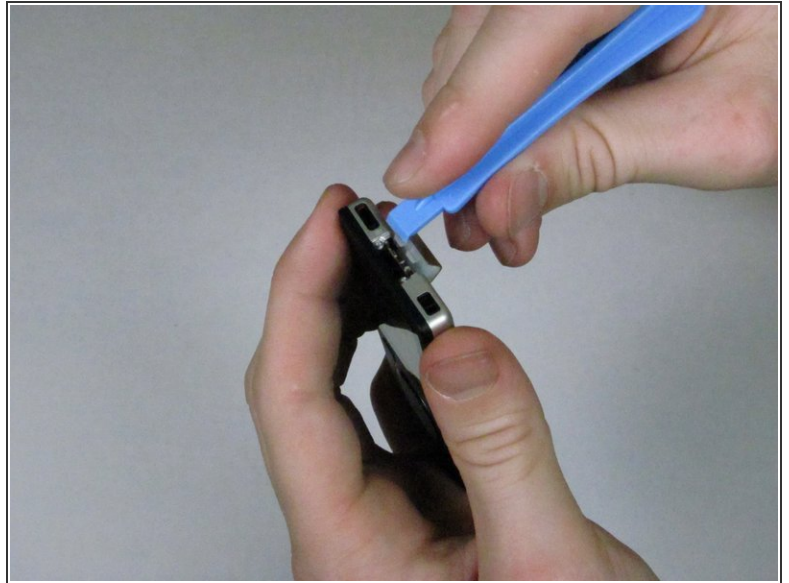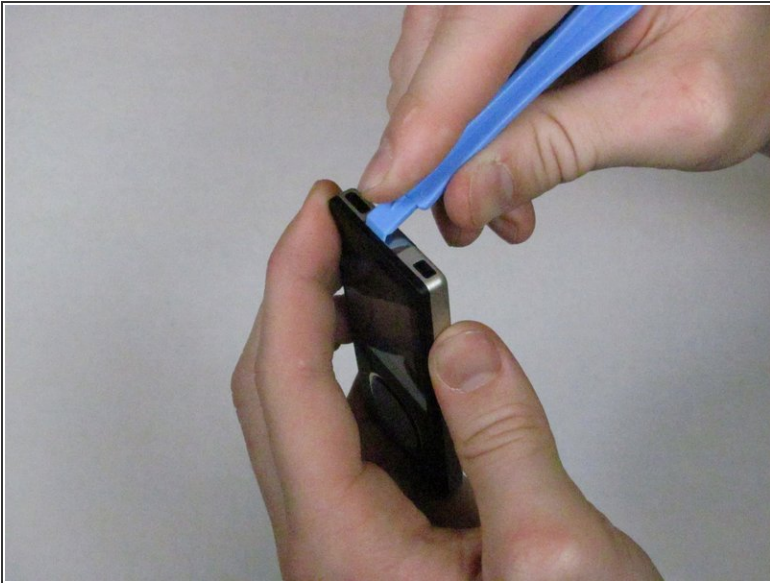


- Remove the top metal clip by inserting a Zune opening tool in between the faceplate and back cover and pulling gently back as shown in the images.
- You should hear a 'click' as the clip detaches from the device.

## Step 3

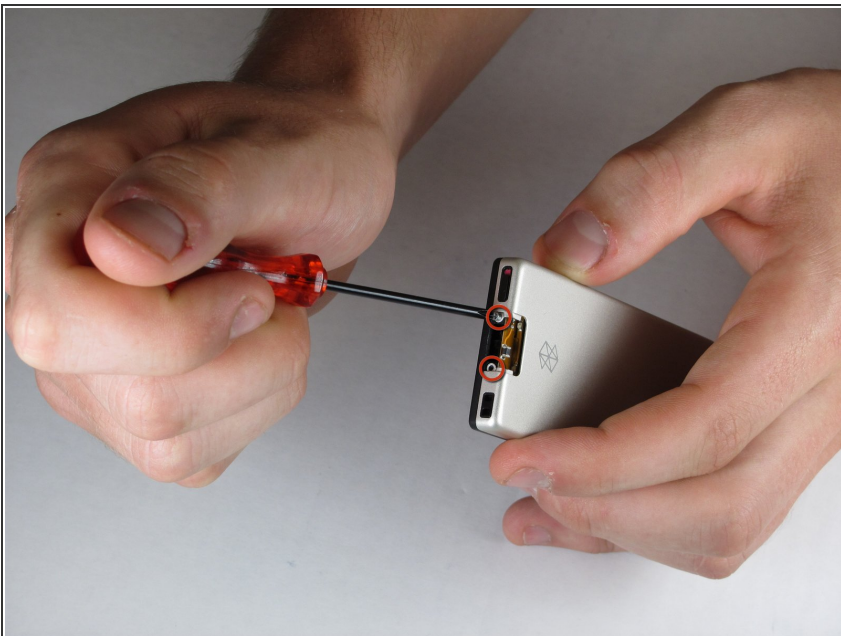

- Remove the two screws shown using a small Tri-Wing screwdriver.
- ⓘ You will need to use a very small Tri-Wing screwdriver to ensure that you do not strip the screws.

## Step 4

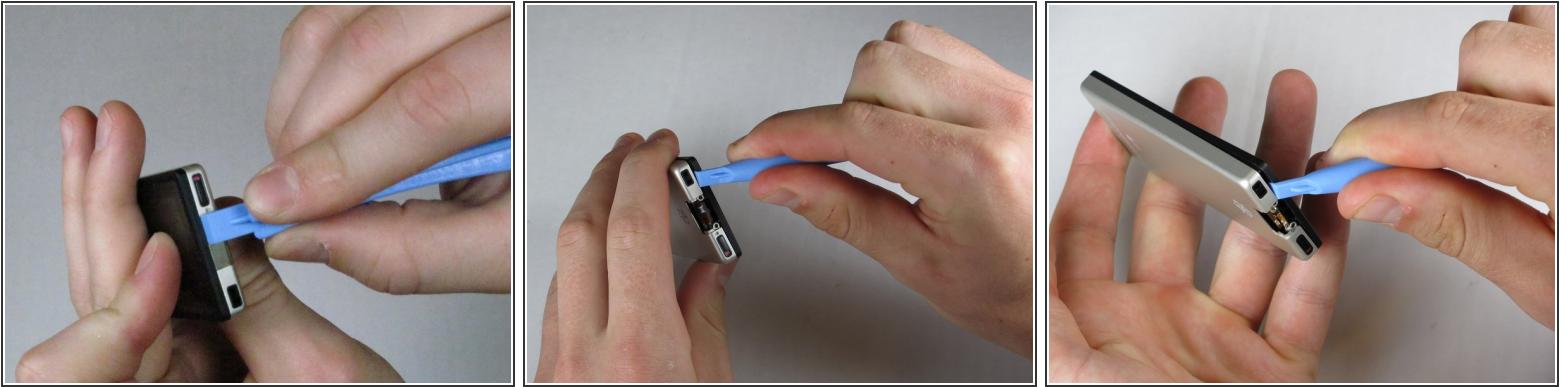

- Insert the Zune opening tool between the faceplate and the back cover, starting from the top and slowly work your way around the device.

## Step 5



- Work your way around the Zune until the back cover comes free. Remove the back plate and set it aside.

To reassemble your device, follow these instructions in reverse order.