



# Toshiba Satellite A505 series Battery Replacement

How to remove the battery for replacement or further system disassembly.

Written By: Jerry F Nerviano



## **INTRODUCTION**

After unplugging the external power supply, this is the **FIRST** step in any laptop disassembly where the battery is accessible from the outside.

## Step 1 — Battery



- Turn the system over and locate the locking switches near the battery.
  - This switch is not spring-loaded. Slide it away from the battery to unlock.
  - This switch IS spring-loaded and will have to be held to release the battery. It slides in the opposite direction of the first switch.
- ⓘ The example here shows an after-market high-capacity battery. The procedure is the same, regardless.

Follow this procedure in reverse to install the (new) battery. Note that the second switch will engage automatically upon install. The first switch will not and must be locked manually once the battery is in place.

This document was last generated on 2017-06-19 05:21:15 PM.