



Nintendo WaveBird Wireless Controller Batteries Replacement

Remove the batteries from the Nintendo WaveBird Wireless Controller.

Written By: Travis Taylor



INTRODUCTION

This guide will show you how to remove the batteries that power the device. If the device [won't turn on](#), try replacing the batteries.

Step 1 — Batteries



- Pull down on the battery cover release lever and pull back to remove the cover.

Step 2



- Take out each battery then put the covering back on.

To reassemble your device, follow these instructions in reverse order.

