



Nintendo WaveBird Wireless Controller Front Panel Replacement

Remove the front panel of the Nintendo WaveBird Wireless Controller.

Written By: JT Gryder



INTRODUCTION

This guide will help you remove the front panel of the controller. It is a prerequisite guide only.



TOOLS:

- [Y1 Tri-point Screwdriver](#) (1)
-

Step 1 — Batteries



- Pull down on the battery cover release lever and pull back to remove the cover.

Step 2



- Take out each battery then put the covering back on.

Step 3 — Front Panel



- Remove the eight 9-mm Tri-Wing screws on the back panel with the Tri-wing Y1 screwdriver.
- ⓘ During reassembly, firmly hold the panels of the controller together while replacing screws so the panels don't separate.

Step 4



- After each screws has been removed carefully turn over the controller, and place on a flat surface.
- Slowly separate the top panel from the bottom panel.
- ☞ The buttons are loose and may fall off of the motherboard.
- Once seperated set aside the top panel.
- ⓘ During reassembly, make sure the front panel lines up with the buttons so they slide back into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 03:08:42 PM.