



Audiovox CR8030iE5 Top-Casing Replacement

This guide will show you how to remove the top-casing of your Audiovox.

Written By: Savannah Smith




INTRODUCTION

The purpose of this guide is to show you how to open up your Audiovox. Once inside, you will be able to check out all of the different internal components, and, if needed, begin repair!

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top-Casing

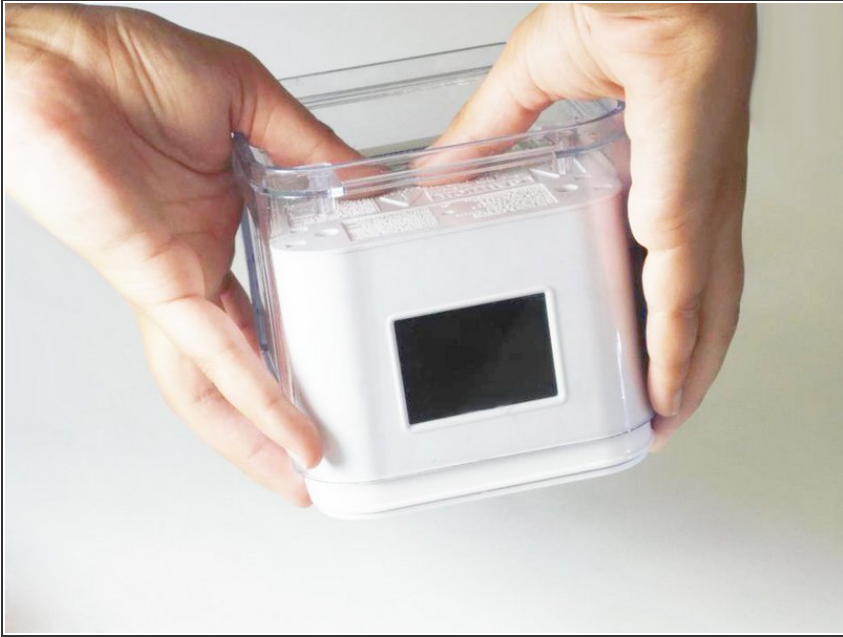

- ❗ Before opening your Audiovox, be sure to turn it upside down.
- Begin by applying constant pressure to the base of your Audiovox while holding the plastic casing. Do this until the plastic casing is completely removed.

Step 2

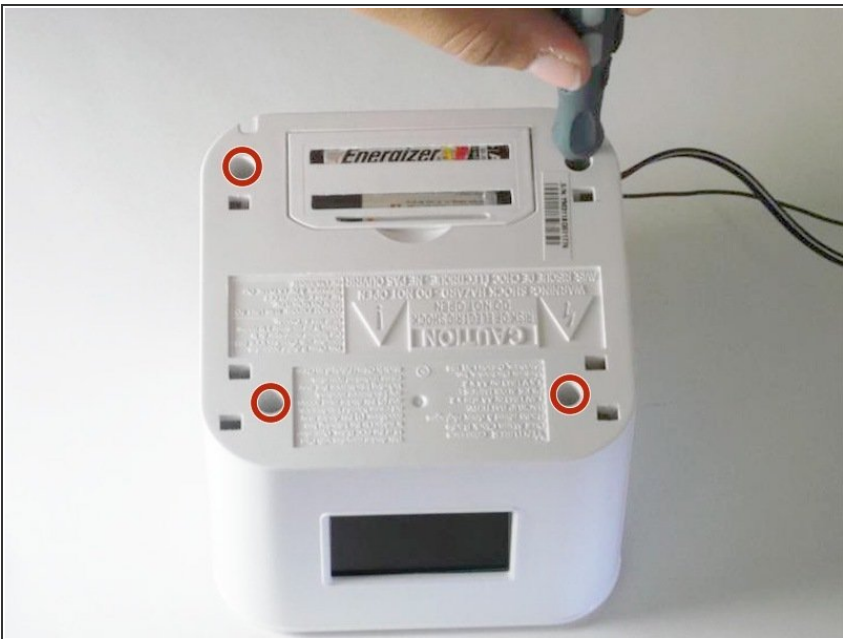

- Insert a Phillips #1 screwdriver into the hole at the corner of the base and remove the screw.
- Repeat this step for the remaining other three screws.

Step 3




- **i** Make sure to orient the Audiovox right side up.
- Gently pull off the top panel of the Audiovox, as shown in the picture, to ensure that the panel detaches properly.

Step 4



- Using a Phillips #1 screwdriver, remove the screw found in the middle of the board.

Step 5

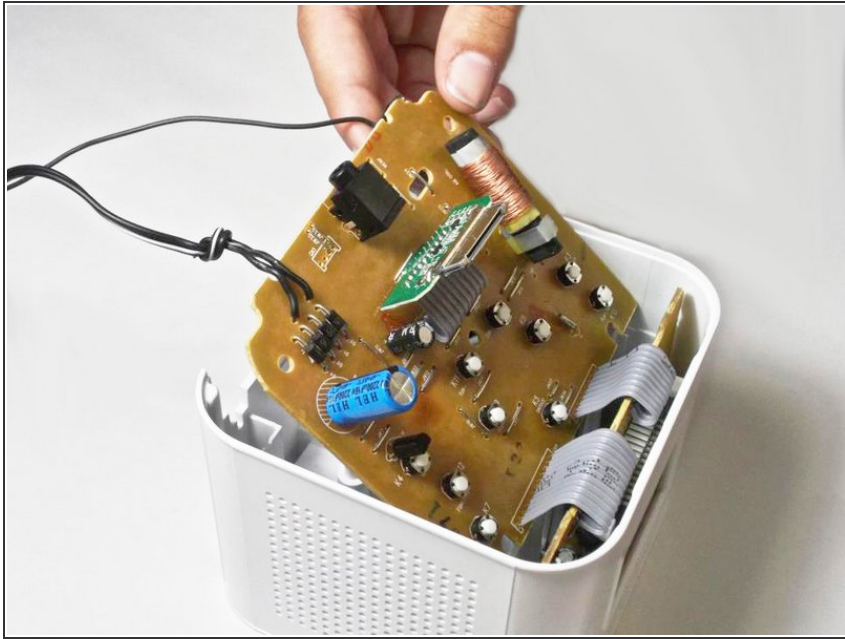

- Gently, as to not disconnect any of the attached wires, pull back the board to view the soldered connections (on the other side) as well as the internal components.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 10:22:24 PM.