



iRobot Braava Jet M6 Battery Replacement

Removal of the Braava Jet M6 battery

Written By: Mathieu Mongeau



INTRODUCTION

If your iRobot Braava Jet 240 battery does not charge when in the charging cradle, your battery might need to be replaced. Over time, recharging causes the battery to lose the ability to hold a charge, meaning it will need to be replaced.



TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)



PARTS:

- [iRobot Braava M6 Battery](#) (1)

Step 1 — Battery



- Flip the robot over

Step 2



- Unscrew both Phillips head screws
 - ⓘ They can not be completely taken out

Step 3



- Pinch one of the screws and lift
- Alternatively, flip the robot over and let it slide out

To reassemble your device, follow these instructions in reverse order.