



# Disassembling Canon PowerShot S80 Outer Casing

Replace the Outer Casing in the Canon PowerShot S80

Written By: BrettH



---

## INTRODUCTION

This guide will allow you to remove the outer casing of the Canon PowerShot S80.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Disassembling Canon PowerShot S80 Outer Casing



- Remove the knot on the wrist lanyard.
- Remove the battery and memory card.




## Step 2




- Remove all screws from the sides of the outer casing.
- Begin removing the screws on the bottom of the outer casing.
- Remove the rest of the screws from the outer casing.

## Step 3

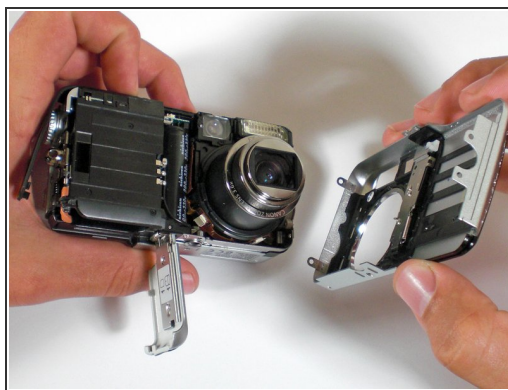

- Gently pull the front cover off the camera.

## Step 4

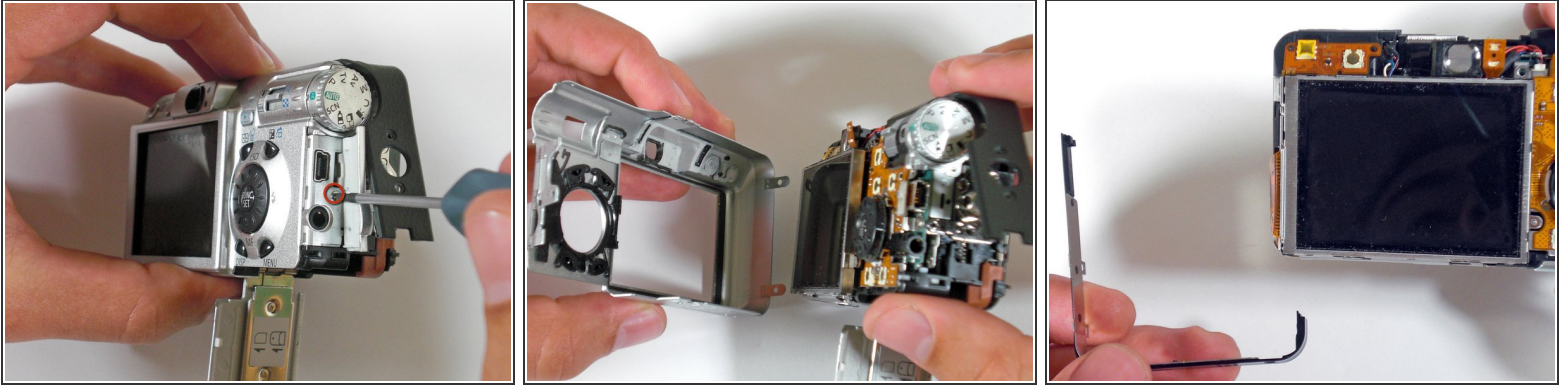

- Open the "A/V Out Digital" cover. Remove the screw inside.
- Gently pull off the back casing.
- Remove the black "L" shaped piece of metal.

To reassemble your device, follow these instructions in reverse order.