



Disassembling Canon PowerShot S80 Outer Casing

Replace the Outer Casing in the Canon PowerShot S80

Written By: BrettH



INTRODUCTION

This guide will allow you to remove the outer casing of the Canon PowerShot S80.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Disassembling Canon PowerShot S80 Outer Casing




- Remove the knot on the wrist lanyard.
- Remove the battery and memory card.

Step 2






- Remove all screws from sides of outer casing.
- Begin removing the screws on the bottom of the outer casing.
- Remove the rest of the screws from the outer casing.

Step 3

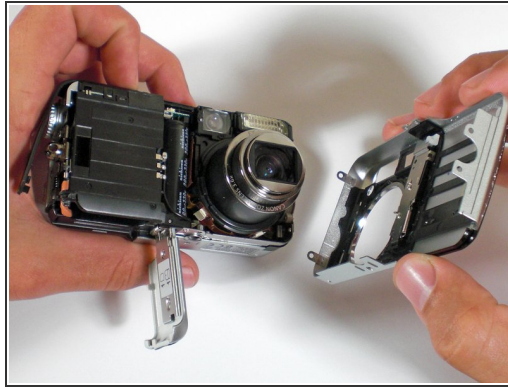

- Gently pull the front cover off the camera.

Step 4

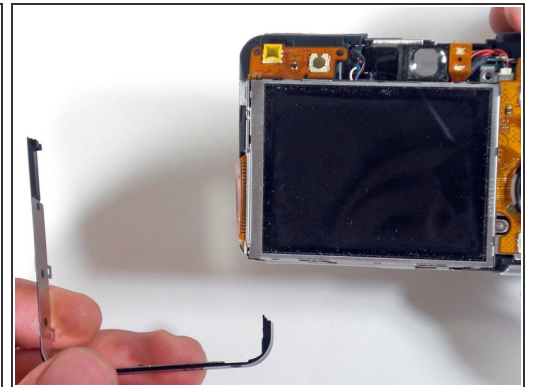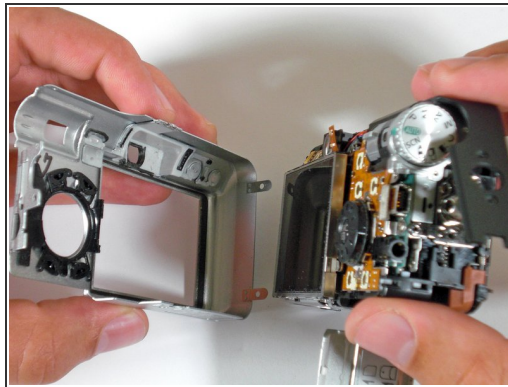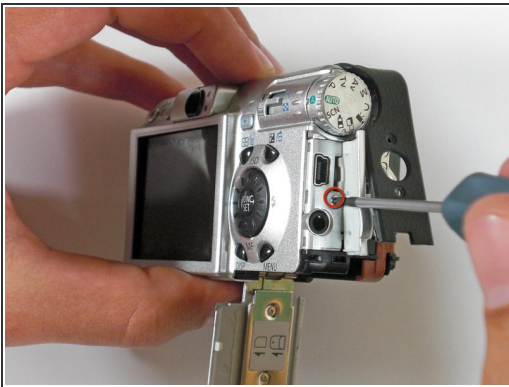

- Open the "A/V Out Digital" cover slide, and remove the screw inside.
- Gently pull off the back casing.
- Remove the black "L" shaped piece of metal.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 08:09:19 PM.