




# Logitech Webcam Pro 9000 Snapshot Button Replacement

This guide will show you how to install a new snapshot button chip after removing the old one.

Written By: Cory Davis

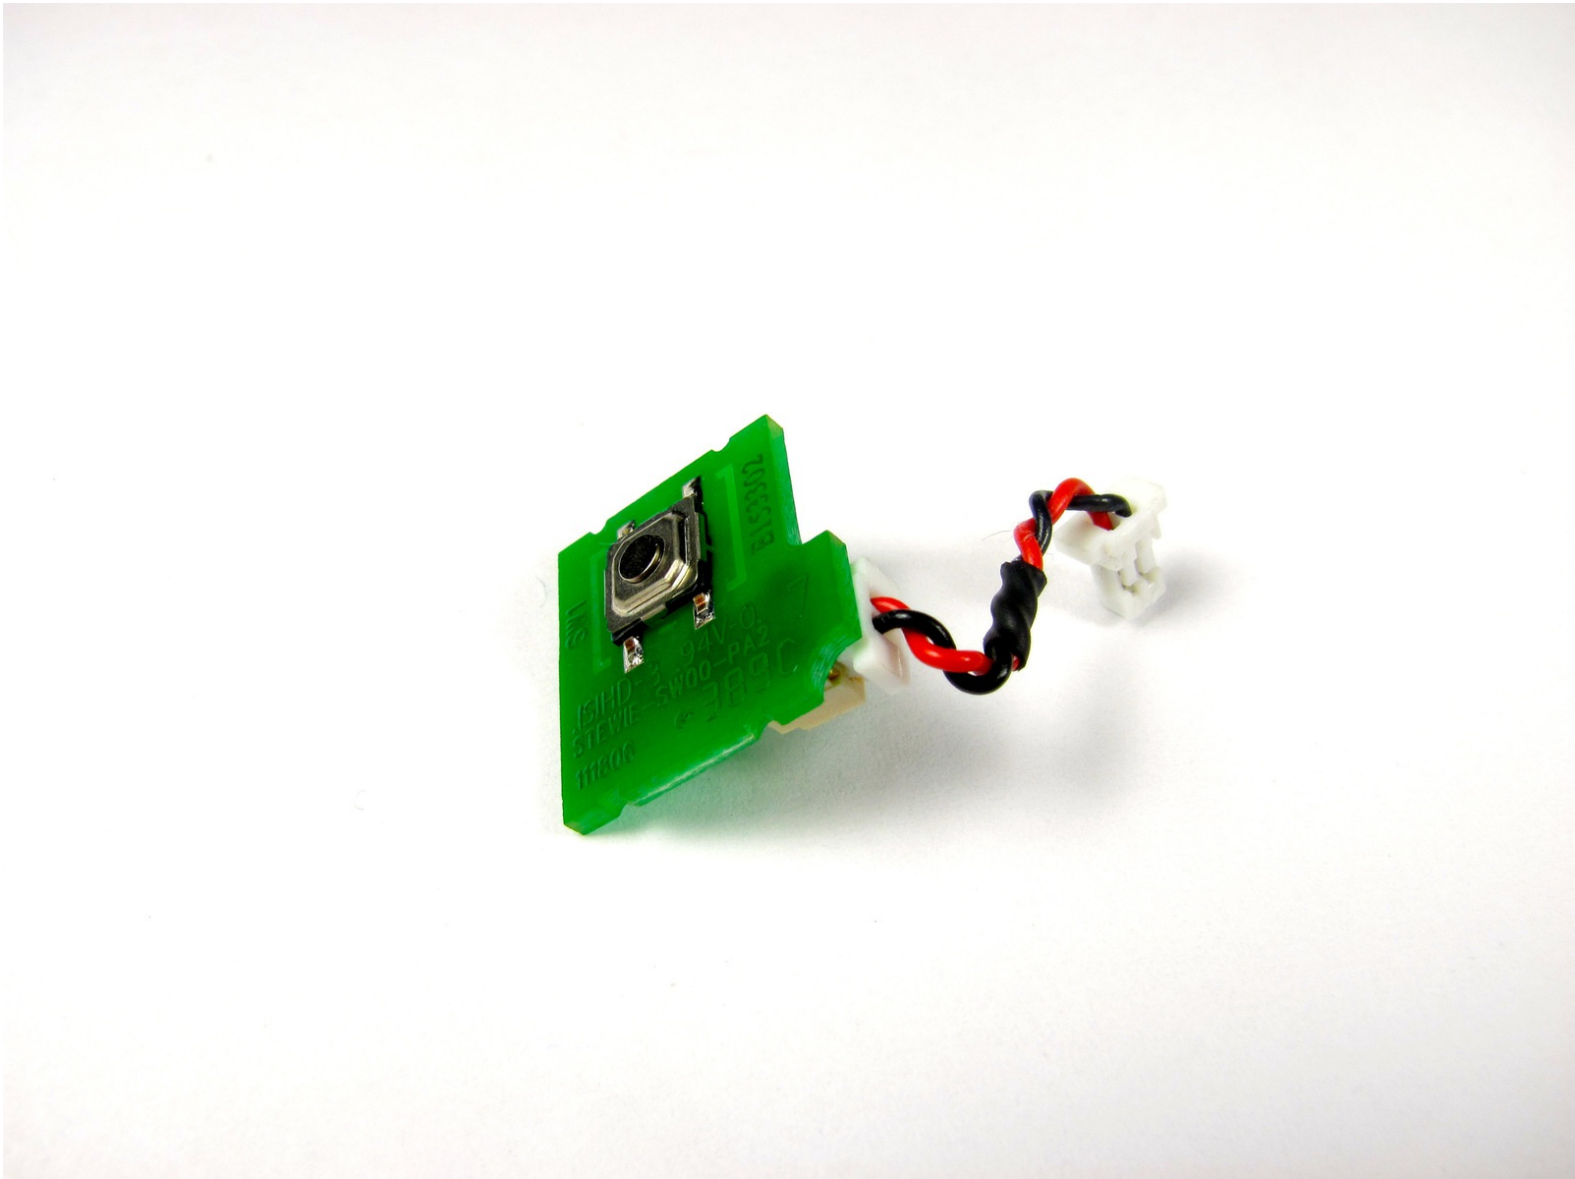

## INTRODUCTION


The button is to take snapshots and is actually a chip that is sending information to the motherboard to take a still shot of the camera view. If this connection is broken, you will need to replace it.

---

### TOOLS:

- [Tweezers](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Front and Back Cover


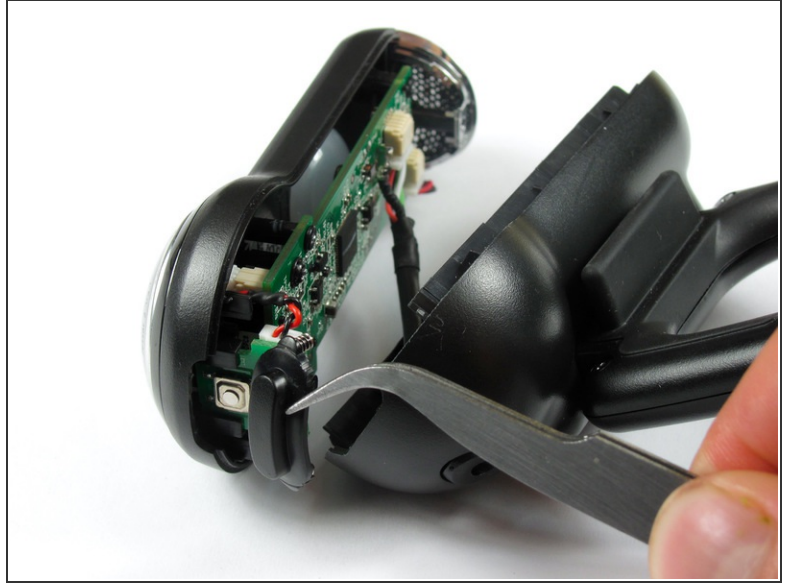


- Remove the two 8mm Phillips#0 screws on the back cover.

⚠ The motherboard is attaching the two covers together, so don't separate them entirely just yet.

ⓘ There is a button that loosens as the Phillips screws are removed. Don't be alarmed if it falls out.




## Step 2

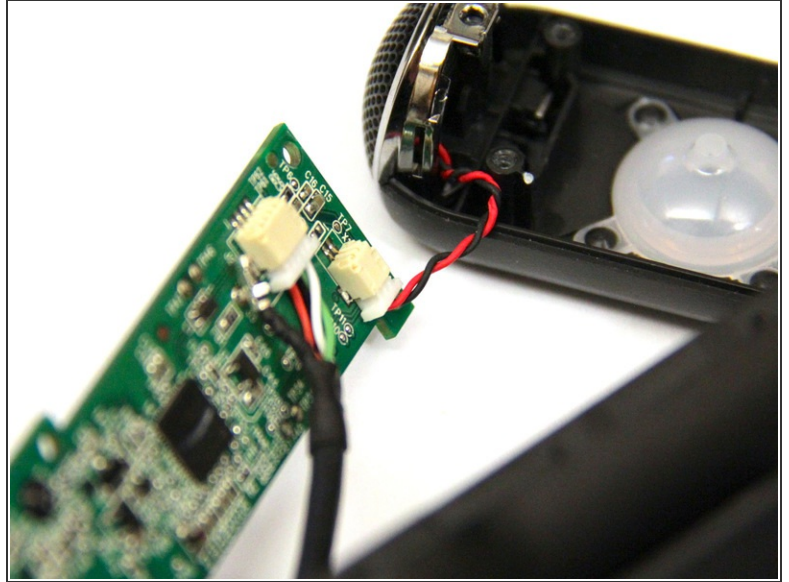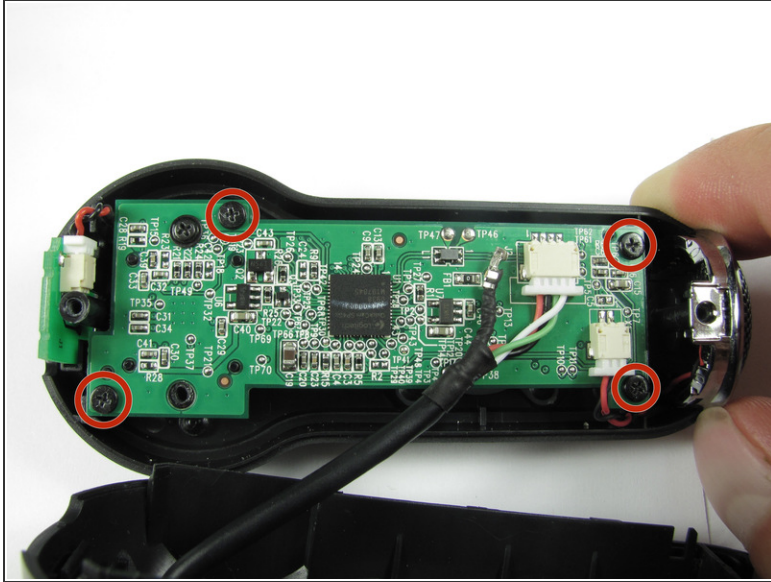

- Remove the four 6mm Phillips#0 screws connecting the motherboard and front cover.

**⚠ DO NOT** detach the wire connecting the motherboard to the front cover.

## Step 3 — Snapshot button

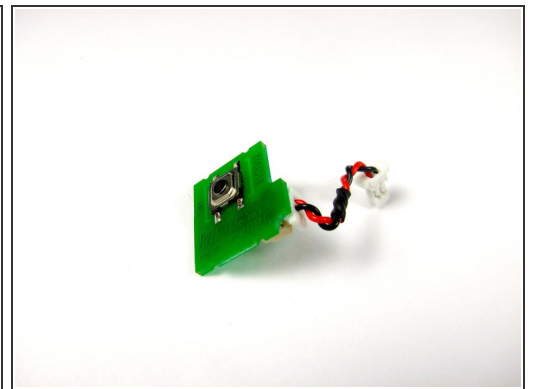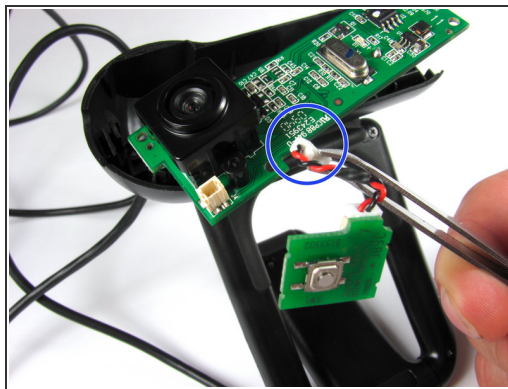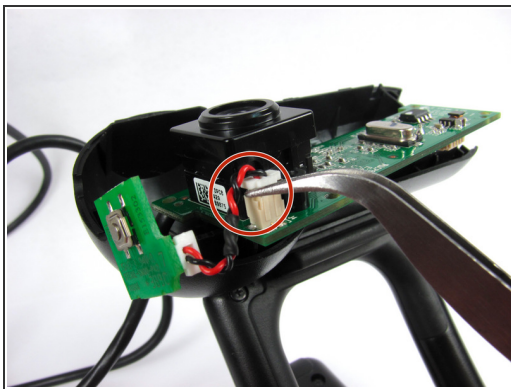

- Grasp the white connector attaching the button chip wire to the motherboard.
  - ☑ Grab between the tabs and the socket.
- Wiggle the connector back and forth to remove it from the connection box
- ⓘ Do not worry if you detach the red and black wire connection on the power button.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 07:38:35 AM.