



How to remove the Samsung LA40R81BD 40in LCD TV rear cover

This guide will show you how to easily and safely remove the rear cover of the TV to allow access to the PSU and main board.

Written By: Richdave



 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Rear Cover



⚠ Unplug power cable and all AV cables from rear of TV and carefully lay TV face down on a clean flat working surface ensuring that you don't damage the LCD screen.

- Using a Philips driver remove the 18 screws from the rear panel.
- Gently lift the rear cover off the TV. You may need to wiggle the cover a little however there are no clips holding the cover on so it should come off easily if you have fully unscrewed all 18 screws.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 02:29:32 AM.