



Removing the Samsung LA40R81BD 40in LCD TV Stand

If you are going to wall mount your LCD TV you first need to remove the stand

Written By: Richdave



 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Stand



- Place the TV face down on a clean flat surface with the stand hanging over one edge
- Remove the 4 screws securing the stand to the TV
- ⓘ Use a pair of tweezers to remove screws from their recessed holes to free up the stand (A small pickup magnet works well also, if available)
- Holding the TV so it does not slide off the work surface, pull the stand straight out of the TV

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 05:40:03 PM.