

## Removing the Dell Inspiron 1150 Hard Drive

This guide will show you how to remove the hard drive from your dell 1150 laptop

Written By: Richdave





• Phillips #1 Screwdriver (1)

## Step 1 — Hard Drive



- Place laptop upside down on a clean flat surface.
- Remove 2ea M2.5 x 5 mm screws.
- Pull the HDD from main body of the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-02 07:48:22 AM.